

## TOTAL Chef TCMO-07SS AZ

# Total Chef 0.7 Cu Ft Microwave Oven Instruction Manual

Model: TCMO-07SS AZ | Brand: TOTAL Chef

## 1. OVERVIEW

---

The Total Chef 0.7 Cu Ft Microwave Oven is a compact and efficient countertop appliance designed for convenient meal preparation. Featuring digital touch controls and pre-set functions, it simplifies reheating, defrosting, and cooking a variety of dishes. Its stainless steel design offers both style and durability, making it a suitable addition to any modern kitchen, especially in smaller spaces like RVs, dorms, or apartments.

Key features include:

- 0.7 Cu Ft capacity with digital touch controls.
- 10-inch turntable for even heating.
- 700 watts of power for energy-efficient operation.
- Multiple pre-set functions for common foods like popcorn, pizza, and beverages.
- 10 power levels for precise cooking control.
- Durable stainless steel construction.



Figure 1: Total Chef 0.7 Cu Ft Microwave Oven on a kitchen countertop.

## 2. SETUP

### 2.1 Unpacking

Carefully remove the microwave oven from its packaging. Inspect the unit for any signs of damage. Remove all packing materials, including any tape or protective film from the exterior and interior of the oven.

### 2.2 Placement

Place the microwave oven on a flat, stable, heat-resistant surface. Ensure there is adequate ventilation around the unit. Maintain a minimum of 4 inches (10 cm) of clear space on the top, sides, and rear of the oven for proper airflow.

### 2.3 Turntable Installation

Install the roller ring and glass turntable inside the microwave cavity. Ensure the turntable is seated correctly on the center support for stable rotation.

## 2 STEP SAFETY LOCK



Figure 2: Interior of the microwave with the glass turntable in place.

### 2.4 Power Connection

Plug the microwave oven into a grounded 3-prong electrical outlet. Do not use extension cords or adapters.

## 3. OPERATING INSTRUCTIONS

### 3.1 Control Panel

The microwave features a digital touch control panel for easy operation. The panel includes numerical buttons (0-9), function buttons, and a display screen.

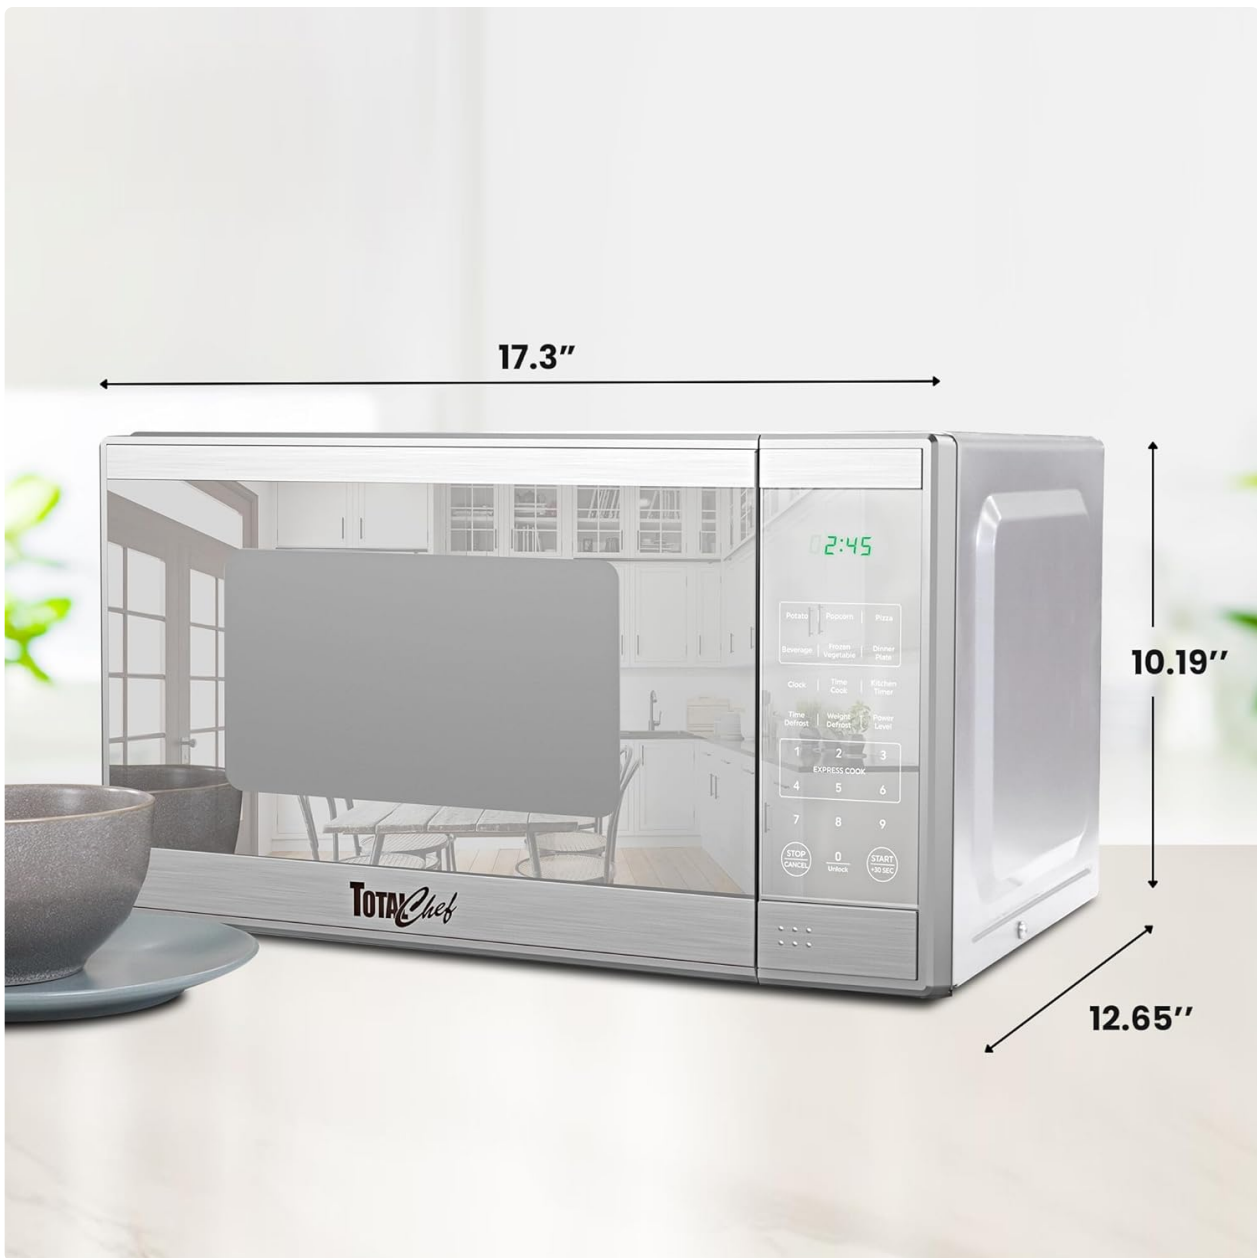


Figure 3: Digital touch control panel.

### 3.2 Pre-Set Functions

The microwave includes several pre-set functions for common food items. To use, simply press the corresponding button:

- **Popcorn:** For pre-packaged microwave popcorn.
- **Potato:** For cooking potatoes.
- **Pizza:** For reheating pizza slices.
- **Beverage:** For heating drinks.
- **Frozen Vegetable:** For cooking frozen vegetables.
- **Dinner Plate:** For reheating a dinner plate.



Figure 4: Pre-set function icons.

### 3.3 Power Levels

The microwave offers 10 power levels to adjust cooking intensity. Press the 'Power Level' button and then select the desired power level (e.g., 1 for 10%, 10 for 100%).



Figure 5: Power level indicator.

### 3.4 Express Cook

For quick cooking, press the 'Express Cook' buttons (1-6) to instantly start cooking for 1 to 6 minutes at full power. You can also press the 'Start +30 Sec' button to add 30 seconds of cooking time at full power.

### 3.5 Defrost Function

Use the 'Time Defrost' or 'Weight Defrost' functions to thaw frozen foods. Follow the instructions in the full user manual for specific weight and time settings.

### 3.6 Child Safety Lock

To activate the child safety lock, press and hold the 'STOP/CANCEL' button for 3 seconds. The lock indicator will appear on the display. To deactivate, repeat the process.



Figure 6: Child Safety Lock instructions.

## 4. MAINTENANCE

---

### 4.1 Cleaning the Interior

Regularly clean the interior of the microwave with a mild detergent and a soft cloth. Avoid abrasive cleaners or scouring pads. The glass turntable and roller ring are removable and dishwasher-safe for easy cleaning.



Figure 7: Easy-to-clean interior and removable turntable.

### 4.2 Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. For stainless steel surfaces, use a stainless steel cleaner to maintain its shine. Avoid spraying cleaners directly onto the control panel.

## 5. TROUBLESHOOTING

---

If your microwave oven is not functioning correctly, refer to the following common issues:

- **Microwave does not start:** Ensure the power cord is securely plugged into a grounded outlet. Check your household fuse or circuit breaker. Ensure the door is closed properly.
- **Food not heating:** Verify that the cooking time and power level are set correctly. Ensure the door is fully closed.
- **Turntable not rotating:** Check if the turntable is correctly placed on the roller ring and center support. Ensure there are no obstructions.

For more detailed troubleshooting, please consult the complete user manual or contact customer support.

## 6. SPECIFICATIONS

---

Feature	Specification
Brand Name	TOTAL Chef
Model Info	TCMO-07SS AZ
Item Weight	20.1 pounds (9.12 kg)
Product Dimensions	12.95 x 17.3 x 10.19 inches (32.9 x 43.9 x 25.9 cm)
Energy Use	700 Watts
Capacity	0.7 Cubic Feet
Installation Type	Countertop
Special Features	Programmable
Color	Silver
Voltage	120 Volts
Material Type	Stainless Steel
Inner Material Type	Stainless Steel
Included Components	Roller Ring



Figure 8: Product dimensions for the Total Chef 0.7 Cu Ft Microwave Oven.

## 7. WARRANTY AND SUPPORT

---

The Total Chef 0.7 Cu Ft Microwave Oven comes with a **1-Year Warranty**. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical assistance, or any product-related inquiries, please contact Total Chef customer service. Refer to the contact information provided in your product packaging or on the official Total Chef website for the most up-to-date support details.