

Domo DO9259G

DOMO DO9259G Barbecue Genius Electric Table Grill User Manual

Model: DO9259G

1. INTRODUCTION

Thank you for purchasing the DOMO DO9259G Barbecue Genius Electric Table Grill. This versatile electric grill is designed for convenient indoor and outdoor use, allowing you to enjoy your favorite grilled dishes without smoke or open flames. It features two independent temperature zones and high-quality non-stick grill plates for optimal cooking results. Please read this manual carefully before first use to ensure safe and efficient operation of your appliance. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors if not specifically designed for outdoor use. This model has IPX4 splash protection, making it suitable for outdoor use in sheltered areas.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended household use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not use metal utensils on the non-stick coating to avoid damage.

3. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the parts of your DOMO Barbecue Genius grill:

- **Grill Plates:** One ribbed grill plate and one flat griddle plate. Both are non-stick coated and removable.
- **Temperature Control Knobs:** Two independent knobs for controlling the temperature of each grill zone.
- **Indicator Lights:** Signal when the desired temperature is reached.
- **Fat Drip Tray:** Integrated pull-out tray for collecting excess fat.
- **Windshield:** Removable stainless steel windshield for outdoor use.
- **Base Unit:** Main housing with heating elements and controls.
- **Power Cord:** With cable winding for tidy storage.
- **Non-slip Feet:** For stability during use.



Image: Front view of the DOMO DO9259G Barbecue Genius Electric Table Grill, showing the two grill plates, control knobs, and the "PUSH" button for the fat drip tray.



Image: Exploded view of the grill components, including the base unit, two grill plates (ribbed and flat), two windshield pieces, and the fat drip tray.



Image: Close-up view of the pull-out fat drip tray, labeled "PUSH", located at the front center of the grill.

4. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and stickers from the appliance. Keep packaging for storage or disposal.
2. **Initial Cleaning:** Before first use, wipe the grill plates and the fat drip tray with a damp cloth. Ensure all parts are completely dry before assembly. The plates are dishwasher safe, but hand washing is recommended for longevity of the non-stick coating.
3. **Assembly:**
 - Place the base unit on a stable, heat-resistant, and level surface.
 - Insert the ribbed and flat grill plates into their respective slots on the base unit. Ensure they are seated correctly.
 - Slide the fat drip tray into its designated slot at the front of the unit until it clicks into place.
 - If desired, attach the two windshield pieces to the back and sides of the grill plates.

4. **Pre-heating:** For optimal grilling results, lightly grease the plates with a small amount of cooking oil before each use. Plug the appliance into a grounded electrical outlet. Turn the temperature control knobs to your desired setting. The indicator lights will illuminate. Allow the grill to pre-heat for approximately 5-10 minutes until the indicator lights turn off, signaling that the desired temperature has been reached.

5. OPERATING INSTRUCTIONS

The DOMO DO9259G features two independently controllable grilling zones, allowing you to cook different foods at their ideal temperatures simultaneously.

1. **Temperature Control:** Each side of the grill has its own temperature control knob. Rotate the knob clockwise to increase the temperature. The range typically goes from a low setting (e.g., for vegetables or keeping warm) to a high setting (e.g., for searing meats).
2. **Grilling:** Once the grill is pre-heated (indicator light off), place your food directly onto the appropriate grill plate.
 - Use the **ribbed grill plate** for meats, poultry, or vegetables where grill marks are desired.
 - Use the **flat griddle plate** for delicate items, eggs, pancakes, or as a panini press.
3. **Cooking Time:** Cooking times will vary depending on the type and thickness of the food, as well as your desired doneness. Always ensure food is cooked thoroughly.
4. **Fat Management:** Excess fat and juices will drain into the integrated fat drip tray. Periodically check and empty the tray during extended cooking sessions if necessary.
5. **After Use:** Once cooking is complete, turn both temperature control knobs to the "OFF" position. Unplug the appliance from the wall outlet and allow it to cool completely before cleaning.



Image: The DOMO DO9259G grill in operation, showing skewers on the ribbed plate and roasted potatoes and asparagus on the flat griddle plate.



Image: Overhead view of the DOMO DO9259G grill with food cooking on both the ribbed and flat plates, demonstrating the dual cooking zones.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your grill.

1. **Cool Down:** Always ensure the grill is completely cool before attempting to clean it.
2. **Remove Components:** Unplug the appliance. Remove the grill plates and the fat drip tray.
3. **Cleaning Grill Plates and Drip Tray:**
 - The grill plates and fat drip tray are dishwasher safe for convenience.
 - Alternatively, wash them by hand with warm, soapy water and a soft sponge or cloth.
 - Do not use abrasive cleaners, scouring pads, or metal utensils, as these can damage the non-stick coating.
 - For stubborn residue, soak the plates in warm soapy water for a few minutes before cleaning.
 - Rinse thoroughly and dry completely before reassembling or storing.
4. **Cleaning the Base Unit:**
 - Wipe the exterior of the base unit with a damp cloth.
 - Do not immerse the base unit, cord, or plug in water or any other liquid.
 - Ensure no water enters the electrical components.
5. **Storage:** Once clean and dry, store the grill in a cool, dry place. The power cord can be neatly wrapped around the cable winding feature on the underside of the unit.

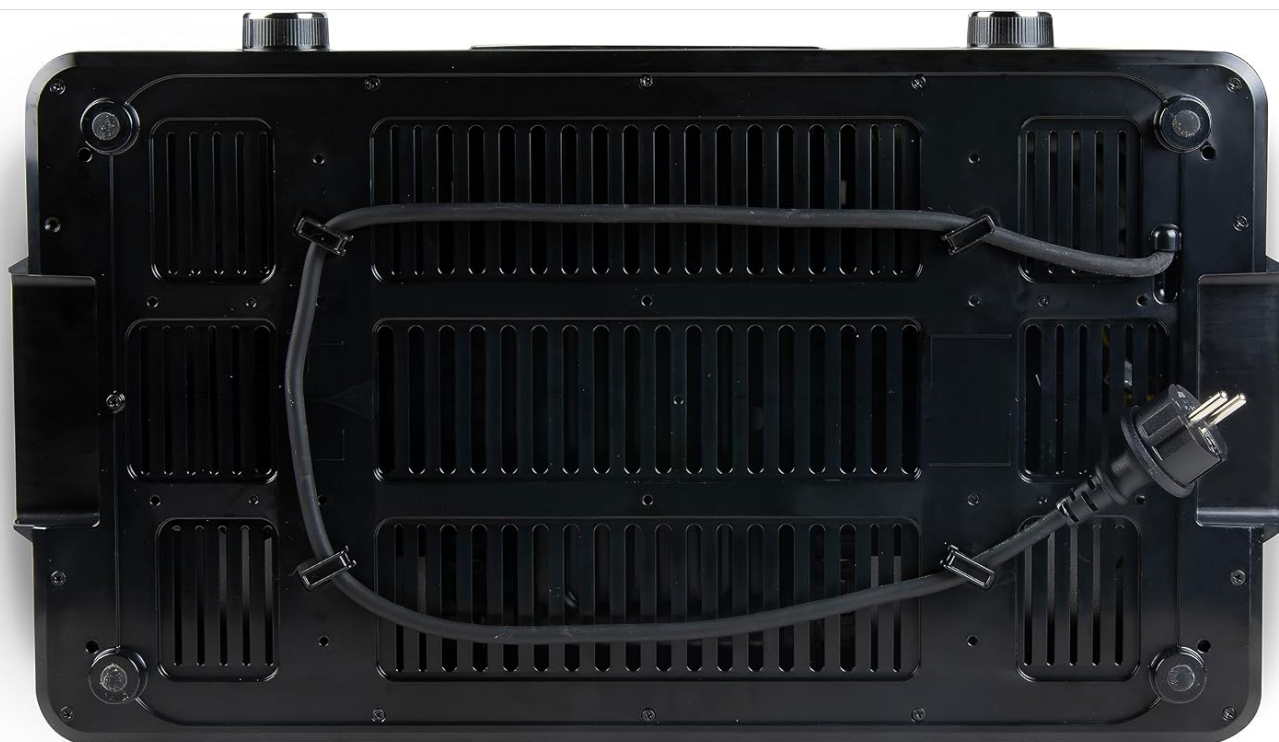


Image: Bottom view of the DOMO DO9259G grill, illustrating the integrated cable winding feature for neat storage of the power cord.

7. TROUBLESHOOTING

If you encounter issues with your DOMO Barbecue Genius grill, please consult the following table before contacting customer support.

Problem	Possible Cause	Solution
Grill does not turn on.	Not plugged in; power outlet issue; appliance not properly assembled.	Ensure the power cord is securely plugged into a working outlet. Check if the grill plates are correctly seated.
Food is not cooking evenly.	Grill not fully pre-heated; uneven food placement; too much food on the grill.	Allow sufficient pre-heating time until indicator lights turn off. Distribute food evenly. Avoid overcrowding the grill.
Smoke or odor during first use.	Protective coating burning off.	This is normal for first use. Ensure good ventilation. It should dissipate quickly.
Non-stick coating is damaged.	Use of metal utensils or abrasive cleaners.	Always use wooden, plastic, or silicone utensils. Clean with soft sponges only. Damage to coating is not covered by warranty if due to improper use.

8. TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	Domo

Feature	Detail
Model Number	DO9259G
Color	Black
Product Dimensions	52 x 29 x 15.5 cm (Length x Width x Height)
Weight	4.93 Kilograms
Power	2200 Watts
Voltage	230 Volts
Material	Plastic (housing), Stainless Steel (accents, windshield), Non-stick coated plates
Special Feature	Non-stick coating, Two independent temperature zones, Removable windshield, Fat drip tray, IPX4 splash protection
Grill Surface Area	28.2 x 24.6 cm (x 2 plates)
Included Components	Cleaning accessories



Image: Diagram showing the dimensions of the DOMO DO9259G grill: 52cm length, 29cm width, and 15.5cm height.

9. WARRANTY AND SUPPORT

DOMO products are manufactured to high-quality standards. For information regarding warranty terms and conditions, please refer to the warranty card included with your product or visit the official DOMO website. Keep your proof of purchase for any warranty claims.

For technical support, spare parts, or service inquiries, please contact DOMO customer service through their official channels. Contact information can typically be found on the product packaging or the manufacturer's website.

Note: Specific warranty details are not provided in this manual and may vary by region.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question