

[Manuals.plus](#) /

› [VOSOCO](#) /

› VOSOCO Karaoke Machine T03-L User Manual

## VOSOCO T03-L

# VOSOCO Karaoke Machine T03-L

## USER MANUAL

### INTRODUCTION

---

Thank you for choosing the VOSOCO T03-L Portable Bluetooth Karaoke Speaker. This all-in-one entertainment system is designed to provide a high-quality audio experience with versatile connectivity and dynamic LED lighting. This manual will guide you through the setup, operation, and maintenance of your new karaoke machine.

Key features include:

- Built-in speaker with upgraded 15W 6.5-inch full-frequency audio.
- Two wireless microphones for duets and enhanced vocal performance.
- Easy volume control for main music, microphone, and echo effects.
- Flashing LED lights with multiple modes to create a vibrant atmosphere.
- Support for Micro TF card, Flash USB, FM radio, and AUX connectivity.
- Portable design with a leather carry handle and shoulder strap for easy transport.
- Long-lasting battery providing 4-6 hours of continuous play.

### WHAT'S IN THE BOX

---

Please check the contents of your package to ensure all items are present:

- Karaoke Machine x1
- Wireless Microphones x2
- Shoulder Strap x1
- Charging Cable x1



Image: The VOSOCO T03-L Karaoke Machine, showcasing the main unit, two wireless microphones, a charging cable, and a shoulder strap, all included in the package.

## SETUP

---

### 1. Charging the Karaoke Machine

Before first use, fully charge the karaoke machine. Connect the provided charging cable to the USB Type C port on the unit and to a compatible USB power adapter (not included). The charging indicator will show the charging status. A full charge typically takes 3-6 hours and provides 4-8 hours of play time.

# 1 CHARGE UP TO 4-8 HOURS PLAY



*Charging time 3-6h*

Image: The VOSOCO T03-L Karaoke Machine with a visual representation of its charging process and extended battery life.

## 2. Installing Microphone Batteries

Each wireless microphone requires batteries (not included). Open the battery compartment on each microphone and insert the required batteries, ensuring correct polarity. Close the compartment securely.

## 3. Powering On

Locate the power switch on the karaoke machine and slide it to the "ON" position. The display will light up, and the unit

will enter Bluetooth pairing mode by default.

## 4. Bluetooth Pairing

To connect your device (smartphone, tablet, laptop) via Bluetooth:

1. Ensure the karaoke machine is powered on and in Bluetooth mode (indicated by "BLUE" on the display).
2. On your device, go to Bluetooth settings and search for available devices.
3. Select "VOSOCO T03-L" from the list.
4. Once connected, you will hear an audible confirmation from the speaker.



Image: The VOSOCO T03-L Karaoke Machine with a tablet in its integrated stand, demonstrating the ease of one-click Bluetooth connection for seamless music streaming.

## OPERATING INSTRUCTIONS

---

### Control Panel Overview

# EASY TO USE

## Top button design for easier control



Image: A detailed view of the VOSOCO T03-L Karaoke Machine's top control panel, highlighting the Echo, Mic Volume, and Music Volume knobs, as well as playback and mode selection buttons.

- **ECHO +/-:** Adjusts the echo effect for the microphones.
- **MIC VOL +/-:** Controls the volume of the microphones.
- **MUSIC VOL +/-:** Adjusts the main music volume.
- **MODE Button:** Cycles through input modes (Bluetooth, FM, AUX, USB, TF).
- **PLAY/PAUSE Button:** Plays or pauses audio playback.

- **PREVIOUS/NEXT Buttons:** Skips to the previous or next track.
- **LIGHT Button:** Changes the LED light modes.
- **MIC PRIORITY Button:** Prioritizes microphone audio over music.

## Mode Selection

Press the **MODE** button to switch between available input sources:

- **Bluetooth Mode:** For wireless audio streaming from your paired device.
- **FM Radio Mode:** For listening to FM radio stations. Use the PREVIOUS/NEXT buttons to tune.
- **AUX Mode:** Connect an external audio device using a 3.5mm AUX cable (not included).
- **USB/TF Card Mode:** Insert a USB flash drive or TF card into the respective port for direct audio playback.

## Using the Microphones

The two wireless microphones automatically connect to the karaoke machine when powered on. Adjust the **MIC VOL** knob to control microphone volume and the **ECHO** knob for vocal effects. Press the **MIC PRIORITY** button to lower the music volume automatically when speaking or singing into the microphone.

Your browser does not support the video tag.

Video: This video demonstrates the VOSOCO T03-L karaoke machine in use, highlighting its Bluetooth connectivity and the functionality of the wireless microphones for an engaging karaoke experience.

## LED Light Show

Press the **LIGHT** button to cycle through the various LED light modes. The lights synchronize with the music, creating a dynamic visual display for your party or performance.



Image: A row of VOSOCO T03-L Karaoke Machines, each showcasing a different vibrant LED light effect, illustrating the variety of lighting modes available.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners or solvents.
- **Storage:** Store the karaoke machine in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Battery Care:** If the unit will not be used for an extended period, fully charge it every 3 months to maintain battery health. Remove batteries from microphones if storing for long durations.
- **Avoid Water:** Keep the device away from water or excessive moisture to prevent damage.

## TROUBLESHOOTING

If you encounter any issues with your VOSOCO T03-L, please refer to the table below for common problems and their solutions.

Problem	Possible Cause	Solution
No power	Battery drained; Power switch off	Charge the unit; Ensure power switch is ON.
No sound from speaker	Volume too low; Incorrect mode selected; Device not connected	Increase MUSIC VOL; Select correct input mode; Repair Bluetooth device or check AUX/USB/TF connection.
Microphone not working	Microphone batteries low/incorrectly installed; MIC VOL too low; Microphone not paired	Replace/reinstall microphone batteries; Increase MIC VOL; Power cycle microphones and unit to re-pair.
Bluetooth connection unstable	Device too far; Interference; Low battery	Move device closer to the unit (within 10m); Avoid obstacles; Charge the unit.
LED lights not working	Light mode off; Unit malfunction	Press the LIGHT button to activate/change modes; Contact customer support if issue persists.

## SPECIFICATIONS

Feature	Detail
Brand	VOSOCO
Model Number	T-03
Mounting Type	Tabletop, Floor Standing
Power Source	Battery Powered
Connector Type	USB Type C, USB
Output Wattage	15 Watts
Number of Channels	2
Audio Input	AUX
Product Dimensions (L x W x H)	9 x 5.11 x 11.81 inches
Item Weight	6.65 pounds
Connectivity Technology	Bluetooth
Color	Black
Recommended Uses	Home

## WARRANTY AND SUPPORT

VOSOCO is committed to providing high-quality products and excellent customer service. Your T03-L Karaoke Machine comes with the following:

- **12 Months Quality Guarantee:** Enjoy peace of mind with our product quality assurance.
- **30-Days Free Returns:** If you are not satisfied, you can return the product within 30 days.
- **Lifetime Technical Support:** Our dedicated support team is available to assist you with any technical queries throughout the product's lifespan.
- **24/7 Fast Support:** Get quick assistance whenever you need it.

For further assistance or to learn more about VOSOCO products, please visit the official VOSOCO Store [VOSOCO Store on Amazon](#).