

[Manuals.plus](#) /

› [HP](#) /

› HP DHS-2111 Wired Speaker User Manual

HP DHS-2111

HP DHS-2111 Wired Speaker User Manual

Model: DHS-2111 | Brand: HP

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your HP DHS-2111 Wired Speaker. Designed for clear audio output, these 2-channel speakers offer a reliable audio solution for various devices.

Hear more, hear better

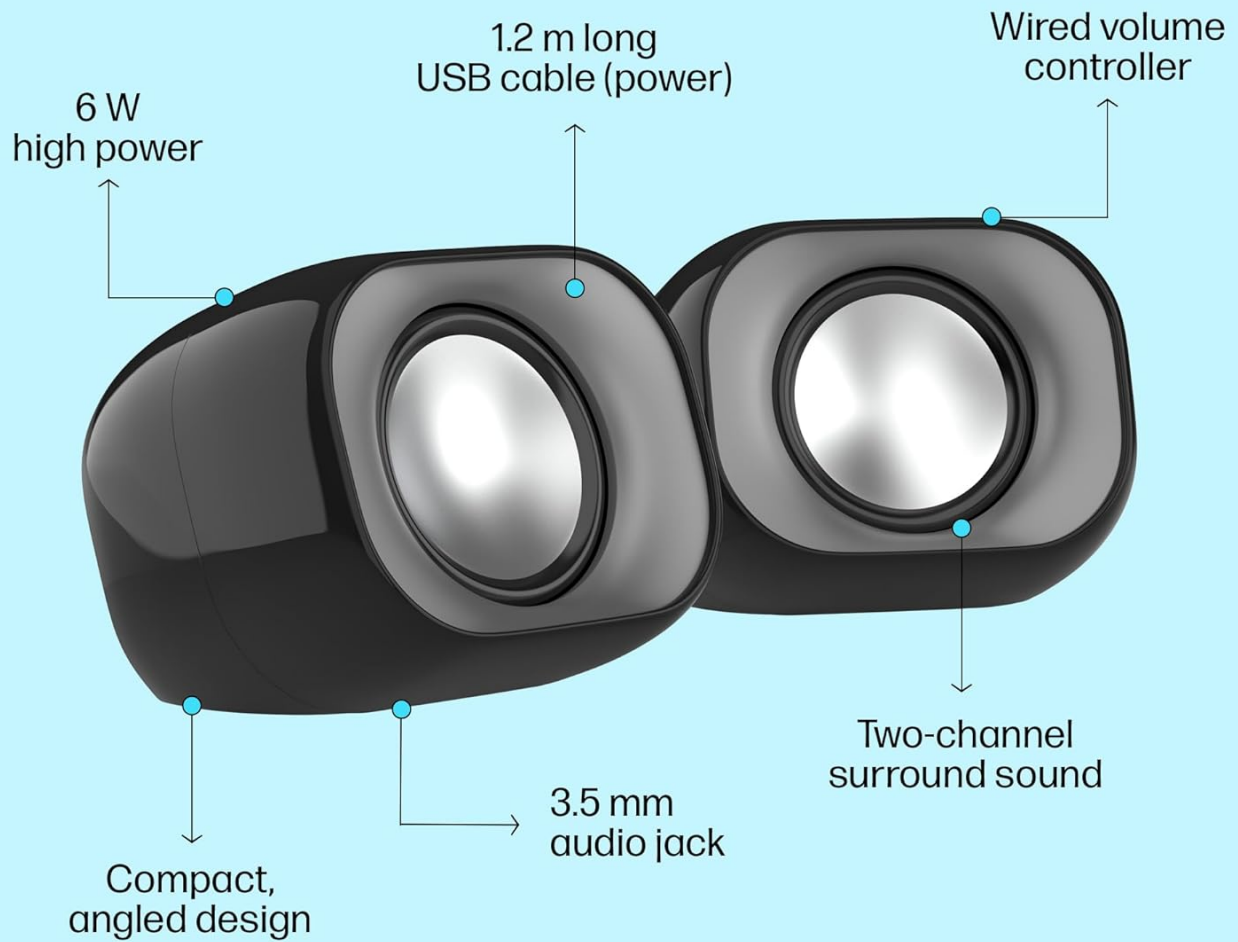 


Image: Overview diagram illustrating the key features and components of the HP DHS-2111 Wired Speaker.

Powerful, immersive sound



Two-channel
surround sound



6 W
high power

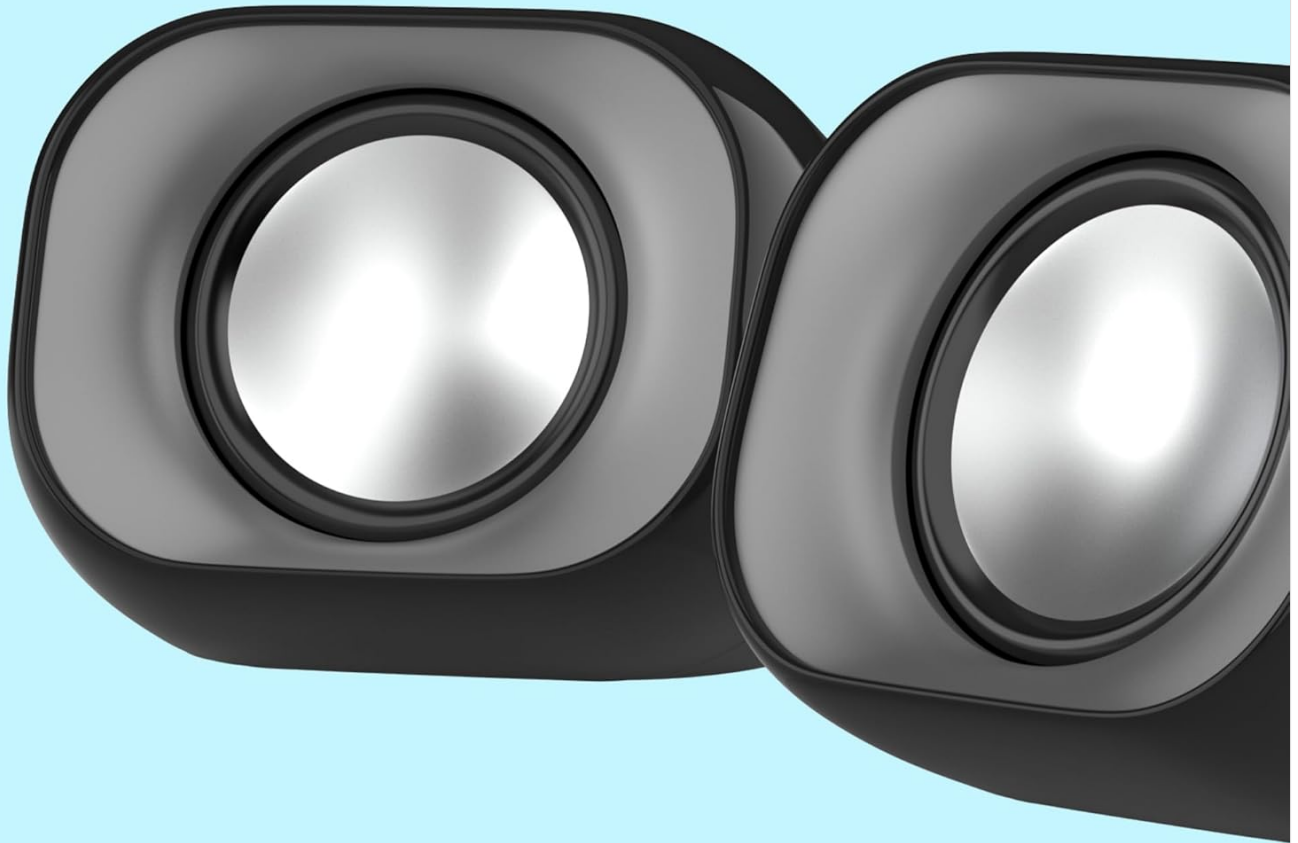 


Image: The HP DHS-2111 speakers, emphasizing their powerful, immersive sound capabilities.

PACKAGE CONTENTS

Please verify that all items are present in the package:

- HP DHS-2111 Wired Speaker (2 units)
- Integrated 3.5mm Audio Jack Cable
- Integrated USB Power Cable (1.2m)
- Wired Volume Controller (integrated)

SETUP INSTRUCTIONS

Follow these steps to set up your HP DHS-2111 Wired Speakers:

1. **Speaker Placement:** Position the two speaker units on a flat, stable surface. The angled design is intended to

optimize sound dispersion and save space.

Space saving design, wide spreading volume

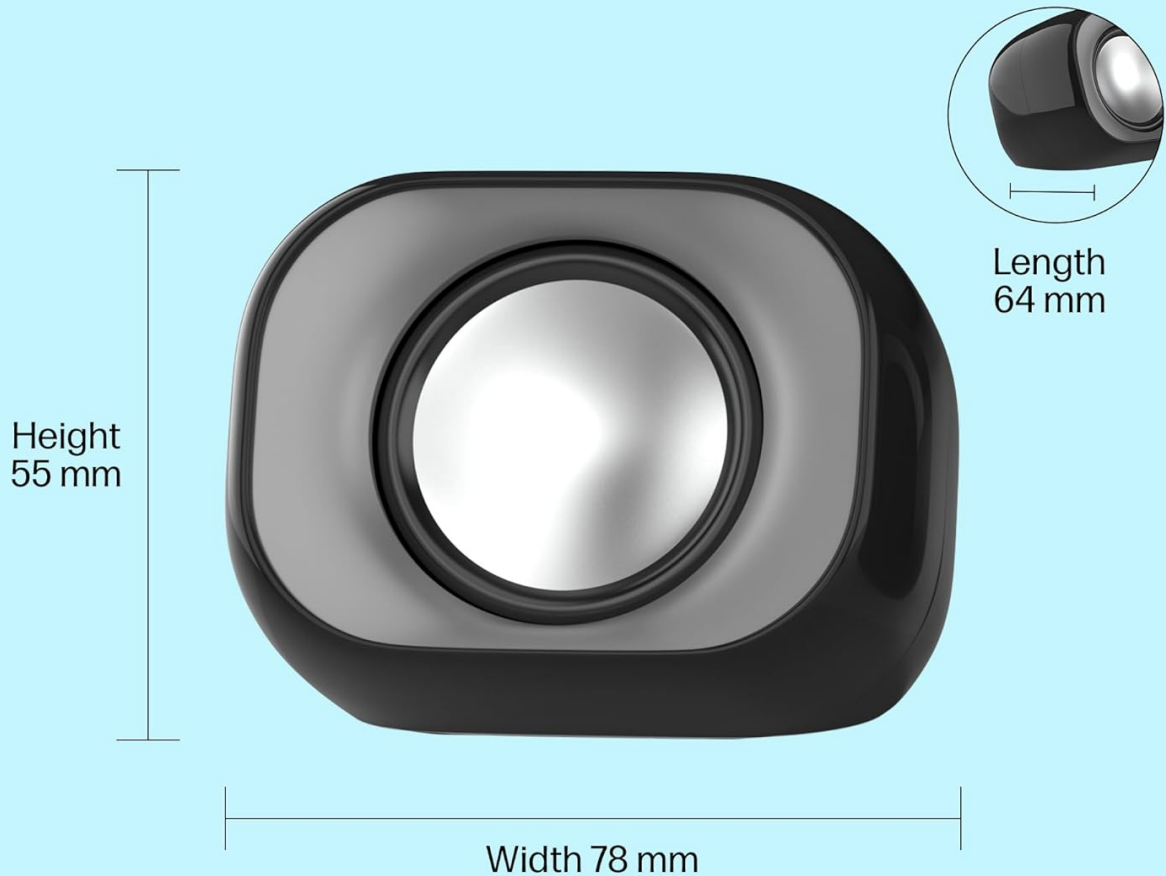 


Image: Dimensions of the HP DHS-2111 speaker, highlighting its compact, space-saving design.

2. **Connect Audio Cable:** Insert the 3.5mm audio jack into the audio output port of your device (e.g., computer, laptop, smartphone).
3. **Connect Power Cable:** Plug the USB-A connector of the power cable into an available USB port on your device or a USB power adapter (not included). The speakers require 5V USB power to operate.

Plug, charge, play

3.5 mm audio jack

1.2 m long USB cable (power)



Image: The 3.5mm audio jack and 1.2m USB power cable for connecting the HP DHS-2111 speaker to devices.

OPERATING INSTRUCTIONS

Once connected, your speakers are ready for use.

Adjusting Volume

The HP DHS-2111 speakers feature a wired in-line volume controller for convenient audio adjustment.

- Locate the wired volume controller on the speaker cable.
- Rotate the dial on the controller clockwise to increase volume.
- Rotate the dial on the controller counter-clockwise to decrease volume.

Seamless audio control

Enjoy easy access to a wired volume controller that allows you to adjust the volume levels.

Adjust
volume levels

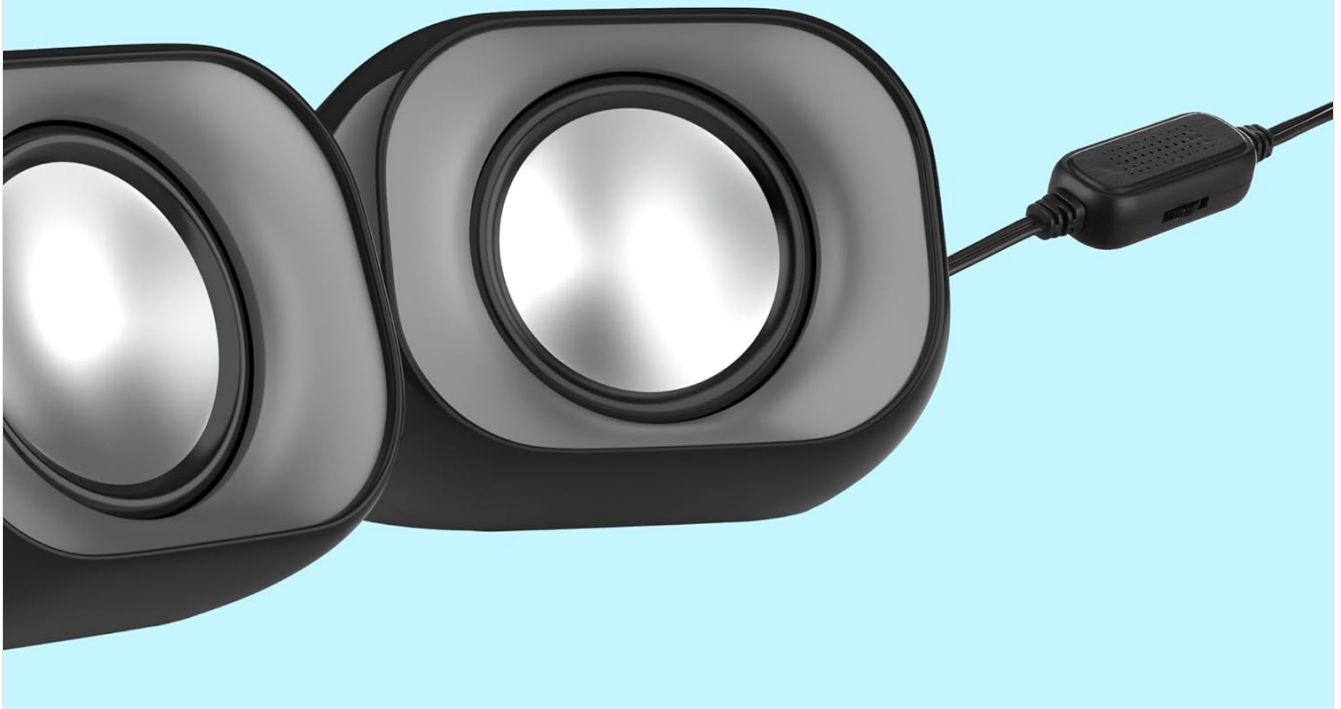 


Image: The wired volume controller, allowing users to easily adjust audio levels.

Device Compatibility

These speakers are compatible with any device that has a standard 3.5mm audio output jack and a USB port for power. This includes, but is not limited to:

- Personal Computers (PCs)
- Laptops
- Smartphones
- Tablets
- MP3 Players

Any device, any time



PC and phone
compatible



Supports other 3.5 mm
audio devices

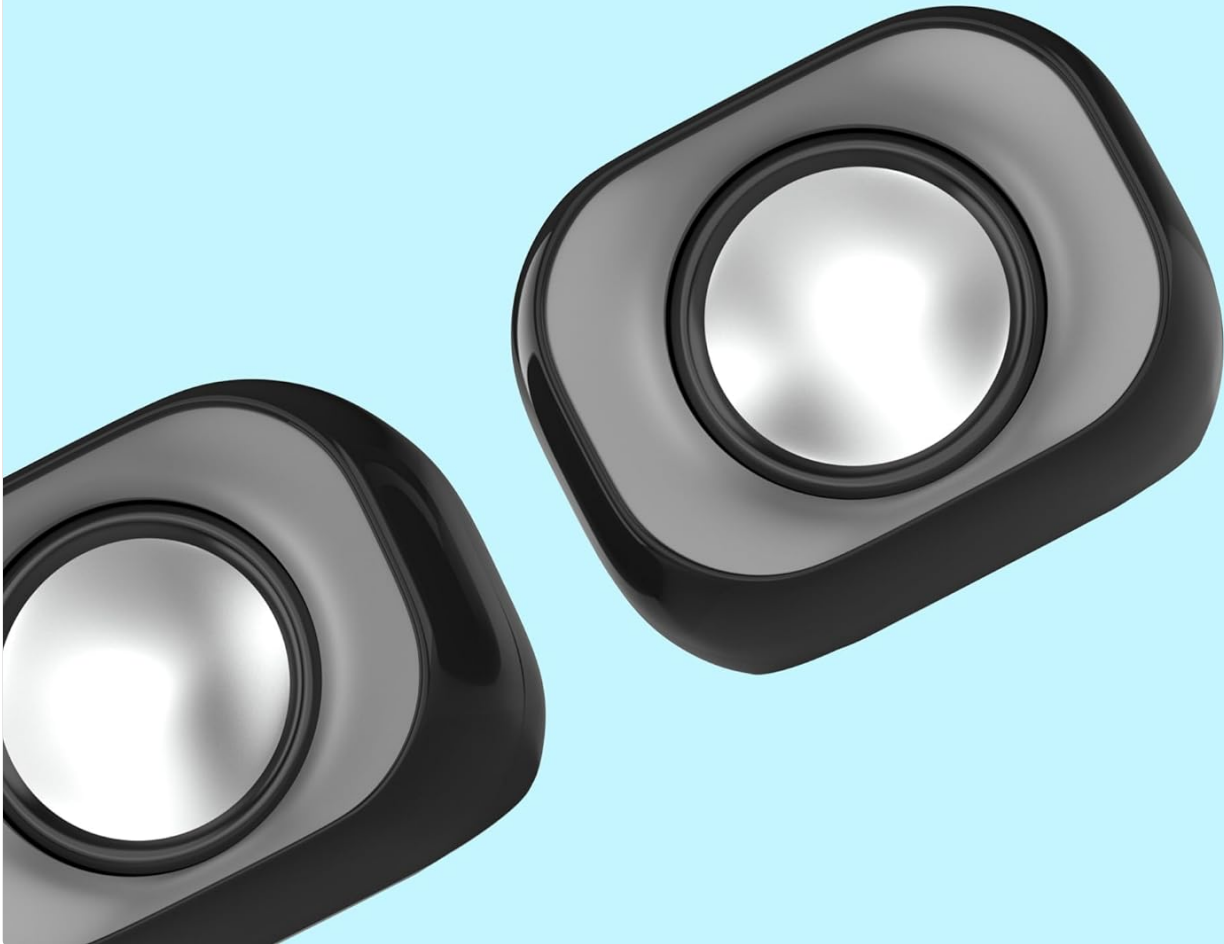 


Image: The HP DHS-2111 speakers demonstrating broad compatibility with devices featuring a 3.5mm audio output.

MAINTENANCE

Proper care ensures the longevity of your speakers:

- **Cleaning:** Use a soft, dry cloth to wipe the speaker surfaces. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store speakers in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Resistance:** These speakers are **NOT** water resistant. Avoid exposure to liquids to prevent damage.
- **Cable Care:** Do not pull on the cables forcefully. Always grasp the plug when disconnecting.

TROUBLESHOOTING

If you encounter issues, refer to the following common solutions:

No Sound

- **Check Connections:** Ensure the 3.5mm audio jack is fully inserted into your device's audio output and the USB power cable is securely connected to a working USB port.
- **Volume Level:** Verify that the wired volume controller is turned up and your device's volume is not muted or set too low.
- **Audio Source:** Confirm that your device is playing audio and the correct audio output device is selected in your system settings.
- **Test with Another Device:** Try connecting the speakers to a different device to determine if the issue is with the speakers or the original audio source.

Distorted or Low Quality Sound

- **Volume Adjustment:** Reduce the volume on both the speakers and your device. High volume levels can sometimes cause distortion.
- **Audio Source Quality:** Ensure the audio file or streaming service quality is high. Low-quality sources can result in poor sound.
- **Interference:** Move speakers away from other electronic devices that might cause interference.

SPECIFICATIONS

Feature	Detail
Model Name	HP DHS-2111 Wired Speaker
Item Model Number	8C575AA
Speaker Type	Multimedia
Surround Sound Channel Configuration	2.0
Connectivity Technology	Auxiliary (3.5mm audio jack)
Power Source	Corded Electric (USB 5V)
Wattage	6 Watts (Total)
Speaker Maximum Output Power	5 Watts
Impedance	40 Ohms
Control Method	Wired Volume Controller
Product Dimensions (each speaker)	64D x 55W x 78H Centimeters
Item Weight	270 Grams
Colour	Black
Water Resistance Level	Not Water Resistant
Included Components	Speaker (2 units)
Country of Origin	China

WARRANTY AND SUPPORT

Your HP DHS-2111 Wired Speaker comes with a **1-year limited warranty** from the date of purchase. For warranty claims, technical assistance, or further inquiries, please contact HP Customer Support. Online support is available 24x7. Refer to the official [HP website](#) or your purchase documentation for specific contact details and warranty terms applicable in your region.