

Noble House Augusta 6-Piece Outdoor Wood and Wicker Loveseat Set

Noble House Augusta 6-Piece Outdoor Loveseat Set Instruction Manual

Model: Augusta 6-Piece Outdoor Wood and Wicker Loveseat Set

INTRODUCTION

Thank you for choosing the Noble House Augusta 6-Piece Outdoor Wood and Wicker Loveseat Set. This manual provides essential information for the safe assembly, operation, and maintenance of your new outdoor furniture set. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

SAFETY INFORMATION

- Always place the furniture set on a flat, stable surface.
- Keep children and pets away from the assembly area.
- Do not use power tools for assembly unless specifically instructed, as this may damage the components.
- Ensure all bolts and screws are securely tightened before use. Periodically check and re-tighten as necessary.
- For the fire pit:
 - Use outdoors only in a well-ventilated area.
 - Keep flammable materials at a safe distance from the fire pit.
 - Do not leave the fire pit unattended when in use.
 - Ensure the propane tank is properly connected and free of leaks before operation.
 - Allow the fire pit to cool completely before moving or covering.

PACKAGE CONTENTS

Verify that all components listed below are present before beginning assembly. If any parts are missing or

damaged, please contact customer support.

- Two (2) Loveseats
- Two (2) Club Chairs
- One (1) Fire Pit
- One (1) Tank Holder
- Assembly Hardware and Tools (for loveseats and chairs)
- Lava Rocks (for fire pit)

SETUP AND ASSEMBLY

Some assembly is required for the loveseats and club chairs. The fire pit requires no assembly, only setup for operation.

Loveseat and Club Chair Assembly

1. Unpack all components and lay them out on a soft, clean surface to prevent scratching.
2. Follow the detailed instructions provided in the separate assembly guide included with your hardware kit for each loveseat and club chair. Ensure all bolts are finger-tightened initially.
3. Once all components are aligned, fully tighten all bolts using the provided tools. Do not overtighten.
4. Repeat the process for all seating units.

Fire Pit Setup

1. Carefully place the fire pit in its desired outdoor location, ensuring it is on a stable, non-flammable surface.
2. Distribute the provided lava rocks evenly into the fire pit basin, ensuring they do not cover the burner holes.
3. Place your standard size propane tank (not included) into the tank holder.
4. Connect the fire pit's gas line to the propane tank, following the instructions on the gas line and tank. Ensure a secure, leak-free connection.



Image: Top view of the fire pit burner with lava rocks and gas line. Ensure lava rocks do not cover the burner.

OPERATING THE FIRE PIT

1. Ensure the propane tank valve is open.
2. Turn the control knob on the fire pit to the 'ON' or 'IGNITE' position.
3. Press and hold the igniter button (if present) or use a long lighter to ignite the burner.
4. Once lit, adjust the flame height using the control knob to your desired level.
5. To turn off, close the propane tank valve first, then turn the fire pit control knob to the 'OFF' position.
6. Allow the fire pit to cool completely before covering or storing.

MAINTENANCE

Regular maintenance will help prolong the life and appearance of your outdoor furniture set.

- **Acacia Wood:** Clean with a soft cloth and mild soap solution. Avoid harsh chemicals. Periodically apply a wood sealant or oil to maintain its natural finish and protect against weathering.

- **Polyethylene Wicker:** Wipe clean with a damp cloth. For stubborn dirt, use a mild soap and water solution. Rinse thoroughly and allow to air dry.
- **Lightweight Concrete (Fire Pit & Tank Holder):** Clean with a soft cloth and water. Avoid abrasive cleaners or brushes that could scratch the surface.
- **General:** Cover the furniture set when not in use for extended periods or during inclement weather to protect it from the elements. Store cushions indoors when not in use.



Image: Close-up of the fire pit's concrete texture. Regular cleaning helps maintain its appearance.

If you encounter issues with your Noble House Augusta set, refer to the following common solutions:

- **Loose Connections:** If any part of the seating feels wobbly, check and re-tighten all assembly bolts.
- **Fire Pit Not Igniting:**
 - Ensure the propane tank valve is fully open.
 - Check that the gas line is securely connected to both the fire pit and the propane tank.
 - Verify there is propane in the tank.
 - Clear any debris from the burner holes.
 - If using an igniter, ensure it is sparking. If not, a long lighter can be used.
- **Uneven Seating:** Ensure the furniture is placed on a level surface. If the surface is uneven, consider using shims under the legs.

For issues not covered here, please contact Noble House customer support.

SPECIFICATIONS

Component	Detail
Includes	2 Loveseats, 2 Club Chairs, 1 Fire Pit, 1 Tank Holder
Loveseat & Chair Frame Material	Acacia Wood
Loveseat & Chair Seat Material	Polyethylene Wicker
Fire Pit Material	Lightweight Concrete
Tank Holder Material	Iron
Frame Finish	Natural
Wicker Color	Mixed Mocha
Fire Pit Color	Light Gray
Seating Capacity	6 Persons
Overall Product Weight	290.97 lbs
Loveseat Dimensions (H x W x D)	31.50" x 52.00" x 31.00"
Loveseat Seat Dimensions (H x W x D)	17.00" x 47.25" x 23.25"
Loveseat Arm Height	24.25"
Chair Dimensions (H x W x D)	31.75" x 28.25" x 32.75"
Chair Seat Dimensions (H x W x D)	14.25" x 23.75" x 23.50"
Chair Arm Height	23.00"
Fire Pit Dimensions (H x W x D)	15.00" x 56.00" x 26.25"
Tank Holder Dimensions (H x W x D)	20.25" x 16.25" x 16.25"
Assembly Required	Yes (for seating), No (for fire pit)

WARRANTY AND SUPPORT

For warranty information or to obtain replacement parts, please refer to the warranty card included with your purchase or visit the official Noble House website. For further assistance, contact Noble House customer support directly.

Noble House Customer Support: [Visit the Noble House Store on Amazon](#)