

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [eKids](#) /

› [eKids Bluey Walkie Talkies \(Model BU-207\) Instruction Manual](#)

eKids BU-207

eKids Bluey Walkie Talkies (Model BU-207) Instruction Manual

MODEL: BU-207

Brand: eKids

INTRODUCTION

Thank you for purchasing the eKids Bluey Walkie Talkies. These two-way radios are designed for children aged 3 and up, featuring a fun Bluey-themed design. They provide static-free communication with an extended range, perfect for indoor and outdoor play. Please read this manual carefully to ensure proper setup and operation.

IMPORTANT SAFETY INFORMATION

- Battery Safety:** This product requires 4 AAA batteries (not included). Always use new batteries of the same type. Do not mix old and new batteries, or different types of batteries. Insert batteries with correct polarity (+/-). Remove exhausted batteries promptly. Do not attempt to recharge non-rechargeable batteries.
- Choking Hazard:** Small parts may be present. Not suitable for children under 3 years due to potential choking hazards.
- Antenna:** The antenna is fixed and should not be removed or bent excessively.
- Water Resistance:** This product is not water resistant. Avoid exposure to water or moisture.
- Supervision:** Adult supervision is recommended during use.

WHAT'S IN THE Box

- Two (2) eKids Bluey Walkie Talkie units

SETUP

1. Battery Installation

- Locate the battery compartment on the back of each walkie talkie unit.
- Using a small Phillips head screwdriver (not included), unscrew the battery compartment cover.
- Insert 2 AAA batteries into each unit, ensuring correct polarity (+/-).

4. Replace the battery compartment cover and tighten the screw.

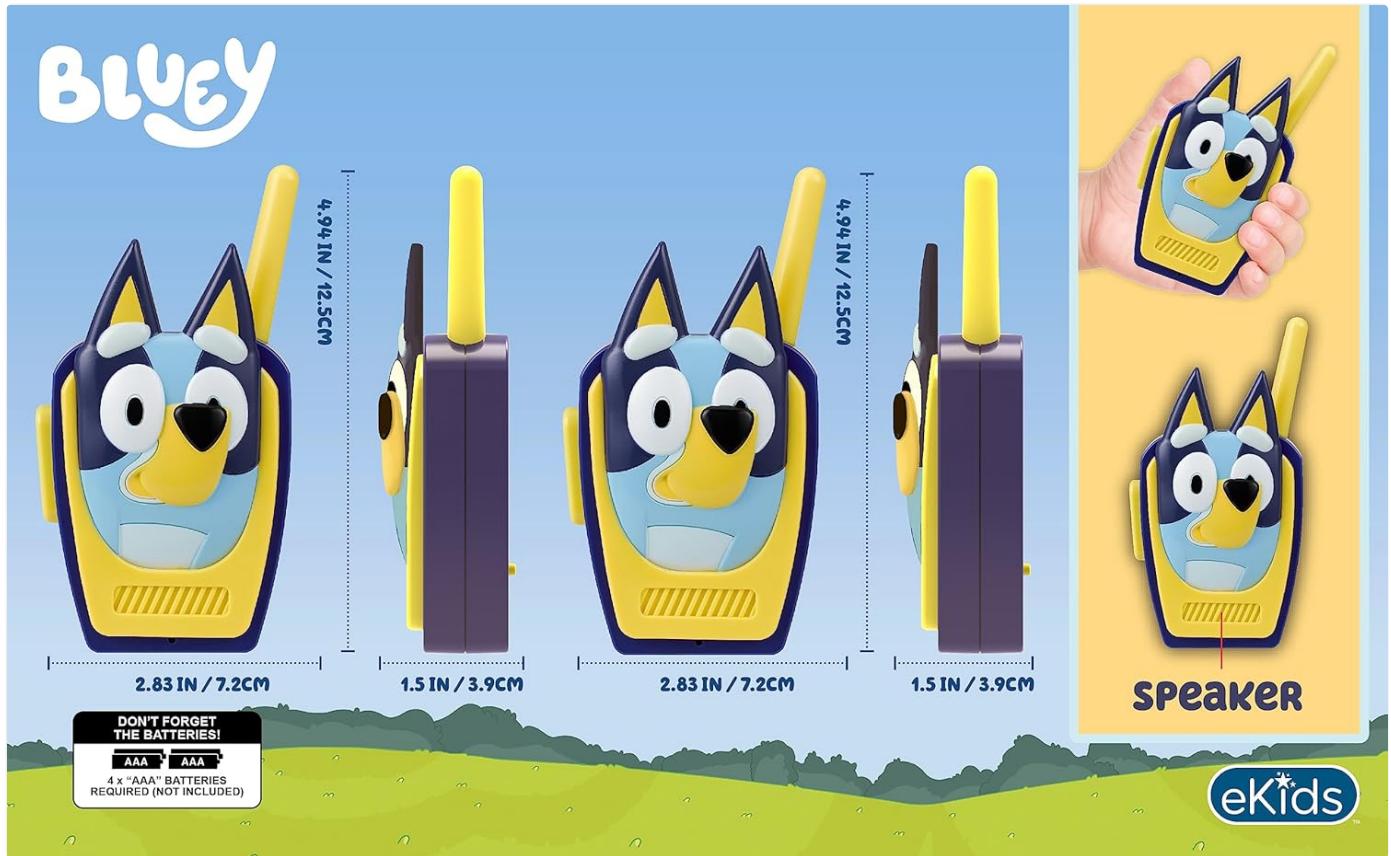


Figure 1: Rear view of the walkie talkie, illustrating the battery compartment and product dimensions. Each unit requires 2 AAA batteries.

2. Powering On/Off

- Locate the ON/OFF switch on the back of each walkie talkie unit (next to the battery compartment).
- Slide the switch to the "ON" position to power on the unit. A red indicator light will illuminate.
- Slide the switch to the "OFF" position to power off the unit. The red indicator light will turn off.



Figure 2: Packaging illustration highlighting the ON/OFF switch and talk button on the walkie talkie units.

OPERATING INSTRUCTIONS

1. Basic Communication

1. Ensure both walkie talkie units are powered on.
2. To speak, press and hold the "Talk Button" located on the side of the unit. Speak clearly into the microphone.
3. Release the "Talk Button" to listen for a response.
4. Both units must be on the same frequency to communicate. These walkie talkies operate on a single, fixed channel for simplicity.



Figure 3: The two Bluey walkie talkie units, ready for communication.

2. Range and Clarity

- The walkie talkies offer an extended range of up to 500 feet under ideal conditions.
- Performance may vary based on terrain, weather, electromagnetic interference, and obstructions (e.g., buildings, trees).
- The static-free design helps ensure clear audio transmission.



Figure 4: Visual representation of the walkie talkies' static-free communication and extended range capabilities.

FEATURES

- Bluey Themed Design:** Features popular Bluey character graphics and sculpted details.
- Static-Free Communication:** Designed for clear audio transmission.
- Extended Range:** Communicate up to 500 feet in ideal conditions.
- Kid-Friendly Controls:** Simple push-to-talk button for easy operation by young children.
- Durable and Lightweight:** Constructed for durability and easy portability for both indoor and outdoor use.

MAINTENANCE

- Cleaning:** Wipe the units with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- Storage:** When not in use for extended periods, remove batteries to prevent leakage and corrosion. Store in a cool, dry place away from direct sunlight.
- Battery Replacement:** Replace all batteries when sound becomes distorted or the range decreases significantly.

TROUBLESHOOTING

Problem	Solution
No sound or weak sound.	Ensure both units are powered on. Check battery installation and replace if necessary. Ensure units are within range.
Excessive static or interference.	Move to a different location to avoid obstructions or electromagnetic interference. Ensure units are within optimal range.

Problem	Solution
Units not communicating.	Verify both units are powered on and have fresh batteries. Ensure the "Talk Button" is pressed only on the speaking unit and released on the listening unit.

SPECIFICATIONS

- **Model Number:** BU-207
- **Brand:** eKids
- **Item Weight:** 8.4 ounces
- **Product Dimensions:** 2.88 x 1.55 x 5.45 inches
- **Batteries:** 4 AAA batteries required (2 per unit, not included)
- **Number of Channels:** 1
- **Frequency Range:** 400-470 MHz
- **Talking Range Maximum:** 500 Feet (under ideal conditions)
- **Voltage:** 1.5 Volts
- **Water Resistance Level:** Not Water Resistant
- **Recommended Age:** 3 years and up

WARRANTY AND SUPPORT

This product comes with a **1-year limited warranty** from the manufacturer. For warranty claims or technical support, please refer to the contact information provided on the product packaging or visit the official eKids brand store.

eKids Brand Store: [Visit the eKids Store on Amazon](#)

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official product video from Trusted Kids Products, showcasing the eKids Bluey Walkie Talkies for Kids, highlighting their features and ease of use.



© 2023 eKids. All rights reserved. Bluey (word mark and character logos) are trade marks of Ludo Studio Pty Limited and are used under licence. BLUEY logo © Ludo Studio Pty Limited 2018. Licensed by BBC. BBC is a trade mark of the British Broadcasting Corporation and is used under licence. BBC logo © BBC 1996.