

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [COSTWAY](#) /

> [COSTWAY 3-in-1 Children's Double-Sided Easel Instruction Manual](#)

COSTWAY B0CCJWC2ZD

COSTWAY 3-in-1 Children's Double-Sided Easel Instruction Manual

INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your COSTWAY 3-in-1 Children's Double-Sided Easel. This easel features a magnetic whiteboard, a chalkboard, and an integrated paper roll holder, designed to support creative activities for children aged 3 and above. Please read this manual thoroughly before use to ensure safe and correct operation.

SAFETY INSTRUCTIONS

- Ensure all components are securely fastened during assembly to prevent instability.
- Supervise children during use, especially with small accessories like magnets and paint cups.
- The easel is designed with rounded corners to minimize the risk of injury.
- Use only appropriate writing tools for each board: chalk for the chalkboard and dry-erase markers for the whiteboard.
- Keep the easel away from heat sources and direct sunlight to prevent material damage.
- This product is suitable for children aged 3 years and older.

PACKAGE CONTENTS

Please check that all items listed below are present in your package:

- 1 x Easel frame
- 2 x Magnets
- 2 x Paint cups
- 1 x Drawing paper roll
- 2 x Fabric storage boxes

- 1 x Instruction manual (this document)

Was ist im Lieferumfang enthalten?



Papierrolle mit 5 M Papier



2 Farbbecher mit Deckel



2 Aufbewahrungskästen aus Stoff

Image: Components included in the package, showing the paper roll, two paint cups, and two fabric storage boxes.

SETUP AND ASSEMBLY

The easel requires assembly. Follow the included assembly instructions carefully. Ensure all screws are tightened for stability. The easel features a stable A-frame structure and hidden screws for safety.



Auswechselbare Papierrolle



Versteckte Schrauben



Magnetisches Whiteboard

Image: Illustrates the stable A-frame structure, hidden screws for safety, and the magnetic whiteboard feature.

Before First Use:

- **Remove Protective Film:** Carefully peel off the protective film from the whiteboard surface before initial use.
- **Clean Boards:** Wipe both the whiteboard and chalkboard with a soft, damp cloth to remove any dust or residue from manufacturing.

Vorsichtsmaßnahmen vor dem Gebrauch



Ziehen Sie die
Schutzfolie von
der Oberfläche
des Whiteboards ab



Kann mit einem
Radiergummi
gereinigt werden

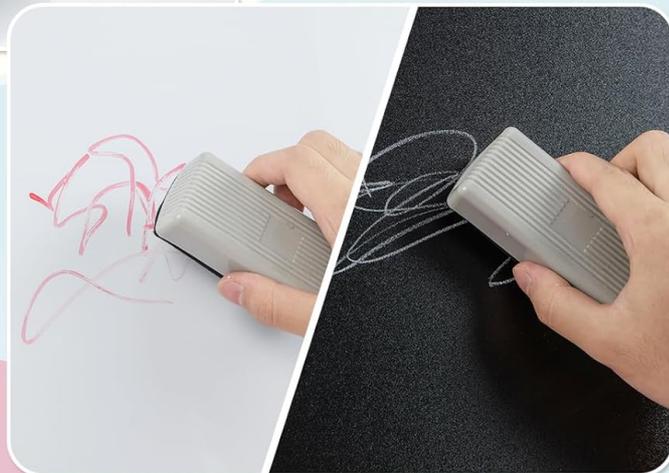


Image: Demonstrates removing the protective film from the whiteboard and cleaning both the whiteboard and chalkboard with an eraser.

OPERATING INSTRUCTIONS

The COSTWAY 3-in-1 Easel offers multiple creative surfaces:



Image: Shows the easel's three main functions: whiteboard, chalkboard, and the pull-out paper roll.

1. Whiteboard Usage:

- Use dry-erase markers only on the white magnetic surface.
- The whiteboard is magnetic, allowing for the attachment of magnets or paper with magnets.

2. Chalkboard Usage:

- Use standard chalk on the black chalkboard surface.

3. Paper Roll Holder:

- Unroll paper from the top holder down over either board for an additional drawing surface.
- Secure the paper with the provided magnets to prevent it from slipping.

Storage Features:

The easel includes multiple storage options to keep art supplies organized:

- **Side Shelves:** Two shelves located under the drawing surfaces provide quick access to pens, chalk, and other small items.
- **Lower Shelves with Fabric Boxes:** Two additional lower shelves are equipped with two removable fabric storage boxes, offering ample space for larger art supplies or toys.

- **Paint Cups:** Two spill-proof paint cups are included for use with liquid paints.



Image: Highlights the easel's storage capabilities, showing the three side trays and two large fabric storage compartments at the bottom.

MAINTENANCE

- **Cleaning the Whiteboard:** Use a dry-erase eraser or a soft, damp cloth to clean the whiteboard surface. For stubborn marks, a whiteboard cleaner can be used.
- **Cleaning the Chalkboard:** Wipe the chalkboard with a damp cloth or a chalkboard eraser. Allow it to dry completely before next use.
- **Cleaning Paint Cups:** The paint cups are designed for easy cleaning, even after using oil paints. Wash them with water and mild soap.
- **General Cleaning:** Wipe the wooden frame with a soft, dry cloth. Avoid abrasive cleaners or harsh chemicals.
- **Storage:** Store the easel in a dry environment away from extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Easel is wobbly or unstable.	Loose screws or incorrect assembly.	Check all screws and tighten them. Refer to the assembly instructions to ensure correct setup.
Whiteboard marks are difficult to erase.	Incorrect markers used (e.g., permanent markers) or whiteboard needs deeper cleaning.	Ensure only dry-erase markers are used. Use a specialized whiteboard cleaner for stubborn marks.
Chalkboard is dusty or leaves residue.	Normal chalk residue or board needs cleaning.	Wipe with a damp cloth after use. Ensure the board is dry before writing again.

SPECIFICATIONS

Feature	Detail
Model	B0CCJWC2ZD
Material	MDF (Medium-Density Fiberboard)
Overall Dimensions (L x W x H)	59 x 50 x 117 cm (23.2 x 19.7 x 46.1 inches)
Drawing Surface Dimensions (L x W)	47 x 38.5 cm (18.5 x 15.2 inches)
Product Weight	11.5 kg (25.3 lbs)
Recommended Age	3 years and above
Color Options (as per description)	Blue, Coffee, Grey, Yellow, Pink, Natural

Produktabmessungen



Image: Detailed diagram showing the dimensions of the easel, including height, width, depth, and drawing surface size.