

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KRUPS](#) /

› [KRUPS 14 Cup Programmable Coffee Maker: Stainless Steel Design, Digital Display, 3 Brew Strengths, 4-Hour Keep Warm Function, and Dishwasher-Safe Parts for Effortless Coffee Making 14-Cup Glass](#)

KRUPS KM208D50

KRUPS 14 Cup Programmable Coffee Maker Instruction Manual

Model: KM208D50 | Brand: KRUPS

INTRODUCTION

Elevate your morning routine with the KRUPS 14 Cup Programmable Coffee Maker. This versatile appliance is designed for coffee enthusiasts and busy households, combining sleek stainless steel design with advanced functionality. With its generous 14-cup capacity, it's ideal for families, entertaining, or enjoying multiple cups throughout the day. Key features include programmability up to 24 hours in advance, three customizable brew strengths (mild, medium, or bold), a Flavor-Max system for optimal taste, and a 4-hour keep-warm function with auto shut-off for safety and efficiency. User convenience is prioritized with a reusable coffee filter, dishwasher-safe parts, and a large water tank opening for easy filling.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

COMPONENTS

- Coffee Maker Unit (Stainless Steel & Black)
- 14-Cup Glass Carafe
- Reusable Coffee Filter
- Measuring Spoon



The main KRUPS 14-Cup Programmable Coffee Maker unit.



Demonstration of the large 14-cup capacity, showing coffee being poured from the carafe.



Close-up of the digital display, showing the programmable clock set to 07:15 AM.



Image illustrating the three coffee strength options (mild, medium, bold) with coffee cups.



The coffee maker with its warming plate illuminated, indicating the 4-hour keep-warm function.



The carafe and filter basket placed in a dishwasher, highlighting their dishwasher-safe feature.



Diagram showing the dimensions of the coffee maker: 34.6 cm (13.6 in) height, 24.1 cm (9.5 in) depth, and 18.6 cm (7.3 in) width.

SETUP

Initial Cleaning

1. Before first use, wash the carafe, carafe lid, and reusable filter in warm, soapy water. Rinse thoroughly. These parts are also dishwasher-safe.
2. Wipe the exterior of the coffee maker with a soft, damp cloth. Do not immerse the unit in water.

First Use (Cleaning Cycle)

1. Place the coffee maker on a flat, stable, heat-resistant surface.
2. Fill the water tank with fresh, cold water up to the 14-cup MAX line. The large water tank opening helps minimize spills.
3. Place the empty reusable filter into the filter basket.
4. Place the empty carafe with its lid on the warming plate.
5. Plug the power cord into a standard electrical outlet.
6. Press the 'Start/Pause' button to begin a brewing cycle with only water. This will clean the internal components.
7. Once the cycle is complete, discard the water from the carafe. Your coffee maker is now ready for use.

OPERATING INSTRUCTIONS

Brewing Coffee

1. Fill the water tank with fresh, cold water to your desired number of cups (up to 14 cups). The water level indicator on the side helps with accurate measurement.
2. Add your desired amount of ground coffee into the reusable filter. For optimal flavor, refer to the recommended coffee-to-water ratio (e.g., 1 tablespoon of coffee per 5 ounces of water, adjust to taste).
3. Place the reusable filter into the filter basket. Ensure the carafe is placed correctly on the warming plate.
4. Press the 'Strength' button to select your preferred brew strength: Mild, Medium, or Bold. The digital display will indicate the selected strength.
5. Press the 'Start/Pause' button to begin the brewing process. The indicator light will illuminate.
6. The coffee maker features a 'Pause & Serve' function, allowing you to temporarily remove the carafe during brewing to pour a cup. Replace the carafe within 20 seconds to prevent overflow.
7. Once brewing is complete, the coffee maker will automatically switch to the 'Keep Warm' mode, maintaining coffee temperature for up to 4 hours. After 4 hours, the auto shut-off feature will activate.

Setting the Programmable Timer

1. To set the current time, press the 'Hour' button until the correct hour is displayed. Then press the 'Min' button until the correct minute is displayed. The time will be set automatically.
2. To program a delayed brew time, press the 'Prog' button. The display will show 'PROG'.
3. Use the 'Hour' and 'Min' buttons to set your desired brew start time (up to 24 hours in advance).
4. Press the 'Prog' button again to confirm the programmed time. The 'PROG' indicator light will illuminate.
5. Ensure the water tank is filled and coffee grounds are in the filter basket. The coffee maker will automatically start brewing at the programmed time.

MAINTENANCE & CLEANING

Daily Cleaning

- Always unplug the coffee maker before cleaning.
- Discard used coffee grounds from the reusable filter.
- Wash the carafe, carafe lid, and reusable filter in warm, soapy water. Rinse thoroughly. These parts are dishwasher-safe for convenience.
- Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.

Descaling (Decalcification)

Mineral deposits from water can build up in your coffee maker over time, affecting its performance and coffee taste. Descaling should be performed regularly, depending on water hardness and frequency of use (e.g., every 2-3 months).

1. Prepare a descaling solution by mixing white vinegar and cold water in equal parts. Fill the water tank with this solution up to the 14-cup MAX line.
2. Place the empty reusable filter into the filter basket and the empty carafe on the warming plate.
3. Press the 'Start/Pause' button to run a full brewing cycle with the descaling solution.
4. After the cycle is complete, discard the solution from the carafe.
5. Run 2-3 full cycles with fresh, cold water only to rinse the coffee maker thoroughly and remove any residual vinegar taste.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee maker does not turn on.	Not plugged in; Power outage; Faulty outlet.	Ensure unit is securely plugged in; Check circuit breaker; Try a different outlet.
Coffee does not brew.	No water in tank; Carafe not properly placed; Filter basket clogged.	Fill water tank; Ensure carafe is correctly seated on warming plate; Clean filter basket and reusable filter.
Coffee is too weak.	Not enough coffee grounds; Incorrect brew strength selected.	Add more coffee grounds; Select a stronger brew strength (Medium or Bold).
Coffee is too strong.	Too many coffee grounds; Incorrect brew strength selected.	Reduce coffee grounds; Select a milder brew strength (Mild or Medium).
Water/coffee overflows from filter basket.	Too much water/coffee grounds; Filter basket clogged; Carafe not on warming plate.	Do not exceed MAX fill lines; Clean filter basket/reusable filter; Ensure carafe is properly placed.

SPECIFICATIONS

- **Brand:** KRUPS
- **Model Name:** Newer model (KM208D50)
- **Color:** Stainless Steel
- **Product Dimensions:** 9.5"D x 7.32"W x 13.62"H
- **Item Weight:** 3.81 pounds
- **Coffee Maker Type:** Drip Coffee Machine
- **Capacity:** 14 Cups
- **Special Feature:** Programmable, 4-Hour Keep Warm, Auto Shut-off, 3 Brew Strengths
- **Filter Type:** Reusable (Paper filter compatible)
- **Style:** Glass Carafe
- **Exterior Finish:** Stainless Steel
- **Included Components:** Carafe, Reusable Filter, Measuring Spoon
- **Operation Mode:** Fully Automatic
- **Human Interface Input:** Buttons
- **Manufacturer:** Groupe SEB
- **Country of Origin:** China
- **UPC:** 010942228257

WARRANTY & SUPPORT

For detailed warranty information and customer support, please refer to the official product documentation. A digital copy of the warranty and user guide can be found via the link below:

[View Warranty & User Guide \(PDF\)](#)