

DCCStands Payment Pouch

DCCStands Payment Pouch Instruction Manual

Model: Payment Pouch | Brand: DCCStands

INTRODUCTION

Thank you for choosing the DCCStands Payment Pouch. This heavy-duty vertical pouch is designed to securely carry your mobile payment devices, offering protection and flexible usage options. It features cushioning to safeguard your device from drops and jarring, and its universal size accommodates a wide range of mobile POS systems, including Clover Flex 3, Clover Flex 4, A920, Toast, Square, and various wireless devices from Dejavoo, Ingenico, Verifone, Castles, and PAX.

The pouch can be worn in three versatile ways: with the adjustable strap around the waist as a holster, over the shoulder as a cross-body carrying case, or without the strap, utilizing the rugged metal belt clip to secure it directly onto your garment or belt.

PACKAGE CONTENTS

- 1 x Payment Pouch
- 1 x Adjustable Sling/Waistbelt Strap (detachable)
- 1 x Rugged Metal Belt Clip (pre-attached)

SETUP INSTRUCTIONS

1. Attaching the Sling/Waistbelt Strap

The adjustable strap allows for both waistbelt and cross-body carrying. To attach the strap, locate the two D-rings on the upper corners of the pouch. Thread each end of the strap through the corresponding D-ring and secure the buckles. Adjust the strap length for a comfortable fit, whether worn around the waist or across the body.



Image: The payment pouch with its adjustable strap, ready for use with a device.

2. Using the Rugged Metal Belt Clip

The payment pouch features a pre-attached rugged metal belt clip on its rear. This clip allows you to secure the pouch directly to your belt, waistband, or other garment without using the strap. Ensure the clip is firmly attached to prevent

accidental detachment.





Image: Rear view of the pouch highlighting the durable metal belt clip.



Image: The payment pouch securely clipped onto a belt for hands-free carrying.

OPERATING INSTRUCTIONS

1. Inserting Your Device

Gently slide your mobile payment device (e.g., Clover Flex, A920) into the main compartment of the pouch. The pouch is designed with cushioning to provide a snug and protective fit. Ensure the device is fully seated within the pouch for maximum security and protection.

2. Wearing the Pouch

- **Waistbelt Holster:** Adjust the strap to fit comfortably around your waist. The pouch should rest securely at your side or front, allowing easy access to your device.



Image: The payment pouch worn around the waist, functioning as a holster.

- **Cross-Body Carrying Case:** Lengthen the strap to wear the pouch diagonally across your body. This method distributes weight evenly and keeps your device accessible while on the move.



Image: The payment pouch worn across the body for convenient carrying.

- **Clip-On:** If you prefer not to use the strap, detach it and use only the metal belt clip. Secure the clip onto your belt or waistband. This provides a compact and secure carrying option.

MAINTENANCE

Cleaning the Pouch

The payment pouch is made from durable canvas material. To clean, gently wipe the exterior with a damp cloth and mild

soap if necessary. Avoid harsh chemicals or abrasive cleaners, as these may damage the fabric. Allow the pouch to air dry completely before reinserting your device.

Strap and Clip Care

Periodically check the strap and belt clip for any signs of wear or damage. Ensure all buckles and fasteners are functioning correctly. If the metal clip becomes dirty, wipe it clean with a dry cloth.

TROUBLESHOOTING

Device Does Not Fit

The DCCStands Payment Pouch is designed for universal compatibility with most mobile POS devices. If your device does not fit, ensure it is within the typical dimensions of devices like Clover Flex, A920, Toast, or Square terminals. Avoid forcing the device into the pouch, as this may cause damage to both the device and the pouch.

Strap or Clip Issues

If the strap feels uncomfortable or the clip does not secure properly, re-examine the attachment points and adjustments. Ensure buckles are fully engaged and the strap is not twisted. For the belt clip, make sure it is gripping a sturdy part of your clothing or belt.

SPECIFICATIONS

- **Material:** Canvas
- **Color:** Gray
- **Fastener Type:** Clip On (Rugged Metal Belt Clip)
- **Compatibility:** Universal size, fits most mobile devices and small tablet POS systems including Clover Flex 3, Clover Flex 4, A920, Toast, Square, Dejavoo, Ingenico, Verifone, Castles, PAX, and more.
- **Carrying Options:** Waistbelt, Cross-body, Clip-on
- **Protection:** Cushioned interior for drop and jarring protection

WARRANTY AND SUPPORT

Warranty Information

This DCCStands Payment Pouch comes with a 1-year limited warranty against manufacturing defects. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, concerns, or support needs regarding your DCCStands Payment Pouch, please contact DCCSupply customer service. Refer to your purchase documentation or the DCCSupply website for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question