

## KRUPS KM209D50

# KRUPS Simply Brew 14-Cup Programmable Coffee Maker Instruction Manual

Model: KM209D50 | Brand: KRUPS

## INTRODUCTION

The KRUPS Simply Brew 14 Cup Programmable Coffee Maker is designed to enhance your coffee experience with its versatile features and user-friendly operation. Ideal for families, offices, or entertaining, this appliance ensures perfectly brewed coffee every time. Its programmable functionality allows for convenient brewing up to 24 hours in advance, and customizable strength settings cater to individual taste preferences.

## Key Features

- **Large 14-Cup Capacity:** Perfect for serving multiple individuals or for those who enjoy several cups throughout the day.
- **24-Hour Programmable Functionality:** Set your brew time in advance for fresh coffee whenever you need it.
- **Three Brew Strengths:** Choose from mild, medium, or bold to customize your coffee's intensity.
- **4-Hour Keep Warm:** The insulated stainless steel carafe maintains coffee temperature for extended periods.
- **Reusable Coffee Filter:** Environmentally friendly and cost-effective, eliminating the need for disposable paper filters.
- **Dishwasher-Safe Carafe:** Ensures easy and convenient cleanup.



Image: The KRUPS Simply Brew 14-Cup Programmable Coffee Maker, showcasing its sleek design and stainless steel finish.

## PRODUCT COMPONENTS

Familiarize yourself with the main parts of your coffee maker:

Component	Description
Main Unit	Houses the heating element, water reservoir, and control panel.

Stainless Steel Carafe	Insulated carafe for collecting and keeping coffee warm.
Reusable Filter	Basket-style filter for coffee grounds, washable and reusable.
Filter Holder	Holds the reusable filter in place during brewing.
Water Reservoir	Area for filling water, with clear level markings.
Control Panel	Digital screen and buttons for programming and operation.
Measuring Spoon	Included for accurate coffee ground measurements.



Image: Overview of the coffee maker with key dimensions, illustrating its compact design.

## SETUP AND FIRST USE

---

### Unpacking

1. Remove all packaging materials, stickers, and labels from the coffee maker.
2. Ensure all components listed in the previous section are present.

### Initial Cleaning

1. Before first use, wash the carafe, reusable filter, and filter holder in warm, soapy water. Rinse thoroughly.
2. Wipe the exterior of the main unit with a damp cloth.
3. Run two full cycles of plain water through the coffee maker without coffee grounds to clean the internal components. Discard the water after each cycle.

### Water Reservoir Filling

1. Open the lid of the water reservoir.
2. Fill the water reservoir with fresh, cold water up to the desired 14-cup mark using the carafe or a separate container. The large opening ensures easy, spill-free filling.
3. Close the reservoir lid securely.

# LARGE FAMILY CAPACITY

Brew up to 14 cups



Image: A hand pouring water into the coffee maker's water reservoir, demonstrating the large capacity.

## OPERATING INSTRUCTIONS

### Basic Brewing

1. After filling the water reservoir, place the reusable filter into the filter holder.
2. Add your desired amount of ground coffee into the reusable filter. Use the included measuring spoon for accurate measurements (approximately 1 tablespoon per 2 cups of water, adjust to taste).
3. Place the carafe on the warming plate.
4. Press the 'Start/Stop' button on the control panel to begin brewing. The digital display will illuminate.

### Programmable Brewing (24-Hour Timer)

1. Prepare the coffee maker with water and coffee grounds as described in 'Basic Brewing'.
2. Press the 'Time/Prog' button. The clock display will flash.
3. Use the 'Hour' and 'Min' buttons to set your desired brew time.

4. Press the 'Time/Prog' button again to confirm the programmed time. A small blue dot will appear on the display, indicating the timer is set.
5. The coffee maker will automatically start brewing at the programmed time.

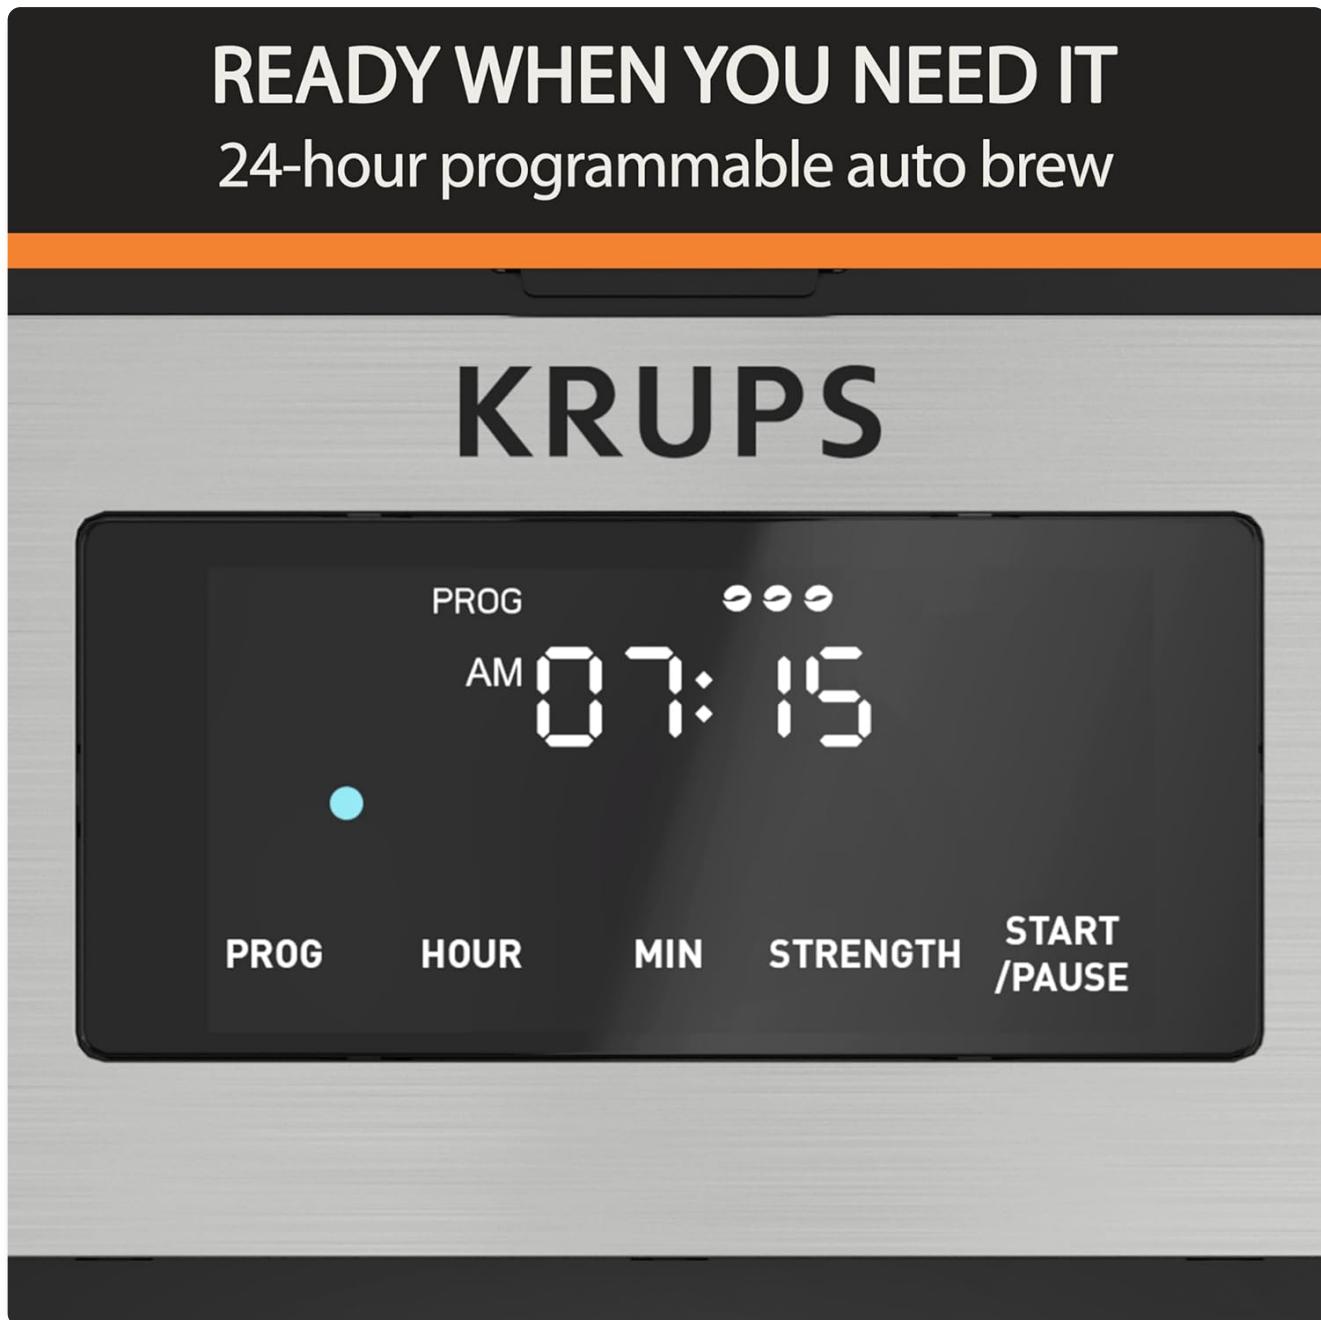


Image: Close-up of the digital control panel, showing the programmable timer and strength settings.

### Adjusting Brew Strength

1. Before starting a brew cycle, press the 'Strength' button repeatedly to cycle through the three available options: mild, medium, or bold.
2. The selected strength will be indicated by the number of illuminated coffee bean icons on the display.

# TAILORED TO YOUR TASTE

## 3 coffee strengths – mild, medium, bold



Image: Three cups of coffee representing different brew strengths (mild, medium, bold), illustrating the customization feature.

### Keep Warm Function

1. The insulated stainless steel carafe is designed to keep your coffee hot for up to 4 hours, even when removed from the warming plate.
2. The warming plate itself will maintain temperature for a set period after brewing is complete (refer to specific model details in specifications for exact duration).

# CONVENIENT THERMAL CARAFE

## Hot up to 4 hours to enjoy with your guests



Image: The insulated stainless steel carafe on a kitchen counter, highlighting its ability to keep coffee warm.

### MAINTENANCE AND CLEANING

#### Daily Cleaning

1. After each use, unplug the coffee maker and allow it to cool.
2. Remove the reusable filter and discard used coffee grounds. Rinse the filter and filter holder under running water.
3. The stainless steel carafe is dishwasher-safe for easy cleaning. Alternatively, wash it with warm, soapy water and rinse thoroughly.
4. Wipe the exterior of the coffee maker with a damp cloth. Do not immerse the main unit in water.

# EASY TO CLEAN

## Drip-free dishwasher safe carafe



Image: The carafe placed in a dishwasher, illustrating its dishwasher-safe feature for easy cleaning.

### Descaling

To maintain optimal performance and extend the life of your coffee maker, descale the machine every 3-6 months, depending on water hardness. Follow these general steps:

1. Fill the water reservoir with a solution of white vinegar and water (e.g., 1 part vinegar to 2 parts water).
2. Place an empty carafe on the warming plate.
3. Run a full brew cycle.
4. After the cycle, turn off the coffee maker and let the solution sit in the carafe for 15-30 minutes.
5. Discard the solution and run 2-3 cycles of plain, fresh water through the machine to rinse thoroughly.

### TROUBLESHOOTING

If you encounter issues with your coffee maker, refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution
Coffee does not brew	No water in reservoir; not plugged in; power button not pressed.	Fill reservoir; ensure plugged in; press 'Start/Stop' button.
Coffee tastes weak	Not enough coffee grounds; incorrect brew strength selected.	Add more coffee grounds; select a bolder brew strength.
Coffee overflows filter	Too many coffee grounds; filter not properly seated.	Reduce coffee grounds; ensure filter is correctly placed.
Coffee is not hot enough	Carafe not on warming plate; machine needs descaling.	Ensure carafe is on plate; descale the machine.

## TECHNICAL SPECIFICATIONS


Specification	Detail
Brand	KRUPS
Model Name	KM209D50
Capacity	14 Cups
Color	Stainless Steel
Product Dimensions	9.5"D x 7.3"W x 14.41"H
Power	1050 Watts
Voltage	120 Volts
Filter Type	Reusable
Carafe Material	Stainless Steel (Thermal)
UPC	010942228240

## WARRANTY AND SUPPORT

For detailed warranty information, please refer to the official Warranty (PDF) document provided by KRUPS. This document outlines the terms and conditions of your product's warranty.

For further assistance, troubleshooting not covered in this manual, or to inquire about replacement parts, please contact KRUPS customer support. Contact information can typically be found on the official KRUPS website or within the warranty document.

You can access the official user guide and warranty information [here](#).

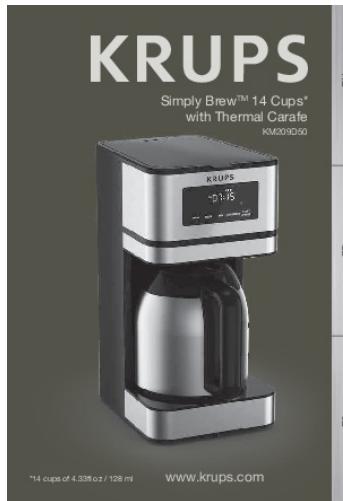

### [KRUPS Simply Brew™ 14 Cups\\* with Thermal Carafe User Manual](#)

User manual for the KRUPS Simply Brew™ 14 Cups\* coffee maker (Model KM209D50). Learn about safety, brewing, maintenance, and settings for optimal coffee preparation.

lang:en score:18 filesize: 785.2 K page\_count: 23 document date: 2023-06-27