

[Manuals.plus](#) /

› [JOBYNA](#) /

› JOBYNA 2-in-1 Electric Foot Warmer and Heating Pad (Model ZF-FR-A01-NAY-EU) Instruction Manual

JOBYNA ZF-FR-A01-NAY-EU

JOBYNA 2-in-1 Electric Foot Warmer and Heating Pad

Model: ZF-FR-A01-NAY-EU

INTRODUCTION

Thank you for choosing the JOBYNA 2-in-1 Electric Foot Warmer and Heating Pad. This versatile product is designed to provide comfortable heat therapy for various body parts, including your feet, back, shoulders, and abdomen. Please read this manual carefully before use to ensure safe and optimal operation.

Perfect fit for all parts of the body

Bring warmth & Enjoy full-body



Image: The JOBYNA 2-in-1 Electric Foot Warmer and Heating Pad in its flat heating pad configuration.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Do not use while sleeping.
- Do not use on infants, incapacitated persons, or persons insensitive to heat.
- Never use pins or other metallic objects with this appliance.
- Do not use if the pad is wet.
- Inspect the pad, cord, and controller before each use for any signs of wear or damage. If damaged, do not use.
- Do not fold, crease, or bunch the pad tightly during use.
- Unplug the appliance when not in use.
- Keep out of reach of children.

- This appliance is for household use only.

PRODUCT FEATURES

- **2-in-1 Functionality:** Easily converts between a foot warmer and a flat heating pad (45x70cm).
- **Rapid Heating:** Integrated technology provides quick and uniform heat distribution.
- **Precise Temperature Control:** Adjustable from 30°C to 70°C in 1°C increments.
- **Adjustable Timer:** Set heating duration from 10 to 90 minutes in 5-minute increments.
- **Automatic Shut-off & Overheat Protection:** Ensures safety and energy efficiency.
- **Versatile Application:** Suitable for feet, neck, shoulders, back, arms, muscles, lower abdomen, and legs.
- **Elastic Belt:** For secure attachment to various body parts.
- **Ultra-Soft Flannel:** High-quality, skin-friendly material for comfort and insulation.
- **Machine Washable:** Detachable controller allows for easy cleaning (below 30°C).



Image: The heating pad demonstrating its versatility for use on feet, back/waist, abdomen, shoulders, legs, and neck.

SETUP

1. **Unpack:** Carefully remove the heating pad and controller from the packaging.
2. **Connect Controller:** Ensure the controller cable is securely plugged into the heating pad's connector.
3. **Positioning:**
 - **As a Foot Warmer:** Fold the pad and secure the buttons to create a pouch for your feet.
 - **As a Heating Pad:** Lay the pad flat. Use the elastic belt if desired to secure it to your back, abdomen, or shoulders.
4. **Power Connection:** Plug the power cord into a standard 230V electrical outlet.

2 IN 1 CONVENIENT FOOT WARMER & HEATING PAD



Electric foot warmer(Button-on)

Electric heating pad(Unbutton)

Image: The heating pad shown in both foot warmer configuration (buttons fastened) and flat heating pad configuration (buttons unfastened).

OPERATING INSTRUCTIONS

Using the Controller

Accurate LED Multi-Function Controller

*makes adjusting the heat and time
to accommodate your comfort level easy*



30-70°C
Heating Setting



10-90 Minutes
Time Setting



Countdown
Display

Easy to Read
and Operate



Backlight
Design



- The default temperature is 50°C and the default time is 30 minutes.
- Recommended adjusting the temperature from low to high to avoid hurt from high temperature.

Image: Close-up of the LED multi-function controller with temperature and time settings displayed.

1. **Power On/Off:** Press the power button (usually red) to turn the heating pad on or off. The LED display will illuminate.
2. **Adjust Temperature:** Use the temperature control buttons (typically '+' and '-' next to a thermometer icon) to set your desired heat level between 30°C and 70°C. The default temperature is 50°C.
3. **Set Timer:** Use the timer control buttons (typically '+' and '-' next to a clock icon) to set the desired operating time between 10 and 90 minutes. The default time is 30 minutes. The pad will automatically shut off after the set time.
4. **Countdown Display:** The controller features a countdown display to show the remaining operating time.
5. **Backlight:** The controller has a backlight for easy reading in low light conditions.

Important Note: It is recommended to adjust the temperature from low to high to avoid discomfort from excessive heat.

Cleaning Instructions

Machine Washable

This heating pad can be washed by hand or machine, please remove the controller from the coupler before washing.



Do not iron



Do not tumble dry



Note:

The washing temperature should not be over 86°F/30°C.

Make sure the heating pad is completely dry before use.

Image: A person placing the heating pad into a washing machine, with an inset showing how to detach the controller.

1. **Disconnect Power:** Always unplug the heating pad from the electrical outlet before cleaning.
2. **Detach Controller:** Carefully disconnect the controller from the heating pad. The pad is machine washable, but the controller is not.
3. **Machine Wash:** The heating pad can be machine washed on a gentle cycle with cold water (below 30°C / 86°F). Do not bleach.
4. **Drying:** Hang to air dry completely. Do not tumble dry. Do not iron. Ensure the pad is absolutely dry before reconnecting the controller and using it again.
5. **Storage:** Store the cleaned and dried heating pad in a cool, dry place. Do not wrap the cord tightly around the controller or pad.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Heating pad does not turn on.	Not plugged in. Controller not securely connected. Power outlet malfunction. Overheat protection activated.	Ensure power cord is fully plugged into outlet. Check that the controller is firmly connected to the pad. Test the outlet with another appliance. Unplug the pad for 30 minutes, then try again.
Pad is not heating sufficiently.	Temperature setting is too low. Pad is folded or bunched.	Increase the temperature setting on the controller. Ensure the pad is laid flat or correctly configured as a foot warmer.
Controller display is not working.	Loose connection. Power issue.	Check all connections. Unplug and re-plug the unit.


If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Model Number	ZF-FR-A01-NAY-EU
Dimensions (L x W x H)	70 x 45 x 1 cm (27.5 x 17.7 x 0.4 inches)
Weight	800 grams (1.76 lbs)
Material	Polyester Flannel
Color	Blue
Voltage	230 Volts
Power	100 Watts
Temperature Range	30°C - 70°C
Timer Settings	10 - 90 minutes
Special Features	2-in-1 design (Foot Warmer/Heating Pad), Elastic Belt, Overheat Protection, Auto Shut-off, Machine Washable
Country of Origin	China

Extra Large Size

Opt 1

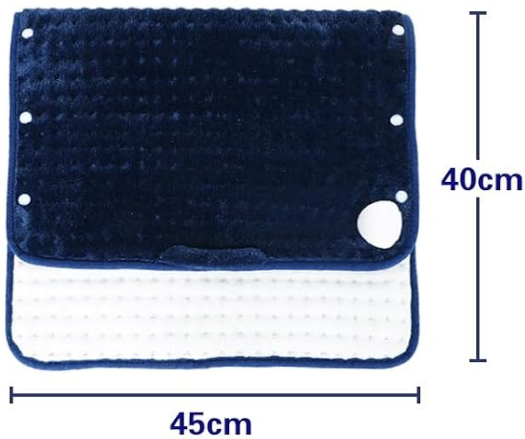

Foot Warmer (Button-on)

Opt 2



Heating Pad (UnButton)

Image: A diagram illustrating the dimensions of the product in both foot warmer (45x40cm) and flat heating pad (45x70cm) configurations.

WARRANTY AND SUPPORT

JOBYNA products are manufactured with quality and care. This product comes with:

- **30-Day Free Return:** For your peace of mind.
- **365-Day Warranty:** Covering manufacturing defects and malfunctions under normal use.
- **24-Hour Online Response:** Customer support is available to assist you with any questions or issues.

For warranty claims or technical support, please contact JOBYNA customer service through your purchase platform or visit the official JOBYNA website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question