

ECONTROLLY TRM-SBX130

ECONTROLLY TRM-SBX130 Replacement Remote Control User Manual

For Toshiba TY-SBX130B and TY-SBX130 2.0 Channel Soundbars

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY TRM-SBX130 replacement infrared remote control. This remote is designed to operate seamlessly with Toshiba TY-SBX130B and TY-SBX130 2.0 Channel Soundbars without requiring any programming.

The TRM-SBX130 remote control offers a straightforward solution for controlling your compatible Toshiba soundbar, providing access to essential functions such as power, volume, input selection, and sound modes.

2. PACKAGE CONTENTS

- 1 x ECONTROLLY TRM-SBX130 Replacement Remote Control

3. SETUP AND BATTERY INSTALLATION

The TRM-SBX130 remote control requires **one (1) AAA battery** for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert one (1) AAA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

The remote control is now ready for use with your Toshiba soundbar.

4. OPERATING INSTRUCTIONS

This remote control is pre-programmed and requires no additional setup. Point the remote control directly at the infrared receiver on your Toshiba soundbar for optimal performance.



Image 1: Layout of the ECONTROLLY TRM-SBX130 Replacement Remote Control. This image displays the front face of the black remote control, showing all buttons and their labels.

Button Functions:

- **Power ()**: Turns the soundbar on or off.
- **MUTE**: Mutes or unmutes the soundbar audio.
- **AUX**: Selects the Auxiliary input source.
- **BT**: Selects the Bluetooth input source.
- **OPTICAL**: Selects the Optical input source.
- **VOL+**: Increases the volume level.
- **VOL-**: Decreases the volume level.
- **(Previous Track)**: Skips to the previous track (when applicable, e.g., Bluetooth mode).
- **/ PAIR (Play/Pause / Pair)**: Plays or pauses audio; long-press to initiate Bluetooth pairing mode.
- **(Next Track)**: Skips to the next track (when applicable, e.g., Bluetooth mode).
- **NEWS**: Activates the News sound mode.
- **MOVIE**: Activates the Movie sound mode.
- **MUSIC**: Activates the Music sound mode.

5. MAINTENANCE

Battery Replacement:

Replace the AAA battery when the remote control's response becomes sluggish or stops working. Always use fresh, high-quality batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning:

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these may damage the surface or internal components.

Storage:

If the remote control will not be used for an extended period, remove the battery to prevent leakage and potential damage to the device.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control is not working.	◦ Dead or incorrectly inserted battery. ◦ Obstruction between remote and soundbar. ◦ Remote control is too far from the soundbar.	◦ Replace the AAA battery, ensuring correct polarity. ◦ Remove any objects blocking the line of sight to the soundbar's IR receiver. ◦ Move closer to the soundbar.
Buttons are unresponsive or delayed.	◦ Low battery power. ◦ Interference from other electronic devices.	◦ Replace the AAA battery. ◦ Ensure no other devices are emitting strong infrared signals nearby.

7. SPECIFICATIONS

- **Model:** TRM-SBX130
- **Compatibility:** Toshiba TY-SBX130B, Toshiba TY-SBX130 Soundbars
- **Control Type:** Infrared (IR)
- **Power Source:** 1 x AAA Battery (not included)
- **Dimensions:** 2.36 x 1.57 x 0.2 inches (approximate)
- **Weight:** 0.317 ounces (without battery)
- **Special Feature:** Pre-programmed, no setup required

8. WARRANTY AND SUPPORT

For any questions or issues regarding your ECONTROLLY TRM-SBX130 replacement remote control, please refer to the seller's return policy or contact the point of purchase for support. Specific warranty details may vary by retailer.