

[Manuals.plus](#) /

› [Yeaye](#) /

› Yeaye Toddler Remote Control Car Instruction Manual - Model 6618

Yeaye 6618

Yeaye Toddler Remote Control Car Instruction Manual

Model: 6618

INTRODUCTION

Thank you for purchasing the Yeaye Toddler Remote Control Car set. This manual provides essential information for the safe and proper use of your new remote control cars. Please read this manual thoroughly before operation and retain it for future reference.



Image: A family enjoying the Yeaye Toddler Remote Control Cars.

Safety Warnings

- Adult supervision is recommended during play.
- Keep away from water and moisture to prevent electrical damage.
- Do not mix old and new batteries, or different types of batteries.
- Ensure battery compartments are securely closed.
- Dispose of batteries responsibly.
- Avoid operating near stairs or other hazards.

Package Contents

Your Yeaye Toddler Remote Control Car set includes the following items:

- 2 x Dino Egg Remote Control Cars (Blue and Red)
- 2 x Remote Controls

- 2 x Dino Drivers (removable action figures)
- 1 x Instruction Manual (this document)



Image: Package contents including two remote control cars, two remote controllers, and two dinosaur driver figures.

SETUP

Battery Installation

Each remote control car and remote control requires batteries (not included). Please follow these steps:

1. Locate the battery compartment on the underside of each car and on the back of each remote control.
2. Using a screwdriver (not included), open the battery compartment cover.
3. Insert the required batteries, ensuring correct polarity (+/-). Refer to the markings inside the compartment.
4. Securely close the battery compartment cover with the screwdriver.

Note: The cars and remotes operate on a single frequency to prevent interference, allowing two cars to be played with

simultaneously without issues.



Image: Two children playing with the cars, highlighting the single frequency control that allows multiple cars to operate without interference.

OPERATING INSTRUCTIONS

Basic Driving

The remote controls are designed for easy operation, suitable for toddlers. Each remote has large, clearly marked buttons:

- **Forward Button:** Press to move the car forward.
- **Left-Backward Button:** Press to move the car backward and turn left simultaneously.

The cars are designed with special tire friction for smooth movement on various indoor surfaces, including carpets.



Image: The blue remote control car demonstrating its reverse movement.

Sound and Light Functions

Each car features flashing headlights and three sound buttons for an interactive play experience:

3 SOUND BUTTONS



Image: The red remote control car highlighting its three sound buttons and LED light feature.

- **Toddler Laughter Button:** Plays cheerful toddler laughter sounds.
- **Dinosaurs Roar Button:** Activates realistic dinosaur roaring sounds.
- **Honking Button:** Produces a car horn sound.
- **Flashing Headlights:** The car's headlights will flash during operation, adding to the play experience.

MAINTENANCE

Cleaning

- Wipe the cars and remote controls with a soft, dry cloth.
- Do not use harsh chemicals or abrasive cleaners.
- Avoid submerging the toys in water.

Storage

- When not in use for extended periods, remove batteries from both the cars and remote controls.

- Store the toys in a cool, dry place, away from direct sunlight.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Car does not move or respond to remote.	• Batteries are dead or incorrectly installed. • Car or remote is turned off.	• Replace batteries in both car and remote. Ensure correct polarity. • Turn on both the car and the remote control.
Car moves erratically or has limited range.	• Low battery power. • Interference from other electronic devices.	• Replace batteries. • Move to an area with less electronic interference.
Sound or lights not working.	• Low battery power. • Feature is not activated.	• Replace batteries. • Press the specific sound/light button on the car.

SPECIFICATIONS

Feature	Detail
Brand	Yeaye
Model Number	6618
Product Type	RC Car Set (2 cars)
Material	Plastic
Color	Blue and Red
Power Source	Battery powered (Batteries not included)
Recommended Age	18 months and up (Manufacturer recommended minimum age for full independent play: 36 months)
Educational Objectives	Motor skills, cognitive abilities, sensory development
Max Speed	3.2 feet/second
Product Dimensions (each car)	21.1 cm (L) x 12.4 cm (W) x 20.3 cm (H) / 8.3 in (L) x 4.9 in (W) x 8 in (H)
Features	Flashing headlights, realistic sounds, durable design, single frequency control
UPC	749085400335
ASIN	B0CCL6DKN9

WARRANTY AND SUPPORT

Yeaye Toys offers lifetime care for its products to ensure a smooth and enjoyable experience. If you have any questions regarding your Yeaye Toddler Remote Control Car set or require assistance, please do not hesitate to contact our customer service team.

We aim to respond to all inquiries within 24 hours.

For support, please visit our official website or contact us via the platform where you purchased the product.

© 2026 Yeaye. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question