

[manuals.plus](#) /

› [Celly](#) /

› [Celly VOS FREEBEAT WL Headphones User Manual](#)

## Celly VOSFREEBEAT

# Celly VOS FREEBEAT WL Headphones User Manual

MODEL: VOSFREEBEAT

---

## 1. INTRODUCTION

---

Thank you for choosing the Celly VOS FREEBEAT WL Headphones. This manual provides essential information for the proper setup, operation, and maintenance of your new wireless headphones. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.



Image 1.1: Front view of the Celly VOS FREEBEAT WL Headphones, showcasing the black and red flame design.

## 2. SAFETY INFORMATION

---

To ensure safe and proper use of your headphones, please observe the following guidelines:

- Do not expose the headphones to extreme temperatures, humidity, or corrosive substances.
- Avoid listening at high volume levels for extended periods to prevent hearing damage.
- Keep the headphones away from water and liquids.
- Do not attempt to disassemble or modify the headphones. This will void the warranty.
- Dispose of the product and its battery responsibly according to local regulations.

## 3. PACKAGE CONTENTS

---

Please check the package for the following items:

- Celly VOS FREEBEAT WL Headphones

- User Manual
- Charging Cable (USB-C, not explicitly listed but standard for wireless headphones)

## 4. PRODUCT OVERVIEW

The Celly VOS FREEBEAT WL Headphones are over-ear wireless headphones designed for comfortable listening and hands-free calls. They feature a distinctive black and red flame design and integrated controls on the earcup.



Image 4.1: Close-up view of the control buttons located on the side of the headphone earcup.

### 4.1. Controls and Indicators

- **Power Button:** Used to power on/off and initiate Bluetooth pairing.
- **Volume Up/Next Track Button:** Increases volume with a short press, skips to next track with a long press.
- **Volume Down/Previous Track Button:** Decreases volume with a short press, skips to previous track with a long press.
- **Multi-function Button (MFB):** Play/Pause, Answer/End Call, Voice Assistant activation.
- **LED Indicator:** Shows power status, charging status, and Bluetooth pairing mode.
- **Microphone:** Integrated for hands-free calling.
- **Charging Port:** For connecting the charging cable.

## 5. SETUP

### 5.1. Charging the Headphones

1. Connect the charging cable to the charging port on the headphones.
2. Connect the other end of the cable to a USB power source (e.g., computer USB port, USB wall adapter).

3. The LED indicator will show the charging status (e.g., red while charging, off or blue when fully charged).
4. A full charge typically takes approximately 2-3 hours.

## 5.2. Bluetooth Pairing

1. Ensure the headphones are fully charged.
2. Press and hold the Power button for approximately 3-5 seconds until the LED indicator flashes blue and red alternately, indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth.
4. Search for new Bluetooth devices. Select "VOSFREEBEAT" from the list of available devices.
5. Once connected, the LED indicator will typically flash blue slowly or turn solid blue.
6. If prompted for a password, enter "0000" (four zeros).

## 6. OPERATING INSTRUCTIONS

---

### 6.1. Power On/Off

- **Power On:** Press and hold the Power button for 2 seconds. The LED indicator will light up.
- **Power Off:** Press and hold the Power button for 3 seconds. The LED indicator will turn off.

### 6.2. Music Playback

- **Play/Pause:** Press the Multi-function Button (MFB) once.
- **Volume Up:** Short press the Volume Up button.
- **Volume Down:** Short press the Volume Down button.
- **Next Track:** Long press the Volume Up button.
- **Previous Track:** Long press the Volume Down button.

### 6.3. Call Management

- **Answer/End Call:** Press the Multi-function Button (MFB) once during an incoming call or active call.
- **Reject Call:** Press and hold the Multi-function Button (MFB) for 2 seconds during an incoming call.
- **Redial Last Number:** Double-press the Multi-function Button (MFB) when not on a call.
- **Activate Voice Assistant:** Triple-press the Multi-function Button (MFB) when not on a call.

## 7. MAINTENANCE

---

Proper maintenance ensures the longevity and performance of your headphones:

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the surfaces of the headphones. Do not use abrasive cleaners, alcohol, or chemical solvents.
- **Storage:** When not in use, store the headphones in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To preserve battery life, charge the headphones regularly, even if not used frequently. Avoid fully discharging the battery for extended periods.

## 8. TROUBLESHOOTING

---

If you encounter issues with your Celly VOS FREEBEAT WL Headphones, please refer to the following

common solutions:

Problem	Possible Cause	Solution
Headphones do not power on.	Low battery.	Charge the headphones fully.
Cannot pair with device.	Headphones not in pairing mode; Device Bluetooth off; Too far from device.	Ensure headphones are in pairing mode (flashing blue/red). Turn on Bluetooth on your device. Move headphones closer to your device (within 10 meters).
No sound.	Volume too low; Not connected; Incorrect audio output.	Increase headphone and device volume. Ensure headphones are successfully paired and connected. Check your device's audio output settings.
Poor sound quality.	Interference; Out of range; Low battery.	Move away from sources of interference (Wi-Fi routers, other Bluetooth devices). Move closer to your device. Charge the headphones.

## 9. SPECIFICATIONS

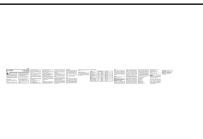
Feature	Detail
Model Name	VOSFREEBEAT
Connectivity Technology	Wireless (Bluetooth)
Form Factor	Over Ear
Special Features	Microphone included
Material Type	Thermoplastic Elastomer (TPE)
Item Weight	250 Grams
Color	Black
Recommended Uses	Listen to music and phone calls
Package Dimensions	20 x 19 x 9.5 cm

## 10. WARRANTY AND SUPPORT

Celly products are designed and manufactured to the highest quality standards. For information regarding warranty coverage and support, please refer to the warranty card included with your purchase or visit the official Celly website. Keep your proof of purchase for warranty claims.

For technical assistance or customer service inquiries, please contact Celly support through their official channels.

### Related Documents - VOSFREEBEAT

	<p><a href="#"><u>Celly BUZ1 Bluetooth Earphones User Manual</u></a></p> <p>User manual for Celly BUZ1 Bluetooth earphones, providing instructions on setup, operation, safety precautions, maintenance, and technical specifications.</p>
	<p><a href="#"><u>Celly BHTWINSACT Bluetooth Stereo Earphones User Manual</u></a></p> <p>Comprehensive user manual for Celly BHTWINSACT Bluetooth Stereo Earphones, covering safety, usage, technical specifications, and compliance information.</p>
	<p><a href="#"><u>CELLY Keith Haring TWS Earphones User Manual</u></a></p> <p>This document provides the user manual for the CELLY Keith Haring TWS earphones, including safety instructions, pairing, operation, and specifications. It is available in multiple languages.</p>
	<p><a href="#"><u>Celly BHTWINSACT Bluetooth Stereo Earphones User Manual</u></a></p> <p>User manual for Celly BHTWINSACT Bluetooth stereo earphones, covering setup, usage, safety, technical specifications, and disposal. Learn how to pair, use, and maintain your Celly wireless earbuds.</p>
	<p><a href="#"><u>Celly KIDSCAMPRINT User Manual: Camera with Printing Function</u></a></p> <p>This user manual provides comprehensive guidance for the Celly KIDSCAMPRINT camera, detailing safety precautions, operating instructions, technical specifications, and disposal information. Learn how to use the camera's printing function and various modes.</p>
	<p><a href="#"><u>Celly SPEAKERBIKE Multifunction Speaker User Manual</u></a></p> <p>User manual for the Celly SPEAKERBIKE multifunction speaker, covering safety instructions, charging, pairing, technical specifications, and disposal information.</p>