

[Manuals.plus](#) /

> [CIRCLE JOY](#) /

> CIRCLE JOY Rechargeable Electric Salt and Pepper Grinder Set User Manual

CIRCLE JOY KYMQ-33A-H-BS

CIRCLE JOY Rechargeable Electric Salt and Pepper Grinder Set

Model: KYMQ-33A-H-BS

1. INTRODUCTION

Thank you for choosing the CIRCLE JOY Rechargeable Electric Salt and Pepper Grinder Set. This modern and convenient appliance is designed to enhance your culinary experience by providing freshly ground spices with ease. Featuring a sleek stainless steel design, external coarseness adjustment, and a rechargeable battery, this set is a perfect addition to any kitchen or dining table.

2. SAFETY INFORMATION

- Read all instructions before using the appliance.
- Keep out of reach of children.
- Do not immerse the motor unit in water or any other liquid. Wipe clean with a damp cloth only.
- This product is **not dishwasher safe**.
- Use only the provided USB-C cable and charging base for recharging.
- Do not attempt to disassemble or repair the grinder yourself. Contact customer support if issues arise.
- Ensure the spice container is securely attached before operation.

3. PACKAGE CONTENTS

Your CIRCLE JOY Grinder Set includes:

- 2 x Electric Grinders (one for salt, one for pepper)
- 1 x Charging Base
- 1 x USB-C Charging Cable
- User Manual (this document)

4. SETUP

4.1. Initial Charging

Before first use, fully charge both grinders. Place them onto the included charging base and connect the USB-C cable to a suitable power source. The grinders feature internal rechargeable batteries, eliminating the need for disposable batteries.



Figure 1: Grinders on charging base, illustrating USB-C charging and dimensions.

4.2. Filling the Grinders

To fill the grinders with your desired spices (salt, pepper, or other dry spices):

1. Gently twist and pull the top stainless steel section of the grinder to separate it from the clear spice container.
2. Fill the clear container with your chosen spice. The container has a capacity of 95ml (approximately 3.21oz).
3. Align the top section with the clear container and twist it back into place until securely fastened.

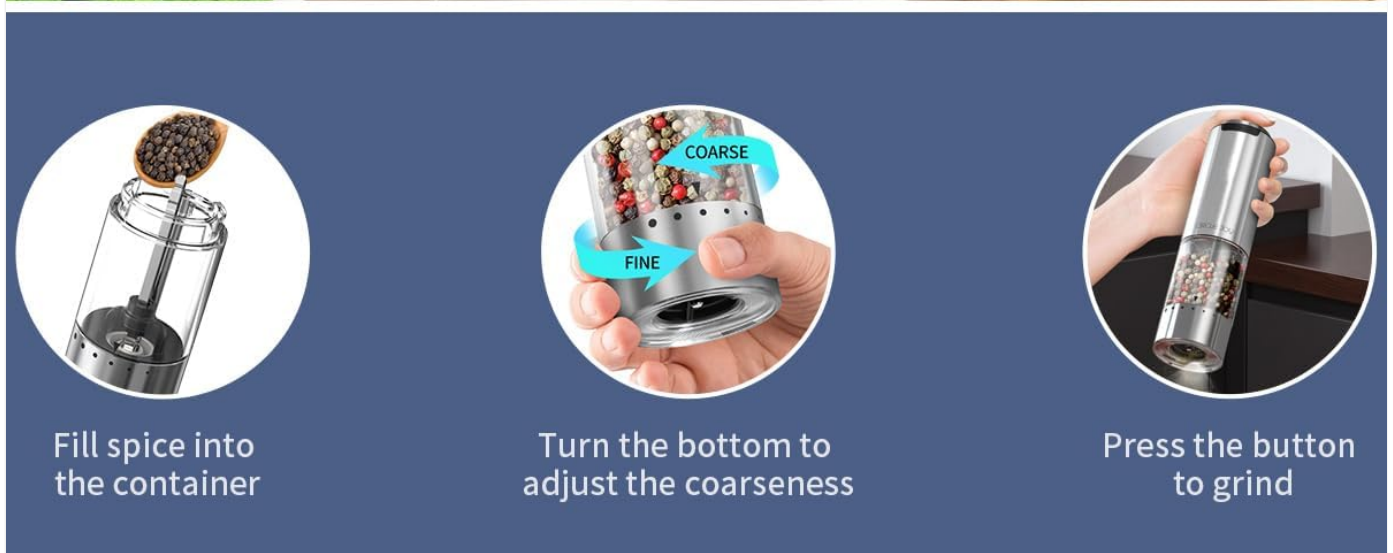


Figure 2: Steps for filling the grinder with spices.

5. OPERATION

5.1. Grinding Spices

The CIRCLE JOY grinders feature an easy one-button operation:

1. Hold the grinder over your food or dish.
2. Press and hold the large button located on the top of the grinder. The grinder will automatically begin to grind the spice.
3. A white LED light will illuminate during grinding, providing visibility of the amount of spice being dispensed, even in low light conditions.
4. Release the button to stop grinding.

EASY ONE-BUTTON OPERATION



Figure 3: One-button operation and LED light feature.

5.2. Adjusting Coarseness

The grinders feature an innovative external coarseness adjustment mechanism, allowing for hygienic and convenient changes to your grind size:

1. Locate the adjustment ring at the bottom of the clear spice container.
2. Rotate the ring to select your desired coarseness. Turning it towards 'FINE' will result in a finer grind, while turning it

towards 'COARSE' will produce a coarser grind. The unique 6-level external adjustment provides precision for various cooking needs.



Figure 4: External coarseness adjustment for hygiene and convenience.

5.3. Versatility

While ideal for salt and pepper, these grinders are also suitable for a variety of other dry spices, including nutmeg, cinnamon, cumin, and coriander, allowing you to explore a world of flavors.

6. MAINTENANCE

6.1. Cleaning

To ensure the longevity and optimal performance of your grinders, follow these cleaning instructions:

- Always ensure the grinder is turned off and disconnected from the charging base before cleaning.
- Wipe the exterior of the stainless steel body with a soft, damp cloth. Do not use abrasive cleaners or immerse the motor unit in water.
- The clear spice container can be detached and gently wiped clean. Ensure it is completely dry before reattaching and refilling.
- Do not place any part of the grinder in a dishwasher.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Grinder not operating	Low battery; Spice container not properly attached; Grinding mechanism jammed.	Charge the grinder fully; Ensure the spice container is securely twisted into place; Check for any large spice pieces jamming the mechanism and carefully remove them.
LED light not turning on	Low battery; LED malfunction.	Charge the grinder fully; If the grinder operates but the light does not, contact customer support.
Grinder not charging	Improper connection; Faulty cable/base.	Ensure the grinder is correctly seated on the charging base and the USB-C cable is firmly connected to both the base and power source; Try a different USB port or power adapter.
Inconsistent grind size	Coarseness setting needs adjustment; Grinding mechanism needs cleaning.	Adjust the external coarseness knob; Clean the grinding mechanism as per maintenance instructions.

8. SPECIFICATIONS

Feature	Detail
Model Number	KYMQ-33A-H-BS
Brand	CIRCLE JOY
Color	Rechargeable Set with Base (Silver)
Product Dimensions	2.99"W x 7.76"H
Item Weight	1.4 Pounds (total for set)
Operation Mode	Automatic
Recommended Uses	Kitchen (Salt, Pepper, various dry spices)
Dishwasher Safe	No

Feature	Detail
Capacity	95 Milliliters per grinder
Battery Type	Internal Rechargeable (USB-C charging)
Light Feature	White LED Light during grinding
Coarseness Adjustment	External Adjustable (6-level)

9. WARRANTY AND SUPPORT

CIRCLE JOY products are designed for quality and durability. For any questions, concerns, or support needs regarding your electric grinder set, please refer to the contact information provided with your purchase or visit the official CIRCLE JOY website. We are committed to providing professional service and support.

