

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [WOSCHER](#) /

› [Woscher i6 Cordless Tyre Inflator User Manual](#)

WOSCHER i6

Woscher i6 Cordless Tyre Inflator User Manual

Model: i6

1. INTRODUCTION

Thank you for choosing the Woscher i6 Cordless Tyre Inflator. This portable air pump is designed for convenient and efficient inflation of various items, including car, bike, and motorcycle tires, as well as sports balls. Featuring a powerful 4000mAh battery, automatic shut-off, and an emergency light, the i6 ensures reliable performance. Please read this manual thoroughly before use to ensure proper operation and maintenance.

2. PRODUCT OVERVIEW

2.1 Package Contents

The Woscher i6 Cordless Tyre Inflator package includes the following items:

- 1 x Mini Electric Air Pump
- 1 x Inflation Tube
- 1 x Cigarette Lighter Cable
- 1 x USB C- Data Cable
- 4 x Independent Gas Nozzles
- 1 x Flannel Packing Bag

2.2 Key Features

- **Cordless and Portable Design:** Compact ABS body for easy storage and transport.
- **High Capacity Battery:** Integrated 4000mAh rechargeable lithium battery for multiple inflations.
- **Maximum Pressure:** Up to 150 PSI for various inflation needs.
- **Automatic Shut-Off:** Stops inflation automatically once the preset pressure is reached.
- **Digital Display:** Clear display for real-time pressure monitoring and setting.
- **4 Air Fill Modes:** Pre-set options for Car, Bike, Motorcycle, and Sports Balls.
- **Emergency Light:** Built-in LED light for illumination in low-light conditions.
- **Power Bank Function:** Can be used to charge other devices via USB-C.
- **Dual Mode Inflation:** Supports both cordless operation and corded use via cigarette lighter cable.



Figure 1: Woscher i6 Tyre Inflator with key features.



Figure 2: Internal components and detailed features of the Woscher i6.

3. SPECIFICATIONS

Feature	Specification
Brand	WOSCHER
Model	i6
Colour	Black & Orange
Material	ABS PLASTIC
Item Weight	410 Grams
Product Dimensions	16.5L x 4W x 6H Centimeters
Power Source	Battery Powered

Feature	Specification
Maximum Pressure	150 Pound per Square Inch (PSI)
Operation Mode	Automatic
Voltage	7.4 Volts (DC)
Battery Type	Rechargeable Lithium (4000mAh)
Wattage	70W

4. SETUP

4.1 Charging the Inflator

1. Before first use, fully charge the Woscher i6.
2. Connect the provided USB Type-C data cable to the charging port on the inflator.
3. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a power source.
4. The digital display will indicate the charging status. Ensure the device is fully charged for optimal performance.

SUPPORTS FAST CHARGING FEATURE

4000mAh Li-ion Rechargeable Battery



Figure 3: Charging the Woscher i6 Tyre Inflator.

4.2 Attaching the Inflation Tube

1. Screw the inflation tube securely onto the air outlet port of the inflator.
2. Select the appropriate gas nozzle for the item you wish to inflate and attach it to the other end of the inflation tube.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

Press and hold the power button (usually the 'O' or mode button) for a few seconds to turn the inflator on or off.

5.2 Setting Desired Pressure

1. With the inflator powered on, press the 'M' (Mode) button to cycle through the available pressure units: PSI, BAR, KPA, Kg/cm². Select your preferred unit.
2. Press the '+' or '-' buttons to adjust the target pressure value. The digital display will show the current and

target pressure.

5.3 Selecting Inflation Mode

The Woscher i6 offers 4 pre-set inflation modes. Press the 'M' button repeatedly to cycle through Car, Bike, Motorcycle, and Sports Ball modes. Each mode has a default pressure setting, which can be further adjusted manually.

5.4 Starting and Stopping Inflation

1. Connect the inflation tube with the appropriate nozzle to the item you wish to inflate.
2. Press the inflation button (often indicated by a play/pause symbol) to start the inflation process. The inflator will display the real-time pressure.
3. The inflator will automatically stop once the preset pressure is reached. To manually stop inflation, press the inflation button again.



Figure 4: Dual mode inflation capability (cordless and corded).



Figure 5: The 4000mAh battery supports inflation for various items.

5.5 Using the Emergency Light

Press the light button (often indicated by a flashlight icon) to turn the emergency LED light on or off. This is useful for nighttime inflation or as a general utility light.

5.6 Power Bank Function

The Woscher i6 can act as a power bank. Connect your device to the USB-C port on the inflator using a compatible cable to charge it.

POCKET-SIZE TYRE INFLATOR

Hassle-Free Storage



Figure 6: Compact design allows for easy storage.

5.7 Instructional Videos

Your browser does not support the video tag.

Video 1: Demonstration of the Woscher i6 Cordless Tyre Inflator in use.

Your browser does not support the video tag.

Video 2: Overview of the Woscher i6 features and functionality.

6. MAINTENANCE

6.1 Cleaning

Wipe the exterior of the inflator with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the device is dry before storage.

6.2 Storage

Store the Woscher i6 in a cool, dry place, away from direct sunlight and extreme temperatures. Keep it out of reach of children. Ensure the battery is partially charged (around 50-70%) if storing for extended periods to prolong battery life.

6.3 Battery Care

To maintain battery health, avoid fully discharging the battery frequently. Recharge the device regularly, even if not in active use, to prevent deep discharge.

7. TROUBLESHOOTING

- **Inflator does not turn on:** Ensure the battery is charged. If not, connect to a power source using the USB-C cable.
- **Inflator does not inflate:** Check if the inflation tube is securely connected to both the inflator and the item. Verify that the target pressure is set above the current pressure.
- **Inaccurate pressure reading:** Ensure the nozzle is properly sealed to the valve stem. If issues persist, compare with a known accurate pressure gauge.
- **Slow inflation:** Check for any blockages in the inflation tube or nozzle. Ensure the battery has sufficient charge.

If you encounter issues not covered here, please contact customer support.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The Woscher i6 Cordless Tyre Inflator comes with a **1-year standard warranty**, which can be extended by an additional **1 year**, totaling a **1Y+1Y Extended Warranty**. Please refer to the warranty card included in your package for specific terms and conditions.

8.2 Customer Support

For any pre or post-purchase queries, technical assistance, or warranty claims, please contact Woscher Customer Support:

Support Number: +91 77778 08899

Operational Hours: Monday to Friday, 10:00 AM to 6:00 PM (IST)

Email: customerofficer@woscher.com

For warranty claims, please write to the provided email address from your registered email ID, mentioning your registered contact number and Order ID.



EXPERIENCE SEAMLESS SERVICE AND SUPPORT
BECAUSE YOUR PEACE OF MIND IS OUR PRIORITY

SATH NIBHAYE HAR MOD PE

 7-days Operational
(Mon to Fri / 10am to 6pm)

 WoscherCare Service Desk

 customerofficer@woscher.com

For warranty claims please write to us
from your registered email ID mentioning
the registered contact number and Order ID



 One Click
Chat Support

 PAN India
Service

 10/7 Service
Available

 Free Service
Pick-up & Drop*

*T&C apply

Figure 7: Woscher Customer Support Contact Information.