



[Manuals.plus](#) /

> [Midea](#) /

> Midea MF200D100W/T-SA Front Load Washer Dryer User Manual

Midea MF200D100W/T-SA

Midea MF200D100W/T-SA Front Load Washer Dryer User Manual

Model: MF200D100W/T-SA

INTRODUCTION

This manual provides essential information for the safe and efficient use of your Midea MF200D100W/T-SA Front Load Washer Dryer. Please read it thoroughly before installation, operation, and maintenance. Keep this manual for future reference.



Front view of the Midea MF200D100W/T-SA Front Load Washer Dryer.

SETUP INSTRUCTIONS

1. Unpacking

Carefully remove all packaging materials. Ensure no components are left inside the drum. The power cord is included with the unit.

2. Location Requirements

Place the appliance on a firm, level surface. Ensure adequate ventilation around the unit. Avoid direct sunlight or extreme temperatures. Maintain a minimum clearance of 10 cm from walls or other appliances.

3. Water Connection

Connect the water inlet hose to a cold water tap and to the inlet valve on the back of the machine. Ensure connections are tight to prevent leaks. Position the drain hose into a standpipe or laundry tub, ensuring it is securely fastened to prevent dislodgement during operation.

4. Power Connection

Connect the power cord to a grounded 220 Volt, 50 Hz electrical outlet. Ensure the outlet is easily accessible. The appliance operates at 500 Watts.

5. Leveling the Appliance

Use a spirit level to check if the machine is perfectly level. Adjust the leveling feet at the bottom of the appliance as needed. Proper leveling reduces vibration and noise during operation.



Side view of the Midea MF200D100W/T-SA Front Load Washer Dryer, showing leveling feet.

6. Initial Run

Before first use, run an empty wash cycle with a small amount of detergent to clean the drum and internal components.

OPERATING INSTRUCTIONS

1. Control Panel Overview

The appliance features push-button controls for program selection and settings. Refer to the symbols on the control panel for specific functions.

2. Loading Laundry

Open the front door and load laundry into the drum. Do not overload the machine. The maximum washing capacity is 10 kg, and the maximum drying capacity is 7 kg. Ensure no items are caught in the door seal before closing.

3. Adding Detergent

Add the appropriate amount of detergent and fabric softener to the dispenser drawers. Consult your detergent packaging for recommended quantities.

4. Program Selection

Turn the program selector dial or press the program buttons to choose one of the 14 available wash programs. For drying, select the dedicated drying cycle (1 drying cycle available). Available cycle options include Drain, Spin, and Rinse.

5. Starting a Cycle

Press the 'Start/Pause' button to begin the selected program. The machine will automatically proceed through the wash and dry phases (if a combined program is selected).

6. Wi-Fi Connectivity

This model supports Wi-Fi connectivity. Refer to the separate Wi-Fi setup guide for instructions on connecting your appliance to your home network and using smart features.

7. Child Lock

The appliance is equipped with a child lock feature to prevent accidental operation. Consult the control panel instructions for activating and deactivating the child lock.

MAINTENANCE

1. Cleaning the Drum

The stainless steel drum should be cleaned periodically. Use a dedicated washing machine cleaner or run a hot wash cycle with no laundry and a cup of white vinegar to remove residue and odors.

2. Cleaning Detergent Dispenser

Remove the detergent dispenser drawer and rinse it under running water to clear any detergent buildup. Clean the housing of the dispenser with a brush.

3. Cleaning Filters

Regularly check and clean the lint filter (for drying) and the drain pump filter (for washing) to ensure optimal performance and prevent blockages. Refer to the appliance diagrams for filter locations.

4. Exterior Cleaning

Wipe the exterior surfaces of the machine with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.

5. Winterization

If the appliance is to be stored in an unheated area, drain all water from the hoses and pump to prevent freezing and damage.

TROUBLESHOOTING

Before contacting service, review the following common issues and solutions:

- **Appliance does not start:** Ensure the power cord is securely plugged in, the door is fully closed, and the 'Start/Pause' button has been pressed. Check the circuit breaker.
- **No water filling:** Check if the water tap is open and the water inlet hose is not kinked or blocked.
- **Water leaks:** Verify that all hose connections are tight and the drain hose is correctly positioned. Check the detergent dispenser for overflow.
- **Excessive vibration/noise:** Ensure the appliance is level and all transit bolts (if any) have been removed. Check that the load is balanced inside the drum.
- **Error codes:** If an error code appears on the display, consult the specific error code section in the full user manual (if provided separately) or contact customer support.

If the problem persists after attempting these solutions, please contact Midea customer service.

SPECIFICATIONS

Feature	Specification
Brand	Midea
Model Number	MF200D100W/T-SA
Type	Front Load Washer Dryer
Washing Capacity	10 kg
Drying Capacity	7 kg
Color	Silver
Product Dimensions (D x W x H)	44 cm x 59.5 cm x 85 cm
Item Weight	33 kg
Voltage	220 Volts
Power	500 Watts
Annual Energy Consumption	417 kWh
Number of Washing Cycles	14
Number of Drying Cycles	1

Feature	Specification
Operating Mode	Fully Automatic
Control Type	Push Button
Special Features	Child Lock, Wi-Fi
Cycle Options	Drain, Spin, Rinse
Drum Material	Stainless Steel
Included Components	Power cord
Energy Efficiency	Energy Star compliant

WARRANTY AND SUPPORT

Warranty Information

This Midea MF200D100W/T-SA Front Load Washer Dryer comes with a manufacturer's warranty of two years from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal use conditions.

Customer Support

For technical assistance, service requests, or inquiries regarding your appliance, please contact Midea customer support. Contact details can typically be found on the Midea official website or in your purchase documentation. When contacting support, please have your model number (MF200D100W/T-SA) and serial number ready.