

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Gorenje](#) /

› [Gorenje GGI9C20B Freestanding Gas Cooker Instruction Manual](#)

## Gorenje GGI9C20B

# Gorenje GGI9C20B Freestanding Gas Cooker

## Instruction Manual

Model: GGI9C20B | Brand: Gorenje

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Gorenje GGI9C20B Freestanding Gas Cooker. Please read all instructions carefully before installation, operation, and maintenance. Keep this manual for future reference.

## 2. SAFETY INFORMATION

### Important Safety Warnings:

- Ensure proper ventilation in the kitchen when the appliance is in use.
- This appliance must be installed by a qualified technician in accordance with local regulations and gas safety standards.
- Do not store flammable materials near the cooker.
- Always supervise cooking, especially when using high heat.
- Keep children and pets away from the appliance during operation.
- The appliance surfaces become hot during use. Use oven mitts when handling hot items.
- Do not use abrasive cleaners or sharp objects that could damage the surfaces.

## 3. SETUP AND INSTALLATION

Proper installation is crucial for the safe and optimal performance of your gas cooker. It is highly recommended that installation be performed by a certified professional.

### 3.1 Unpacking

Carefully remove all packaging materials. Inspect the cooker for any signs of damage. Report any damage to your retailer immediately.

### 3.2 Placement and Dimensions

Position the cooker on a stable, level surface. Ensure adequate clearance from adjacent walls and cabinets as specified in the installation guide provided with the appliance. The cooker's dimensions are approximately 60 cm (Depth) x 90 cm (Width) x 87 cm (Height).



Figure 3.2.1: Gorenje GGI9C20B Gas Cooker with indicated dimensions for installation planning.

### 3.3 Gas and Electrical Connection

All gas and electrical connections must be carried out by a qualified and authorized technician. Ensure the gas supply pressure is correct and that the electrical supply matches the appliance's requirements (220V).

### 3.4 Initial Cleaning

Before first use, clean the hob and oven interior with a damp cloth and mild detergent. Ensure all surfaces are dry before operating the cooker.



Figure 3.4.1: Front view of the Gorenje GGI9C20B, ready for initial cleaning and setup.

## 4. OPERATING INSTRUCTIONS

Familiarize yourself with the controls before operating the cooker.



Figure 4.0.1: Control panel and hob layout of the Gorenje GGI9C20B.

## 4.1 Hob Operation

Your cooker features 5 gas burners, including a powerful wok burner, and robust cast iron pan supports.

- 1. Ignition:** The cooker is equipped with a one-hand ignition device. To ignite a burner, press the corresponding knob down and rotate it counter-clockwise to the desired flame level. The igniter will spark automatically. Hold the knob for a few seconds after ignition to allow the thermocouple to heat up and activate the gas flow.
- 2. Flame Adjustment:** Rotate the knob to adjust the flame size. A larger flame provides more heat.
- 3. Wok Burner:** The central wok burner is designed for high-heat cooking with a wok or large pans. Ensure the wok is properly seated on the dedicated support.
- 4. Turning Off:** Rotate the knob clockwise until it clicks into the 'off' position.

## 4.2 Oven Operation

The 105-litre multifunction oven features a fan for even heat distribution and catalytic self-cleaning sides.

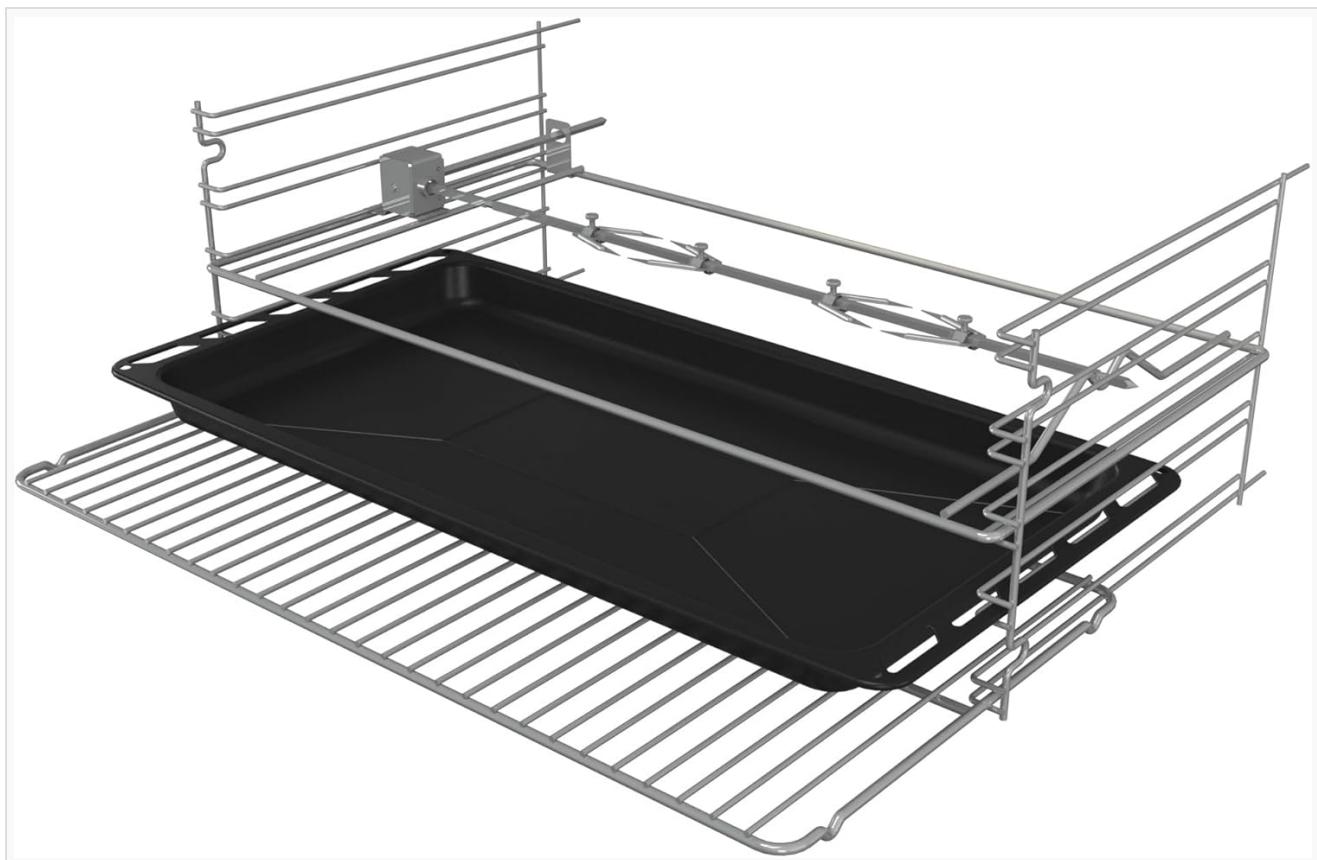


Figure 4.2.1: Interior of the Gorenje GGI9C20B oven with racks.

- 1. Function Selection:** Use the oven function selector knob to choose the desired cooking mode (e.g., conventional baking, fan-assisted, grill).
- 2. Temperature Setting:** Use the temperature control knob to set the desired oven temperature. The digital display may show the current temperature or a timer.
- 3. Preheating:** For best results, preheat the oven to the desired temperature before placing food inside.
- 4. Oven Racks:** Position the oven racks at the appropriate height for your dish. The oven comes with 2 racks.
- 5. Oven Light:** The oven light can be switched on to monitor cooking progress without opening the door.
- 6. Catalytic Self-Cleaning:** The oven features catalytic panels on the sides that absorb and break down grease during normal cooking temperatures. For heavy soiling, run the oven at its maximum temperature for approximately one hour. Ensure the oven is empty during this process.

## 5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life and efficiency of your cooker.

### 5.1 Hob Cleaning

- Allow the hob and pan supports to cool completely before cleaning.
- Remove the cast iron pan supports and burner caps/crowns. Wash them with warm soapy water. For stubborn stains, a non-abrasive cleaner suitable for cast iron can be used.
- Wipe the hob surface with a damp cloth and mild detergent. Dry thoroughly.
- Do not use abrasive pads, scourers, or harsh chemicals as they can damage the finish.

### 5.2 Oven Cleaning

- Ensure the oven is cool before cleaning.
- The catalytic panels on the oven sides are self-cleaning. For other interior surfaces, wipe with a damp cloth and mild detergent.
- The oven door features double glazing. Clean the glass with a glass cleaner, avoiding direct spray onto the seals.
- Remove oven racks and wash them in warm soapy water or a dishwasher.



Figure 5.2.1: Oven accessories, including racks and tray, which can be removed for cleaning.

## 6. TROUBLESHOOTING

Before contacting service, check the following common issues:

Problem	Possible Cause	Solution
Burner does not ignite	No gas supply; burner cap/crown misaligned; ignition electrode dirty.	Check gas valve; reposition burner parts; clean electrode gently.
Oven not heating	Power supply issue; oven function/temperature not set correctly.	Check power connection; ensure knobs are set to desired function and temperature.
Uneven cooking in oven	Food placed too close to elements; oven not preheated; fan issue.	Adjust rack position; preheat oven fully; ensure fan is operating.
Gas smell	Gas leak.	<b>Immediately turn off gas supply, open windows, do not operate electrical switches, and contact a qualified technician.</b>

If the problem persists after attempting these solutions, please contact Gorenje customer support or a qualified service technician.

## 7. SPECIFICATIONS

Key technical specifications for the Gorenje GGI9C20B Freestanding Gas Cooker:

**Model:** GGI9C20B

**Brand:** Gorenje

**Type:** Freestanding Gas Cooker

**Dimensions (H x W x D):** 87 x 90 x 60 cm

**Weight:** 68 Kilograms

**Oven Capacity:** 105 Liters

**Number of Burners:** 5 (including Wok burner)

**Pan Supports:** Cast Iron

**Ignition:** One-hand ignition device

**Oven Features:** Multifunction, Fan-assisted, Catalytic Self-Cleaning sides, Double glazed oven door

**Control Type:** Knobs

**Display:** Digital Display

**Voltage:** 220V

**Finish:** Matt Black

## 8. WARRANTY AND SUPPORT

Your Gorenje GGI9C20B Freestanding Gas Cooker comes with a **1 Year Warranty** from the date of purchase.

Please retain your proof of purchase for warranty claims.

For technical assistance, spare parts, or warranty service, please contact Gorenje customer support. Refer to the contact information provided with your purchase documentation or visit the official Gorenje website for regional support details.


Always ensure that any repairs or servicing are carried out by authorized service personnel to maintain the validity

of your warranty and ensure safety.

© 2023 Gorenje. All rights reserved.

## Related Documents - GGI9C20B

	<p><a href="#">Gorenje Free Standing Cooker: Electrical &amp; Gas Combination Instruction Manual</a></p> <p>Comprehensive instruction manual for Gorenje free-standing cookers, covering installation, safe operation, maintenance, and troubleshooting for electrical and gas combination models like GGI9B20S, GGI9C20X, GGI9C20B, GGI9C20W, and GK9C40X.</p>
	<p><a href="#">Gorenje Free Standing Cooker Instruction Manual</a></p> <p>User manual for Gorenje Free Standing Cooker (Electrical &amp; Gas Combination) detailing safety, installation, operation, and maintenance. Includes model numbers GGI9B20S, GGI9C20X, GGI9C20B, GGI9C20W, GK9C40X, GGI9C21B, GGI9C21W, and GI9C21X.</p>
	<p><a href="#">Gorenje Freestanding Gas-Electric Cooker User Manual</a></p> <p>Comprehensive user manual for the Gorenje freestanding gas-electric cooker, covering installation, operation, safety, maintenance, and troubleshooting.</p>
	<p><a href="#">Gorenje Freestanding Gas-Electric Cooker User Manual</a></p> <p>This user manual provides detailed instructions for operating and maintaining your Gorenje freestanding gas-electric cooker. It covers safety precautions, installation, usage of various cooking functions, cleaning, and troubleshooting.</p>
	<p><a href="#">Gorenje Mașină de Gătit Independentă - Manual de Utilizare</a></p> <p>Manual detaliat de utilizare pentru mașina de gătit independentă Gorenje, inclusiv instrucțiuni de siguranță, operare, întreținere și depanare pentru o utilizare optimă și sigură a aparatului dumneavoastră.</p>

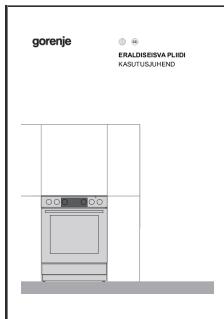

## [Gorenje Freestanding Cooker User Manual](#)

This user manual provides detailed instructions for operating and maintaining your Gorenje freestanding cooker. Learn about safety precautions, appliance features, cooking modes, and cleaning instructions to ensure safe and efficient use.