

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ZdalaMit](#) /

› **ZdalaMit Replacement Remote Control User Manual for BOLVA 4K UHD Smart TVs (Models: 65SVL20, 75SVL20, 58SVL20, 50SVL20, 58MVT20)**

**ZdalaMit 2e0cee1d-d92b-411d-bcd8-e24b92f21692**

# ZdalaMit Replacement Remote Control User Manual

For BOLVA 4K UHD Smart TV Models: 65SVL20, 75SVL20, 58SVL20, 50SVL20, 58MVT20

## 1. INTRODUCTION

This manual provides instructions for the ZdalaMit replacement remote control, designed for use with specific BOLVA 4K UHD Smart TV models. This remote offers direct compatibility without the need for complex programming or pairing procedures. Simply insert batteries, and it is ready for use.

### Compatible BOLVA TV Models:

- 65SVL20
- 75SVL20
- 58SVL20
- 50SVL20
- 58MVT20





Figure 1: Front view of the ZdalaMit Replacement Remote Control. This image displays the full layout of the remote, including the power button, number pad, volume and channel controls, navigation buttons, and dedicated app buttons for Netflix, YouTube, and Prime Video.

## 2. SETUP

The ZdalaMit replacement remote control is designed for immediate use with compatible BOLVA TV models.

No programming or pairing is required.

## 2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two (2) 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.

Once batteries are installed, the remote control is ready to operate your compatible BOLVA TV.



Figure 2: Angled view of the remote control. This perspective highlights the ergonomic design and provides a general indication of the battery compartment's location on the rear of the device.

## 3. OPERATING THE REMOTE CONTROL

---

This remote control functions similarly to your original BOLVA TV remote. Point the remote directly at your television's infrared receiver for optimal performance.

### 3.1 Key Functions

- **Power Button ( )**: Turns the TV on or off.
- **Number Pad (0-9)**: Directly select channels or input numerical values.
- **Volume Up/Down (+V / -V)**: Adjusts the sound level.
- **Channel Up/Down (^P / vP)**: Changes TV channels.
- **Navigation Buttons (▲ ▼ ◀ ▶)**: Move through menus and selections.
- **OK Button**: Confirms selections in menus.
- **Back Button**: Returns to the previous screen or menu.
- **Exit Button**: Exits the current menu or application.
- **Home Button ( )**: Accesses the TV's main smart hub or home screen.
- **Dedicated App Buttons (NETFLIX, YuTbe, prm video)**: Provides quick access to popular streaming services.
- **Media Control Buttons (Play, Pause, Fast Forward, Rewind)**: Controls playback of media content.

## 4. MAINTENANCE

---

Proper care ensures the longevity and reliable performance of your remote control.

### 4.1 Cleaning

To clean the remote, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's electronics or finish.

### 4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries simultaneously with new 1.5V AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

### 4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can cause damage to the device.

## 5. TROUBLESHOOTING

---

If you encounter issues with your remote control, please refer to the following common problems and solutions:

Problem	Solution
---------	----------

Problem	Solution
Remote is not responding.	<ul style="list-style-type: none"> <li>Ensure batteries are correctly installed with proper polarity.</li> <li>Replace old batteries with new 1.5V AAA alkaline batteries.</li> <li>Check for any obstructions between the remote and the TV's infrared receiver.</li> <li>Ensure you are within the effective range of the TV's IR receiver.</li> </ul>
Some buttons are not working.	<ul style="list-style-type: none"> <li>Clean the remote's surface, especially around the unresponsive buttons, to remove any dirt or debris.</li> <li>Replace batteries, as low power can sometimes affect specific functions.</li> </ul>
Remote works intermittently.	<ul style="list-style-type: none"> <li>Replace batteries.</li> <li>Ensure there is a clear line of sight to the TV.</li> <li>Check for strong light sources (e.g., direct sunlight, fluorescent lights) that might interfere with the IR signal.</li> </ul>

## 6. SPECIFICATIONS

Feature	Detail
Brand	ZdalaMit
Model Number	2e0cee1d-d92b-411d-bcd8-e24b92f21692
Compatible Devices	Television (BOLVA 4K UHD Smart TV models: 65SVL20, 75SVL20, 58SVL20, 50SVL20, 58MVT20)
Power Source	Battery Powered
Battery Type	2 x 1.5V AAA Alkaline Batteries (not included)
Connectivity Technology	Infrared (IR)
Human Interface Input	Buttons
Special Feature	Ergonomic Design
Product Dimensions	16 x 4 x 1.5 cm; 60 g
Color	Black

## 7. SUPPORT INFORMATION

For any further questions or assistance regarding your ZdalaMit replacement remote control, please contact the seller or manufacturer directly. Refer to your purchase documentation for specific contact details.

