

## COSTWAY FP10244US-BL

# COSTWAY FP10244US-BL Portable Automatic Washing Machine User Manual

Model: FP10244US-BL

## 1. IMPORTANT SAFETY INFORMATION

---

Please read all instructions carefully before using this appliance. Retain this manual for future reference. Failure to follow these instructions may result in property damage, personal injury, or death.

- This appliance is intended for household use only.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Ensure the power supply voltage matches the rating label on the washing machine.
- Do not immerse the electrical parts of the machine in water or other liquids.
- Keep children away from the appliance during operation. The child lock function should be activated when children are present.
- Always unplug the machine from the power outlet before cleaning or performing any maintenance.
- Do not wash items that are soiled with gasoline, dry-cleaning solvents, or other flammable or explosive substances.
- Ensure the machine is placed on a stable, level surface to prevent vibration and noise.
- The drain hose must be positioned correctly to prevent water leakage.
- Do not connect the machine to a hot water source.

## 2. PRODUCT OVERVIEW

---

The COSTWAY FP10244US-BL is a compact, fully automatic washing machine designed for small living spaces such as RVs, apartments, and dorms. It combines washing and spinning functions for convenience.

### Key Features:

- **Capacity:** 7.7 lbs (0.78 cu.ft)
- **Washing Programs:** 10 preset programs
- **Water Levels:** 3 adjustable water levels
- **Delay Function:** 2-24 hour delay start
- **Safety:** Child-lock function
- **Drainage:** Built-in drain pump for elevated drainage
- **Tub Material:** Durable stainless steel tub with honeycomb surface
- **Lid:** Slow-drop damped lid
- **Portability:** Recessed handles for easy movement, compact design

### **Product Components:**

Familiarize yourself with the main parts of your washing machine.



**Image 2.1:** Front view of the COSTWAY FP10244US-BL portable automatic washing machine in blue. This image shows the compact design and top-loading access.

# Easy to Operate



10 Washing Program Options



3 Adjustable Water Levels



2-24 Hour Delay Function



Clear LED Display



**Image 2.2:** Close-up of the control panel, displaying buttons for water level, program selection, delay, start/pause, and power, along with an LED display.

## 3. SETUP INSTRUCTIONS

### 3.1 Unpacking

1. Carefully remove the washing machine from its packaging.
2. Remove all packing materials, including the bottom cover assembly kit and any protective films.
3. Inspect the machine for any damage incurred during transit. Contact customer service if damage is found.

### 3.2 Placement

Place the washing machine on a firm, level surface. Uneven surfaces can cause excessive vibration and noise during operation.

- Ensure there is adequate space around the machine for ventilation and operation.
- Adjust the foot pads at the bottom of the machine to ensure it is stable and level.
- Install the mice-proof plate on the bottom of the machine using the provided screws.

## Fit Your Space



**Image 3.1:** This image illustrates the dimensions of the washing machine (18"L x 18"W x 29"H, 42" with lid open) and shows the included accessories: inlet hose kit, drainage hose kit, and bottom cover assembly kit.

### 3.3 Water Connection

Connect the inlet hose to a suitable water faucet.

1. Attach one end of the inlet hose to the water inlet on the back of the washing machine. Ensure the sealing ring is properly seated.
2. Attach the other end of the inlet hose to your faucet. The included adapter fits most standard faucets (Female Thread 15/16"-27 T (24MM), Male 55/64"-27 (22mm), 5/8" Quick Connect).
3. **Important:** Remove the original faucet aerator first before attaching the adapter.
4. Ensure all connections are tight to prevent leaks.



**Image 3.2:** This image demonstrates how to connect the inlet hose to a faucet using the provided adapter, highlighting compatible faucet thread types.

### 3.4 Drainage Setup

The machine features a built-in drain pump for flexible drainage options.

1. Connect the drainage hose to the drain outlet on the back of the washing machine.
2. Position the other end of the drain hose into a sink, tub, or drain pipe.
3. **Important:** Ensure the drain hose is raised less than 4 feet (1.2 meters) from the base of the machine to allow proper drainage.

## Built-in Drain Pump



**Image 3.3:** This image shows the drain hose connected to the machine and directed into a sink, illustrating the maximum height for effective drainage (less than 4ft).

### 3.5 Electrical Connection

- Plug the power cord into a grounded electrical outlet (110V/60Hz).
- Do not use extension cords or adapters.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Control Panel Overview

The control panel allows you to select programs, adjust settings, and start/stop the washing cycle.

# Easy to Operate



10 Washing Program Options



3 Adjustable Water Levels



2-24 Hour Delay Function



Clear LED Display



**Image 4.1:** Close-up of the control panel, showing buttons for Water Level/Spin, Program/Delay, Start/Pause, and Power, along with the LED display and program indicators.

## 4.2 Loading Laundry

1. Open the lid of the washing machine.
2. Load clothes loosely into the stainless steel tub. Do not overload the machine beyond its 7.7 lbs capacity.
3. Close the lid securely.

## 4.3 Adding Detergent

Add the appropriate amount of detergent directly into the tub with the clothes. Refer to your detergent's instructions for dosage.

## 4.4 Selecting Programs

Press the 'Program/Delay' button repeatedly to cycle through the 10 available washing programs:

1. Normal
2. Standard

3. Strong
4. Fast
5. Soak & Wash
6. Wash
7. Wash & Rinse
8. Rinse & Spin
9. Spin
10. Air Dry

## 4.5 Adjusting Water Levels

Press the 'Water Level/Spin' button to select one of the 3 available water levels (1, 2, or 3) based on your laundry load size.

## 4.6 Delay Start Function

To set a delayed start:

1. Select your desired washing program and water level.
2. Press the 'Program/Delay' button and hold for a few seconds until the delay indicator lights up.
3. Use the 'Program/Delay' button to adjust the delay time from 2 to 24 hours.
4. Press 'Start/Pause' to confirm the delay setting. The machine will start automatically after the set delay time.

## 4.7 Child Lock Function

To activate the child lock:

- Press and hold the 'Water Level/Spin' and 'Program/Delay' buttons simultaneously for 3 seconds.
- The child lock indicator will illuminate, and the control panel will be locked to prevent accidental operation.
- To deactivate, repeat the same action.

## Safety Child-Lock



**Image 4.2:** This image visually represents the child lock feature, showing the two buttons to press simultaneously to activate it.

### 4.8 Starting and Pausing

- After selecting your desired settings, press the 'Start/Pause' button to begin the washing cycle.
- To pause the cycle at any time, press 'Start/Pause' again. Press it once more to resume.

### 4.9 End of Cycle

The machine will beep to indicate the end of the washing cycle. The display will show 'End'.

## 5. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

### 5.1 Cleaning the Exterior

- Wipe the exterior of the machine with a soft, damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals.

## 5.2 Cleaning the Detachable Filter

The machine is equipped with a detachable filter to collect lint and debris. Clean it regularly.

1. Open the lid and locate the filter inside the tub.
2. Carefully remove the filter.
3. Rinse the filter under running water to remove accumulated lint.
4. Reinsert the clean filter back into its position.



**Image 5.1:** This image highlights the slow-drop damped lid, the detachable filter for lint collection, and the durable pulsator design within the tub.

## 5.3 Cleaning the Tub

- Run a 'Tub Clean' cycle (if available) or a 'Normal' cycle with hot water and a cup of white vinegar or a washing machine cleaner.
- Wipe down the inside of the tub after each use to prevent mildew and odors.

## 5.4 Winterization/Storage

- If storing the machine in an area where it might freeze, drain all water from the hoses and tub.
- Disconnect the water inlet and drain hoses.

- Store the machine in a dry, temperate location.

## 6. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Lid not closed; Child lock active	Ensure power cord is plugged in; Close the lid securely; Deactivate child lock.
No water filling	Water faucet closed; Inlet hose kinked; Water pressure too low	Open water faucet; Straighten inlet hose; Check water supply.
Water not draining	Drain hose kinked or blocked; Drain hose positioned too high	Clear drain hose; Ensure drain hose is less than 4ft high.
Excessive vibration/noise	Machine not level; Overloaded or unbalanced load	Adjust foot pads to level machine; Redistribute laundry evenly; Reduce load size.
Error Code (e.g., lid open during water fill)	Specific operational issue	Refer to the specific error code in the full manual (if available) or ensure lid is closed.

If the problem persists after attempting these solutions, please contact customer support.

## 7. SPECIFICATIONS

Feature	Specification
Brand Name	COSTWAY
Model Info	FP10244US-BL
Item Weight	40 pounds
Product Dimensions (L x W x H)	18 x 18 x 29 inches
Overall Height (Lid Opened)	42 inches
Capacity	7.7 Pounds (0.78 cu.ft)
Special Features	Child Lock, Portable
Color	Blue
Control Console	Push Button
Standard Cycles	10

Feature	Specification
Access Location	Top Load
Voltage	110V/60Hz
Power of Washing	240W
Power of Spinning	210W
Material Type	ABS, PP, Stainless Steel
Length of Inlet Hose	3.5 ft
Length of Drain Hose	5.2 ft
Compatible Faucet	Female Thread 15/16"-27 T (24MM); Male 55/64"-27 (22mm); 5/8" Quick Connect
Included Components	1 x Full Automatic Washing Machine, 1 x Inlet Hose, 1 x Faucet Adapter, 1 x Drainage Hose, 1 x Spring Clip, 1 x Bottom Cover Assembly Kit, 1 x Manual

## 8. WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the warranty card included with your product or visit the official COSTWAY website.

You can also visit the [COSTWAY Brand Store on Amazon](#) for more product information and support resources.