

Bar DFB-D13W1-2024

Rice Cooker 2-Cups Uncooked, 1.2L Small Rice Cooker with Non-stick Coating, BPA Free, Portable Mini Rice Cooker, One Button to Cook and Keep Warm Function, White A-Snow White(1.2L) with Easy One Button Control

Model: DFB-D13W1-2024 | Brand: Bar

1. PRODUCT OVERVIEW

The Bar Rice Cooker is a versatile and compact appliance designed for efficient cooking of various grains and dishes. Its user-friendly design and automatic functions make it ideal for small households, dorms, or travel.

- **Multi-Use Functionality:** Capable of cooking rice, oatmeal, quinoa, soups, vegetables, and small hot pots.
- **Compact Size:** Designed for 1-2 people, saving counter space.
- **One-Button Operation:** Simple control for cooking and automatic keep-warm function.
- **Easy to Clean:** Features a removable non-stick inner pot and detachable inner lid.



Figure 1.1: Front view of the Bear Rice Cooker.

2. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.

- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The steam discharging port is very hot. Do not touch it with hands.
- Do not place damp cloth on the steam port during use to prevent deformation of the cover surface.

3. COMPONENTS

The Bar Rice Cooker comes with the following components:

- **Main Unit:** The rice cooker body with control panel.
- **Removable Non-stick Inner Pot:** For cooking and easy cleaning.
- **Detachable Inner Lid:** For easy cleaning and maintenance.
- **Measuring Cup:** For precise measurement of rice.
- **Rice Paddle:** For stirring and serving rice without damaging the non-stick coating.
- **Detachable Power Cord:** For convenient storage and portability.



ONE-KEY OPENING



QUIET COOKING



DETACHABLE
INNER LID



DETACHABLE
POWER LINE

Figure 3.1: Key components of the rice cooker.

4. SETUP

1. **Unpack:** Carefully remove all packaging materials and accessories from the box.
2. **Initial Cleaning:** Before first use, wash the removable non-stick inner pot, detachable inner lid, measuring cup, and rice paddle with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth.
3. **Placement:** Place the rice cooker on a stable, flat, heat-resistant surface, away from direct sunlight or heat sources. Ensure adequate ventilation around the unit.
4. **Connect Power:** Insert the detachable power cord into the power port at the back of the rice cooker, then plug the other end into a standard electrical outlet.

5. OPERATING INSTRUCTIONS

5.1 Cooking Rice

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of uncooked rice. The cooker can handle up to 2 cups of uncooked rice, suitable for 1-2 people.
2. **Wash Rice:** Rinse the rice thoroughly under cold water until the water runs clear. This helps remove excess starch.
3. **Add Water:** Place the washed rice into the inner pot. Add water according to the markings inside the inner pot (e.g., for 1 cup of rice, fill to the "1" line; for 2 cups, fill to the "2" line). Adjust water quantity based on rice type and desired consistency.
4. **Place Inner Pot:** Insert the inner pot into the main unit, ensuring it sits properly on the heating plate.
5. **Close Lid:** Close the lid securely.
6. **Start Cooking:** Press the "Cook" lever down. The "Cook" indicator light will illuminate. The cooking process typically takes about 25 minutes.
7. **Automatic Keep Warm:** Once cooking is complete, the cooker will automatically switch to "Warm" mode, and the "Warm" indicator light will illuminate. This keeps the rice warm until ready to serve.



Figure 5.1: Simple one-button operation for cooking.

5.2 Other Uses

Beyond rice, this versatile cooker can prepare a variety of dishes:

- **Oatmeal:** Prepare creamy oatmeal for breakfast.
- **Quinoa:** Cook perfectly fluffy quinoa.
- **Soups & Stews:** Ideal for small batches of soup or stew.
- **Steamed Vegetables:** Use the inner pot to steam vegetables.
- **Small Hot Pots:** Convenient for individual or small group hot pot meals.



Figure 5.2: The rice cooker's versatility for different recipes.

6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your rice cooker.

1. **Unplug and Cool:** Always unplug the rice cooker from the power outlet and allow it to cool completely before cleaning.
2. **Clean Inner Pot:** The non-stick inner pot should be hand washed with warm, soapy water. Avoid abrasive cleaners or scouring pads that could damage the non-stick coating. Rinse thoroughly and dry completely.

3. **Clean Inner Lid:** The inner lid is detachable for easy cleaning. Remove it and wash with warm, soapy water. Rinse and dry thoroughly before reattaching.
4. **Clean Exterior:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water or any other liquid.
5. **Storage:** Ensure all parts are dry before storing. Store the rice cooker in a cool, dry place.



Figure 6.1: Easy cleaning of the inner pot and detachable lid.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Rice is too dry/hard	Insufficient water; lid not properly closed.	Add a small amount of hot water and switch to "Warm" for 5-10 minutes. Ensure lid is sealed.
Rice is too sticky/mushy	Too much water; rice not rinsed properly.	Reduce water slightly for next batch. Rinse rice thoroughly before cooking.

Problem	Possible Cause	Solution
Rice sticks to the bottom	Not enough water; prolonged "Warm" cycle; damaged non-stick coating.	Ensure proper water ratio. Avoid leaving on "Warm" for excessive periods. Use only the provided rice paddle.
Unit does not turn on	Not plugged in; power outage; faulty unit.	Check power connection and outlet. Contact customer support if problem persists.
Steam overflow	Too much water; lid not sealed; clogged steam vent.	Reduce water. Ensure lid is properly closed. Clean steam vent if necessary.

8. SPECIFICATIONS

Feature	Detail
Brand	Bar
Model Name	DFB-B12W1-WHITE
Capacity	2 cups uncooked
Product Dimensions	5.48"D x 8.54"W x 7.48"H
Power Source	Corded Electric
Voltage	120 Volts
Wattage	200 watts
Material	Plastic
Product Care	Hand Wash

9. WARRANTY AND SUPPORT

The Bar Rice Cooker comes with a **1-year after-sale warranty**. We are committed to providing excellent customer service and lifetime technical support.

For any product issues or inquiries, please contact our friendly customer support team. We aim to reply within 24 hours to ensure your fullest satisfaction.

Please refer to your purchase documentation for specific contact details or visit the official Bar website for support.

