

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [MOFII](#) /
- > [MOFII Wireless Keyboard and Mouse Combo User Manual](#)

MOFII B0CCP2Q1PS

MOFII Wireless Keyboard and Mouse Combo User Manual

Model: B0CCP2Q1PS

INTRODUCTION

This manual provides instructions for setting up, operating, and maintaining your MOFII Wireless Keyboard and Mouse Combo. This combo offers a full-size keyboard with a number pad and a silent wireless mouse, utilizing 2.4GHz wireless technology for a stable connection. Please read this manual carefully before use to ensure optimal performance and longevity of your device.

SETUP INSTRUCTIONS

1. Install Batteries

- **Keyboard:** Open the battery compartment on the underside of the keyboard. Insert the required batteries (typically 2x AAA, not included) ensuring correct polarity. Close the compartment.
- **Mouse:** Open the battery compartment on the underside of the mouse. Insert the required battery (typically 1x AA, not included) ensuring correct polarity. Close the compartment.

2. Connect the USB Receiver

Locate the 2-in-1 USB nano receiver, usually stored within the mouse's battery compartment. Remove the receiver and plug it into an available USB port on your computer (PC, Laptop, Desktop, Chromebook, etc.). The system will automatically detect and install the necessary drivers.

Share the USB Receiver

Save more USB ports for your device



Image: The USB nano receiver, which connects both the keyboard and mouse to your computer, is typically stored inside the mouse. This single receiver saves USB ports.



Image: Illustration of the 2.4G wireless plug-and-play functionality, showing the USB receiver plugged into a laptop, establishing a wireless connection with the keyboard and mouse.

3. Power On


- **Keyboard:** Ensure the keyboard is powered on. Some models may have an on/off switch.
- **Mouse:** Turn on the mouse using the power switch located on its underside.

Your keyboard and mouse should now be connected and ready for use. The 2.4GHz wireless connection provides a range of up to 33 feet (10 meters) without significant delay or disconnection.

OPERATING INSTRUCTIONS

Keyboard Functions

The keyboard features a full-size layout with a numeric keypad and multimedia hotkeys. These hotkeys are accessed by pressing the **Fn** key in combination with the corresponding function key (F1-F12).

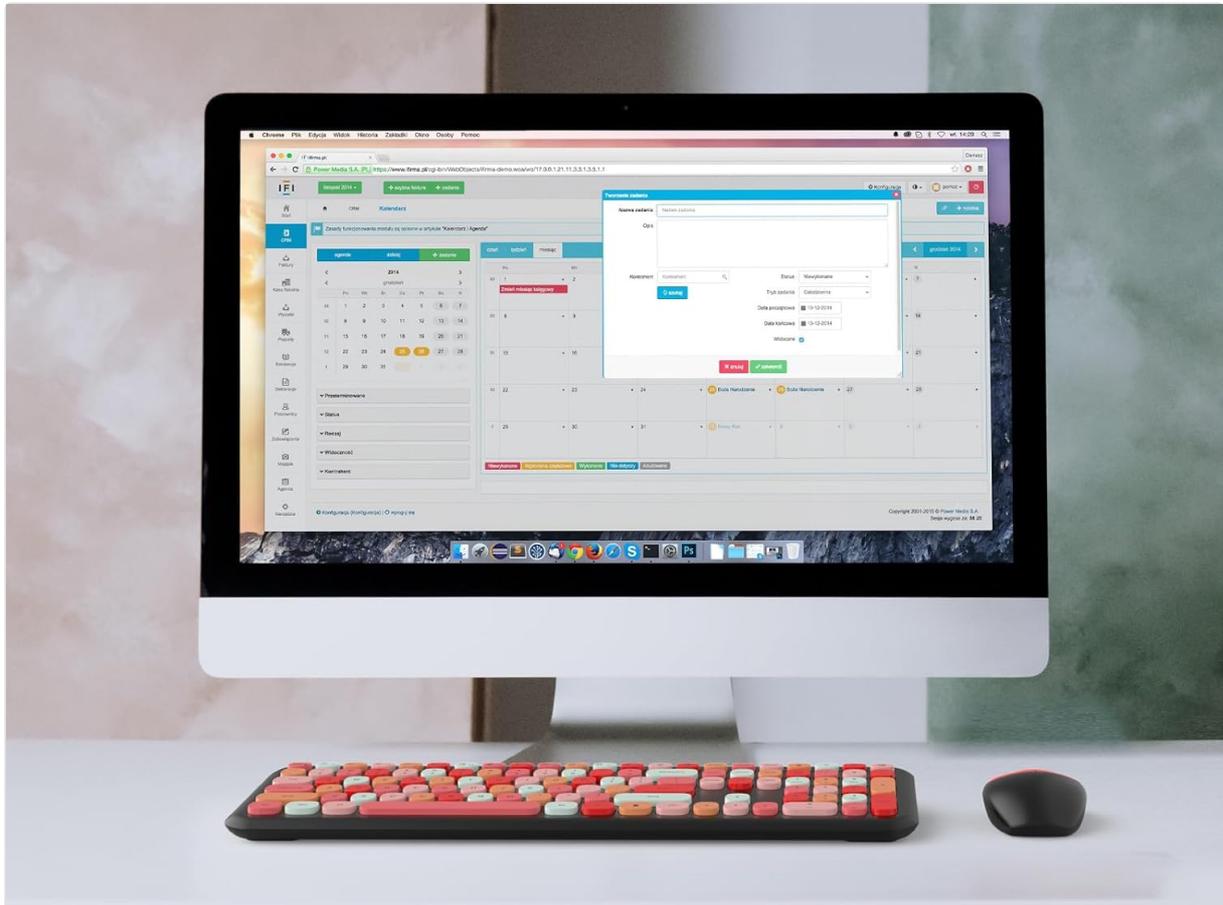

Fn + **Esc** = LOCK

Fn + **F4** = MUTE

Fn + **F8** = SEARCH

Fn + **F1** = PREVIOUS ONE

Fn + **F5** = VOLUME-

Fn + **F9** = EMAIL

Fn + **F2** = PLAY/PAUSE

Fn + **F6** = VOLUME+

Fn + **F10** = FAVORITES

Fn + **F3** = NEXT ONE

Fn + **F7** = WEB

Fn + **F12** = SETTING

Image: A diagram illustrating the various Fn key combinations on the keyboard for quick access to functions such as Lock (Fn+Esc), Previous (Fn+F1), Play/Pause (Fn+F2), Next (Fn+F3), Mute (Fn+F4), Volume Down (Fn+F5), Volume Up (Fn+F6), Web (Fn+F7), Search (Fn+F8), Email (Fn+F9), Favorites (Fn+F10), and Settings (Fn+F12).

Mouse Functions

The wireless mouse is designed for silent clicking, minimizing disturbance. It operates at 1200 DPI for responsive and precise cursor movement.



Image: A visual representation highlighting the silent click and high responsiveness features of the wireless mouse, indicating a low noise level during operation.

POWER MANAGEMENT

To conserve battery life, both the keyboard and mouse feature an automatic energy-saving sleep mode. After approximately 5 minutes of inactivity, the devices will enter sleep mode. To wake them up, simply click any key on the keyboard or move/click the mouse.



Automatic Power Saving



Image: A sequence illustrating the automatic power-saving states of the mouse: Working, Stand-by, Auto-sleep, and Press to Activate, demonstrating how the mouse conserves power when not in use.

COMPATIBILITY

The MOFII Wireless Keyboard and Mouse Combo is widely compatible with various operating systems and devices, including:

- Laptop
- PC (Desktop)
- Chromebook
- Notebook
- Smart TV

It is compatible with Windows 2000/Me/XP/Vista/7/8/10/11 or the latest versions, as well as Mac operating systems.



Image: A visual showing the MOFII wireless keyboard and mouse in use with a computer, indicating compatibility with PC, Mac, and Windows operating systems via 2.4GHz wireless technology.

MAINTENANCE

To ensure the longevity and proper functioning of your MOFII Wireless Keyboard and Mouse Combo, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe down the surfaces of the keyboard and mouse. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid excessive moisture.
- **Battery Replacement:** Replace batteries when performance degrades or the low battery indicator (if present) illuminates. Always use fresh batteries of the specified type (AAA for keyboard, AA for mouse).
- **Storage:** When not in use for extended periods, remove the batteries to prevent leakage. Store the devices in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Spills:** Keep liquids away from the keyboard and mouse to prevent damage to internal components.

TROUBLESHOOTING

If you encounter issues with your MOFII Wireless Keyboard and Mouse Combo, try the following solutions:

| Problem | Solution |
|---|---|
| Keyboard/Mouse not responding | <ul style="list-style-type: none"> ◦ Check if batteries are correctly installed and have sufficient charge. Replace if necessary. ◦ Ensure the USB receiver is securely plugged into a working USB port. Try a different USB port. ◦ Make sure the keyboard and mouse are powered on. ◦ Move the devices closer to the USB receiver to rule out range issues. ◦ Restart your computer. |
| Lag or intermittent connection | <ul style="list-style-type: none"> ◦ Reduce interference by moving other wireless devices (e.g., Wi-Fi routers, cordless phones) away from the receiver. ◦ Ensure there are no large metal objects between the devices and the receiver. ◦ Replace batteries. |
| Keys sticking or not registering | <ul style="list-style-type: none"> ◦ Clean around and under the keys to remove any debris. ◦ Ensure the keyboard is on a flat, stable surface. ◦ Check battery level. |
| Mouse cursor erratic or not moving smoothly | <ul style="list-style-type: none"> ◦ Clean the optical sensor on the underside of the mouse. ◦ Use the mouse on a suitable surface (e.g., a mouse pad). ◦ Replace the mouse battery. |

SPECIFICATIONS

| Feature | Detail |
|--------------------------------|--|
| Brand | MOFII |
| Model | B0CCP2Q1PS |
| Connectivity Technology | 2.4GHz Radio Frequency Wireless |
| Keyboard Type | Full Size with Number Pad |
| Mouse Features | Silent Click, 1200 DPI |
| Special Feature | Ergonomic Design, Auto-sleep Function |
| Compatible Devices | Laptop, PC, Desktop, Chromebook, Notebook, Smart TV |
| Operating System Compatibility | Windows 2000/Me/XP/Vista/7/8/10/11 or latest, Mac OS |
| Package Dimensions | 17.6 x 4.29 x 2.87 inches |
| Item Weight | 1.89 pounds |

Full-Size Ultra Slim Design



17.4in



Image: A detailed diagram showing the dimensions of the MOFII wireless keyboard (17.4in length, 1.1in height) and mouse (2.7in width, 4.1in length, 0.6in height), including the 7-degree tilt of the keyboard.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact MOFII customer service directly. Keep your purchase receipt for warranty claims.