

OlarHike AMH5V165

OlarHike Inflatable Twin Air Mattress User Manual

Model: AMH5V165

1. INTRODUCTION

This user manual provides essential information for the safe and effective use of your OlarHike Inflatable Twin Air Mattress. Please read this manual thoroughly before initial use and retain it for future reference. This air mattress is designed for both indoor and outdoor use, offering comfort and convenience for guests, camping, or travel.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following precautions:

- Avoid exposing the airbed to extreme temperatures (hot or cold). In hot weather, air will expand; release some air to prevent overpressure. In cold weather, the airbed may lose some pressure as air contracts.
- Do not expose the electric pump to moisture.
- Do not overinflate the airbed. Stop inflating once the airbed is fully expanded and firm.
- Ensure the airbed is placed on a level surface free from stones and sharp objects. The bed may tip over on uneven surfaces.
- Never run the pump for longer than 10 minutes at a time. Allow the motor to cool down for 7 minutes before re-using.
- Disconnect the plug when the pump is not in use.
- When fully inflated, always turn the valve at the pump to the OFF (middle) position to prevent deflation.
- Maximum weight capacity: 300 pounds. Do not exceed this limit.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Twin Air Mattress with Built-in Pump (110V)
- Carry Bag
- Manual Inflator Valve (for use with external pump, not included)
- Repair Patch

- User Guide (this manual)

4. SETUP: INFLATION

Your OlarHike air mattress features a powerful built-in 110V electric air pump for fast and easy inflation.

1. Unroll the air mattress on a clean, level surface, free from sharp objects.
2. Locate the built-in pump on the side of the mattress.
3. Open the pump compartment cover.
4. Plug the power cord into a standard 110V electrical outlet.
5. Turn the pump dial to the "INFLATE" position. The mattress will begin to inflate automatically.
6. Inflation typically takes approximately 4 minutes to reach full firmness. Monitor the inflation process to prevent overinflation.
7. Once the desired firmness is achieved, turn the pump dial to the "OFF" (middle) position.
8. Unplug the power cord and store it neatly within the pump compartment. Close the cover securely.



Image: The OlarHike Twin Air Mattress, showing the built-in pump and included carry bag.



Image: Detailed view of the built-in electric pump for seamless inflation and deflation, and the manual air valve for use with an external pump (not included).

Manual Inflation (Optional): For situations without power, a manual inflator valve is provided. This requires an external pump (not included). Open the manual valve cap and use a compatible pump to inflate the mattress. Ensure the cap is securely closed after inflation.

5. OPERATION: USING YOUR AIR MATTRESS

Once inflated, your OlarHike air mattress provides a comfortable sleeping surface. Its enhanced coil beam construction offers full body support and balanced weight distribution.



78 IN. X 40 IN. X 16 IN.

OlarHike MIDNIGHT COLLECTION

Image: The OlarHike Twin Air Mattress, measuring 78 inches long, 40 inches wide, and 16 inches high, set up in a room.



Image: Cross-section diagram illustrating the three layers: Layer 1 (Ultra Soft Velvet), Layer 2 (Enhanced Air Coils), and Layer 3 (Anti-Leak Material).

The mattress features a soft flocked top for added comfort. It is suitable for both indoor and outdoor use, provided it is placed on a suitable surface as described in the safety information.



DON'T SLEEP ON THESE FEATURES



INDOOR AND
OUTDOOR USE



SOFT TOP
VELVET LAYER



4 MINUTE
SELF-INFLATE



300 LBS.
WEIGHT LIMIT

Image: A girl comfortably using the OlarHike air mattress indoors. Icons highlight its features: suitable for indoor and outdoor use, soft top velvet layer, 4-minute self-inflate time, and 300 lbs weight limit.

6. DEFLATION AND STORAGE

To deflate and store your air mattress:

1. Ensure the mattress is clear of any occupants or objects.

2. Locate the built-in pump.
3. Plug the power cord into a standard 110V electrical outlet.
4. Turn the pump dial to the "DEFLATE" position. The pump will begin to extract air from the mattress.
5. Once most of the air has been removed, you can assist by gently rolling the mattress from the opposite end towards the pump to expel remaining air.
6. When fully deflated, turn the pump dial to the "OFF" position and unplug the power cord. Store the cord in its compartment.
7. Fold or roll the deflated mattress neatly.
8. Place the folded mattress into the included carry bag for convenient storage and transport.



CONVENIENT STORAGE & SET UP

Image: Visual guide demonstrating the process of deflating, folding, and placing the OlarHike air mattress into its compact carry bag for convenient storage.

7. MAINTENANCE AND CARE

Proper care will extend the life of your air mattress:

- **Cleaning:** The surface of the air mattress is easy to clean. Use a damp cloth with mild soap and water to wipe down

the surface. Do not use harsh chemicals or abrasive cleaners. Ensure the mattress is completely dry before storing.

- **Puncture Repair:** A repair patch is included for minor punctures. Clean the area around the puncture, apply the patch firmly, and allow it to cure according to patch instructions.
- **Temperature Management:** As noted in safety information, air pressure can fluctuate with temperature changes. Adjust inflation as needed to maintain desired firmness and prevent overpressure or excessive softness.
- **Storage:** Store the deflated and folded mattress in its carry bag in a cool, dry place, away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

If you encounter issues with your OlarHike air mattress, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Mattress loses air quickly.	◦ Valve not fully closed. ◦ Small puncture or leak. ◦ Temperature change (cold weather).	◦ Ensure pump dial is in the "OFF" position and manual valve cap is secure. ◦ Inspect mattress for punctures. Use included repair patch for minor leaks. ◦ Add more air if the room temperature has dropped significantly.
Pump not working.	◦ Not plugged in correctly. ◦ Power outlet issue. ◦ Pump overheated.	◦ Check power cord connection. ◦ Test outlet with another appliance. ◦ Allow pump to cool down for at least 7 minutes if it has been running for more than 10 minutes.
Mattress not inflating to full firmness.	◦ Not enough inflation time. ◦ Pump dial not on "INFLATE".	◦ Allow pump to run for the full 4 minutes or until desired firmness. ◦ Ensure pump dial is correctly set to "INFLATE".

9. SPECIFICATIONS

Brand	OlarHike
Model Name	Air Mattress
Item Model Number	AMH5V165
Size	Twin
Color	Black
Product Dimensions	78"L x 40"W x 16"Th
Item Weight	11.53 pounds
Capacity	300 Pounds

Special Features	Built-In Pump, Easy to Install, Lightweight, Portable, Puncture Resistant
Top Material Type	Soft Flocked Top
Item Firmness Description	Plush
UPC	810080922099

10. WARRANTY AND SUPPORT

OlarHike stands behind the quality of its products.

- **Manufacturer’s Warranty:** This OlarHike Inflatable Twin Air Mattress comes with a 2-year manufacturer-backed warranty. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.
- **Customer Service:** For any questions, concerns, or warranty inquiries, please contact OlarHike customer service. We are committed to providing excellent support.
- **U.S. Based Customer Support:** OlarHike offers U.S. based customer support for your convenience.

© 2024 OlarHike. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

