

IAGREEA c6b64e37-5eab-4e2d-80f4-30480cb1560c

IAGREEA Mini Electric Pressure Cooker User Manual

Model: c6b64e37-5eab-4e2d-80f4-30480cb1560c

1. INTRODUCTION

Thank you for choosing the IAGREEA Mini Electric Pressure Cooker. This appliance is designed to provide efficient and versatile cooking for various dishes, including rice, porridge, soup, and more. Its compact size makes it ideal for small households, offices, or travel. Please read this manual thoroughly before use to ensure safe and optimal operation.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions carefully.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance cooks under pressure. Improper use may result in scalding injury. Make certain unit is properly closed before operating.
- Never force open the pressure cooker. Do not open until the unit has cooled and internal pressure has been released.
- Do not fill the unit over 2/3 full. When cooking foods that expand during cooking, such as rice or dehydrated vegetables, do not fill the unit over 1/2 full.
- Always check the pressure release device for clogging before use.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your IAGREEA Mini Electric Pressure Cooker.



Figure 3.1: Front view of the IAGREEA Mini Electric Pressure Cooker, showing the control panel and lid.



26cm/
10.2inch



24cm/9.4inch

24cm/
9.4inch

Figure 3.2: Dimensions of the iAGREEA Mini Electric Pressure Cooker.

- **Main Unit:** The exterior housing containing the heating element and control panel.
- **Inner Pot:** Removable non-stick cooking pot.
- **Lid:** Pressure-sealing lid with a safety valve and handle.
- **Control Panel:** Features a rotary dial for menu selection and indicator lights.
- **Power Cord:** Detachable power supply cord.

4. SETUP

Before first use, follow these steps:

1. **Unpack:** Carefully remove all packaging materials and accessories.
2. **Clean:** Wash the inner pot, lid, and any accessories (e.g., measuring cup, spoon) with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the pressure cooker on a stable, level, heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the unit.

4. **Power Connection:** Ensure the power cord is securely plugged into the cooker's receptacle and then into a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

The IAGREEA Mini Electric Pressure Cooker features a user-friendly control panel with 6 preset menu settings.



Figure 5.1: The IAGREEA Mini Electric Pressure Cooker in a kitchen setting.

5.1 Control Panel Overview

- **Rotary Dial:** Used to select cooking functions.
- **Menu Settings:**
 - **Rice (10 min):** For cooking various types of rice.
 - **Meat/Chicken (15 min):** For cooking meat and poultry.
 - **Porridge (20 min):** For preparing oatmeal or other porridges.
 - **Soup (25 min):** For making soups and broths.
 - **Beans/Tendon (30 min):** For cooking beans or tougher cuts of meat.

- **Fish (5 min):** For delicate fish dishes.
- **Heating Indicator:** Illuminates when the cooker is heating.
- **Pressure/Keep Warm Indicator:** Illuminates when pressure is building or when the cooker is in keep-warm mode.

5.2 General Cooking Steps

1. **Prepare Ingredients:** Measure and prepare your ingredients according to your recipe.
2. **Add to Inner Pot:** Place the inner pot into the main unit. Add your ingredients and the appropriate amount of liquid. Do not exceed the maximum fill line (2/3 full, or 1/2 full for expanding foods like rice).
3. **Close Lid:** Place the lid on the cooker and rotate it clockwise until it locks securely. Ensure the pressure release valve is in the sealed position.
4. **Select Function:** Turn the rotary dial to select your desired cooking function (e.g., Rice, Meat/Chicken). The corresponding indicator light will illuminate.
5. **Start Cooking:** The cooker will automatically begin the pre-heating and pressure-building process. The 'Heating' indicator will light up, followed by the 'Pressure/Keep Warm' indicator once pressure is reached.
6. **Pressure Release:** Once cooking is complete, the cooker will automatically switch to 'Keep Warm' mode. To open the lid, you must first release the pressure.
 - **Natural Release:** Allow the pressure to dissipate naturally. This is recommended for foamy foods or large cuts of meat.
 - **Quick Release:** Carefully turn the pressure release valve to the 'venting' position. Keep hands and face away from the steam.
7. **Open Lid:** Once all pressure has been released and the float valve has dropped, rotate the lid counter-clockwise and lift it carefully away from you to avoid residual steam.
8. **Serve:** Carefully remove the inner pot and serve your meal.



Lock in Delicious Food

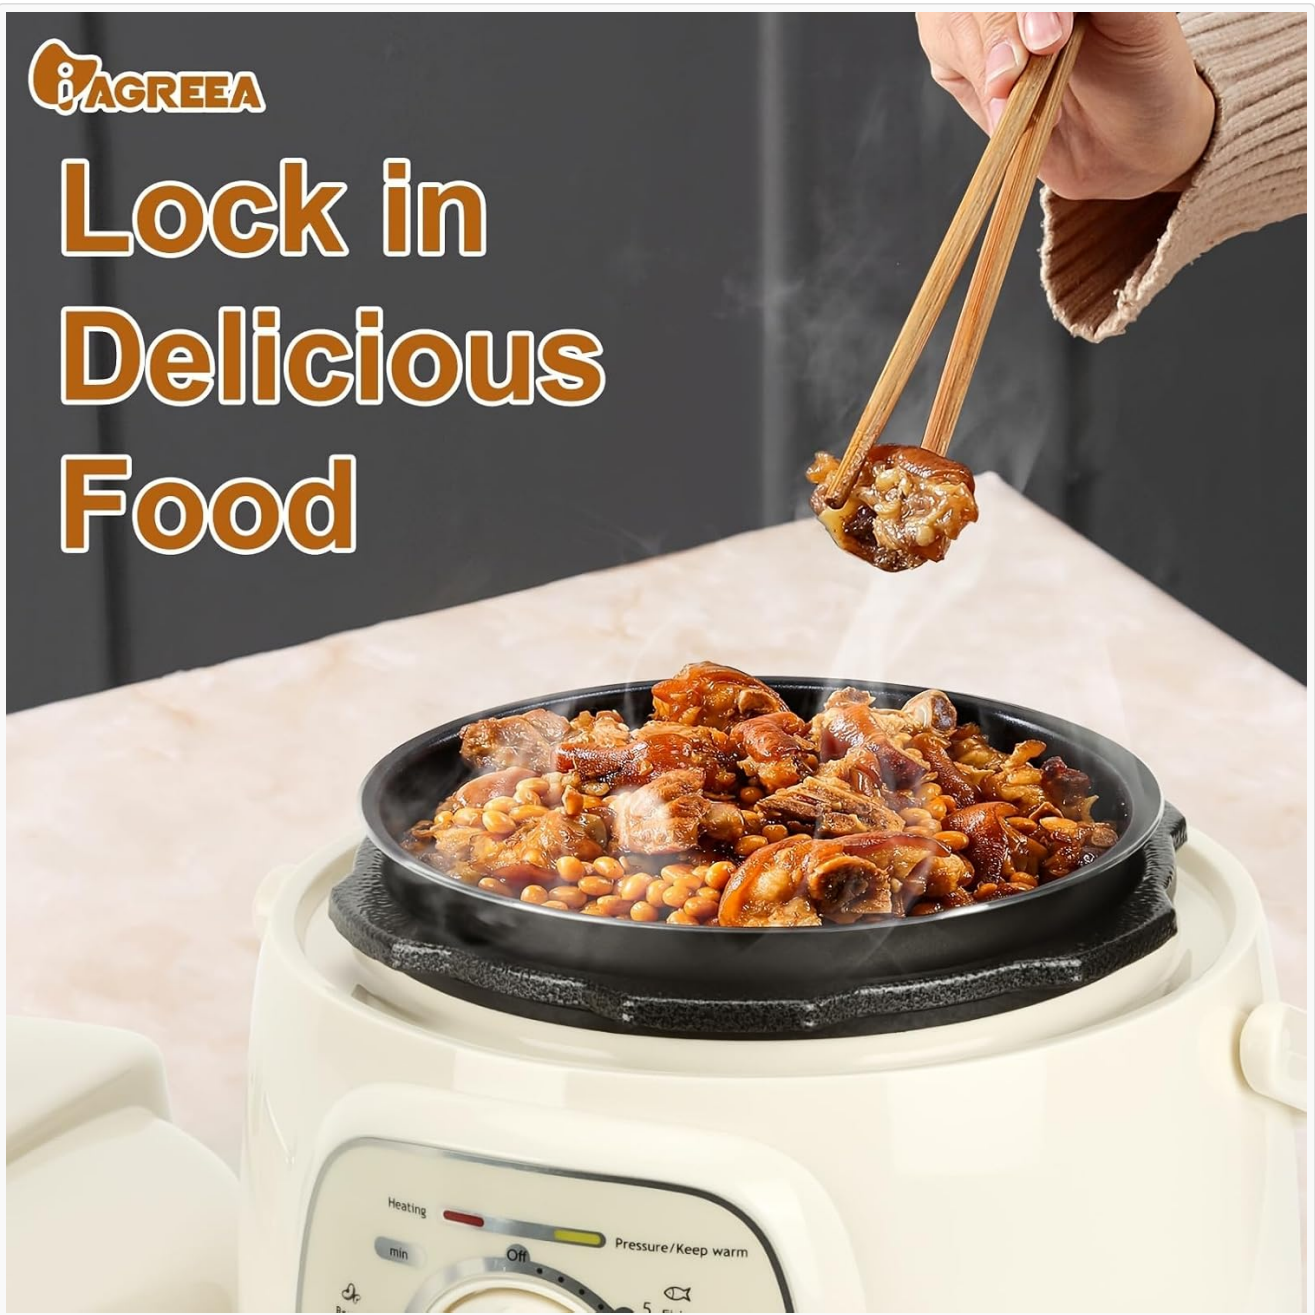


Figure 5.3: Cooking in progress, showcasing the cooker's ability to seal in flavor.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and proper functioning of your pressure cooker.

1. **Unplug and Cool:** Always unplug the cooker from the power outlet and allow it to cool completely before cleaning.
2. **Inner Pot:** The non-stick inner pot can be washed with warm, soapy water and a soft sponge. Avoid abrasive cleaners or metal scouring pads to protect the non-stick coating. Rinse thoroughly and dry.



Figure 6.1: Illustration of the inner pot with double-spray non-stick coating.

3. **Lid:** Wash the lid with warm, soapy water. Pay attention to the sealing gasket and pressure release valve, ensuring they are free of food debris. The sealing gasket can be removed for thorough cleaning if necessary, then reinstalled correctly.
4. **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water or any other liquid.
5. **Storage:** Ensure all parts are completely dry before storing. Store the cooker in a dry place.

7. TROUBLESHOOTING

If you encounter any issues with your IAGREEA Mini Electric Pressure Cooker, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Cooker does not turn on.	No power supply.	Check if the power cord is securely plugged into the cooker and the wall outlet. Test the outlet with another appliance.

Problem	Possible Cause	Solution
Pressure is not building.	Lid not properly closed or pressure release valve not sealed.	Ensure the lid is securely locked and the pressure release valve is in the 'sealed' position. Check the sealing gasket for proper placement and damage.
Steam leaks from the lid.	Sealing gasket is dirty, damaged, or improperly installed.	Clean the sealing gasket and ensure it is correctly seated. Replace if damaged.
Food is undercooked.	Insufficient cooking time or liquid.	Increase cooking time for the next use. Ensure adequate liquid is added according to the recipe.
Food is overcooked.	Excessive cooking time.	Reduce cooking time for the next use.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

- **Brand:** IAGREEA
- **Model Name:** c6b64e37-5eab-4e2d-80f4-30480cb1560c
- **Capacity:** 3 Quarts
- **Power Source:** Corded Electric
- **Product Care Instructions:** Wipe with Damp Cloth
- **Color:** White
- **Special Feature:** Portable
- **Lid Material:** Stainless Steel
- **Item Weight:** 7.04 pounds
- **Package Dimensions:** 11.5 x 11 x 11 inches

9. WARRANTY AND SUPPORT

Your IAGREEA Mini Electric Pressure Cooker is covered by a manufacturer's warranty. For specific warranty details, please refer to the warranty card included with your product or visit the official IAGREEA website.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact IAGREEA customer service. Contact information can typically be found on the product packaging or the brand's official website.

Online Support: [Visit the IAGREEA Store on Amazon](#)