

ARROW RO-9060GSKS-CF

ARROW Freestanding Gas Oven User Manual

Model: RO-9060GSKS-CF

1. IMPORTANT SAFETY INFORMATION

Read all instructions carefully before using the appliance. Keep this manual for future reference.

- This appliance is designed for domestic use only.
- Ensure proper ventilation in the kitchen when using the gas oven or hob.
- Do not store flammable materials near the appliance.
- Always supervise children when the appliance is in use.
- Do not use abrasive cleaners or sharp objects for cleaning.
- In case of a gas leak, immediately shut off the gas supply, open windows, and do not operate any electrical switches or appliances. Contact a qualified technician.
- Ensure the appliance is correctly installed and grounded by a qualified professional.

2. PRODUCT OVERVIEW

The ARROW RO-9060GSKS-CF is a freestanding gas oven with a 5-burner gas hob, designed for efficient cooking. It features a stainless steel surface, front panel, and drawer, along with a cooling fan and full safety devices for all burners.



Front view of the ARROW RO-9060GSKS-CF freestanding gas oven with the oven door open, showcasing the 5-burner cooktop and oven interior.



Side view of the ARROW RO-9060GSKS-CF freestanding gas oven, showing its compact design.

3. SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your gas oven. This appliance must be installed by a qualified technician in accordance with local regulations.

3.1 Unpacking

- Carefully remove all packaging materials.
- Inspect the appliance for any damage. Do not install if damaged.

3.2 Positioning

- Place the oven on a stable, level surface.
- Ensure adequate clearance from walls and cabinets as specified in the installation guide.
- The appliance is freestanding and measures 68cm (Depth) x 95cm (Width) x 89cm (Height).

3.3 Leveling

Use the adjustable legs to ensure the oven is perfectly level. This prevents spills and ensures even cooking.



The oven is equipped with adjustable legs for proper leveling during installation.

3.4 Gas Connection

- Connect the appliance to an LPG gas supply (G30-50 mBar) as specified.
- All gas connections must be performed by a certified gas technician.
- Check for gas leaks after connection using a soapy water solution.

3.5 Electrical Connection

- Connect the oven to a 220-240V, 50-60Hz electrical outlet.
- Ensure the electrical supply is properly grounded.
- The electrical plug is of a special type.

4. OPERATING INSTRUCTIONS

Your ARROW gas oven is equipped with various features for versatile cooking.



The control panel features knobs for each burner and oven functions, along with a mechanical timer.

4.1 Gas Hob Operation

- The hob features 5 gas burners: one small (73 g/h), two middle (124 g/h each), one big (240 g/h), and one wok burner (284 g/h).
- To ignite a burner, push and turn the corresponding control knob counter-clockwise to the maximum flame setting while simultaneously pressing the ignition button. Hold for a few seconds until the flame is stable.
- Adjust the flame size by turning the knob.
- All burners are equipped with a Full Safety Device (FFD) which automatically cuts off gas supply if the flame extinguishes.

4.2 Oven Operation

- The oven has top and bottom burners, controlled by two separate knobs.
- To ignite the oven burner, push and turn the oven control knob to the desired temperature while pressing the ignition button. Hold for a few seconds.
- The oven features a rotisserie (spit) for grilling poultry (6W motor).
- An oven lamp (25W) illuminates the interior.
- The oven also includes a cooling fan (22W) and a warming drawer.
- A mechanical timer is available for setting cooking durations.
- The oven door has double glass and a removable inner glass for easy cleaning.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and performance of your oven.

5.1 General Cleaning

- Always ensure the appliance is cool and disconnected from the power supply before cleaning.
- Wipe exterior surfaces with a soft cloth and mild detergent. Avoid abrasive cleaners.
- Clean the stainless steel surfaces with a specialized stainless steel cleaner to maintain its finish.

5.2 Hob Cleaning

- Remove burner caps and pan supports. Wash them with warm soapy water.
- Clean the hob surface with a non-abrasive cleaner.
- Ensure all parts are dry before reassembling.

5.3 Oven Interior Cleaning

- The oven door features removable inner glass for thorough cleaning. Refer to the detailed instructions in the full manual for removal.
- Use oven-safe cleaners for the interior, following product instructions.
- Clean oven racks and trays with warm soapy water.


6. TROUBLESHOOTING

Before contacting service, check the following common issues:

Problem	Possible Cause	Solution
Burner not igniting	No gas supply; Ignition electrode dirty; Burner cap not correctly placed	Check gas valve; Clean electrode; Re-position burner cap
Oven not heating	Gas supply off; Oven burner not ignited; Temperature setting too low	Check gas supply; Re-ignite oven burner; Adjust temperature setting
Uneven cooking	Oven not level; Incorrect rack position	Adjust oven legs; Use recommended rack position
Gas smell	Gas leak	Immediately shut off gas, ventilate area, contact technician.

7. SPECIFICATIONS

Detailed technical specifications for the ARROW RO-9060GSKS-CF gas oven.

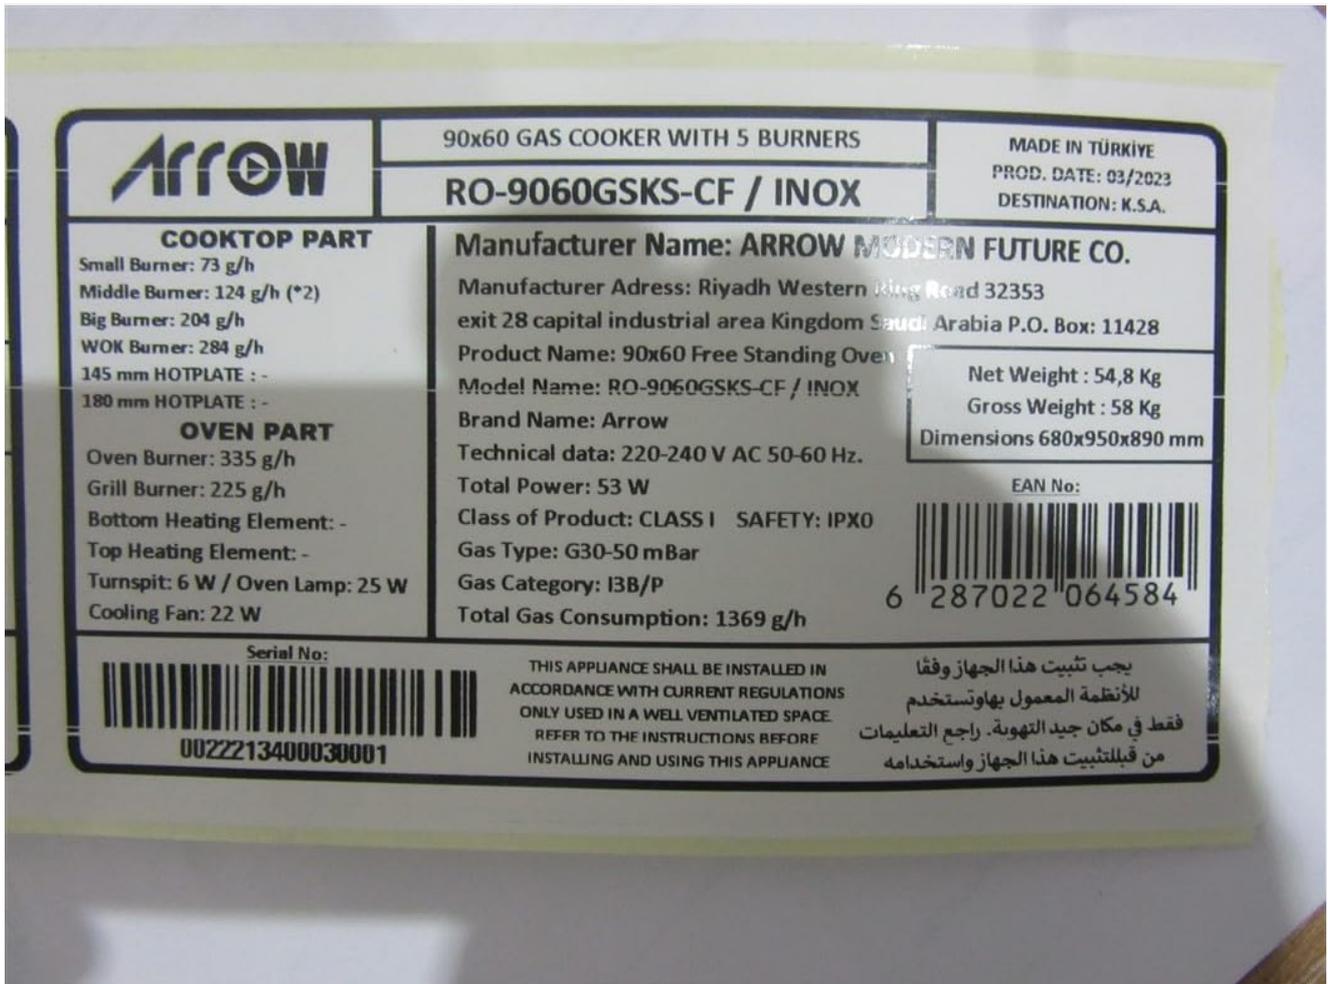

Product label showing detailed specifications and serial number 0022213400030001.

Feature	Detail
Brand Name	ARROW
Model Information	RO-9060GSKS-CF
Product Dimensions (D x W x H)	68 x 95 x 89 cm
Item Weight	62 Kilograms
Installation Type	Freestanding
Cooktop Type	Gas
Number of Heating Elements	5 (Gas Burners)
Control Type	Knob
Voltage	220-240 Volts
Frequency	50-60 Hz

Feature	Detail
Fuel Type	LPG Gas (G30-50 mBar)
Material	Stainless Steel
Included Components	Accessories (1 tray + 1 grid in oven)
Oven Features	Top & Bottom Burners, Grill, Rotisserie, Oven Lamp, Cooling Fan, Warming Drawer, Double Glass Door, Removable Inner Glass
Safety Features	Full Safety Device (FFD) for all burners and oven
Ignition	Push-button ignition for oven and hob
Timer	Mechanical Timer

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your purchase receipt and product serial number (e.g., [0022213400030001](#)) for any service inquiries.