

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Parkside](#) /

› [Parkside PAT 4 D5 Cordless Stapler Instruction Manual](#)

Parkside PAT 4 D5

Parkside PAT 4 D5 Cordless Stapler Instruction Manual

Model: PAT 4 D5

INTRODUCTION

This manual provides essential information for the safe and efficient operation, setup, and maintenance of your Parkside PAT 4 D5 Cordless Stapler. Please read these instructions carefully before first use and keep them for future reference.

The Parkside PAT 4 D5 is a lightweight and compact cordless stapler designed for fast, precise, and easy fastening tasks. It features comfortable one-hand operation with a non-slip soft grip, making it suitable for various applications such as decoration, crafts, and household repairs.

INCLUDED ACCESSORIES

Your Parkside PAT 4 D5 Cordless Stapler package includes the following items:

- Cordless Stapler PAT 4 D5
- 1000 staples (11.4 x 8 mm)
- 1000 staples (11.4 x 6 mm)
- 500 nails (10 x 1.2 mm)
- 1 USB-C charging cable

SETUP

1. Charging the Battery

The stapler is equipped with a 4V (2000 mAh) Li-ion battery. Before first use, ensure the battery is fully charged.

1. Connect the supplied USB-C charging cable to the charging port on the stapler.
2. Connect the other end of the USB-C cable to a suitable USB power adapter (not included) or a powered USB port.
3. The charge and battery status indicator will show the charging progress. Refer to the indicator lights for battery status.
4. Once fully charged, disconnect the charging cable.

2. Loading Staples or Nails

The stapler's magazine is designed for staples of 4-12 mm and nails of 6-10 x 1.2 mm. It features a double-sided level indicator to monitor the remaining fasteners.

1. Ensure the stapler is switched off and disconnected from any charging source.
2. Locate the magazine release mechanism (refer to the product diagram if available).
3. Open the magazine.
4. Insert the appropriate staples or nails into the magazine, ensuring they are correctly oriented.
5. Close the magazine securely until it clicks into place.
6. Check the level indicator to confirm fasteners are loaded.

OPERATING INSTRUCTIONS

Follow these steps for safe and effective operation of your cordless stapler.

1. **Safety First:** Always wear appropriate safety glasses when operating the stapler. Keep hands and fingers away from the stapling area.
2. **Power On:** Switch on the stapler using the power button or switch.
3. **Positioning:** Place the stapler's nose firmly against the workpiece where you intend to fasten. Ensure the stapler is held perpendicular to the surface for best results.
4. **Fastening:** Press the trigger to release a staple or nail. The stapler has an impact rate of 30 impacts per minute.
5. **Check Fastener:** After each fastening, check that the staple or nail is properly seated in the material.
6. **Power Off:** When finished or when moving to another area, switch off the stapler.

The ergonomic design with a non-slip soft grip allows for comfortable one-hand operation, making it ideal for various fastening tasks in decoration, crafts, or general household use.



Image: The Parkside PAT 4 D5 Cordless Stapler being used to fasten material to a wooden frame and to attach a back panel to a piece of furniture, demonstrating its versatility for various applications.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your stapler.

- **Cleaning:** After each use, wipe the stapler with a clean, dry cloth to remove dust and debris. Do not use harsh chemicals or abrasive cleaners.
- **Magazine Check:** Periodically check the magazine for any obstructions or bent fasteners that could cause jams.
- **Storage:** Store the stapler in a dry, cool place, away from direct sunlight and moisture. Ensure the battery is partially charged for long-term storage.
- **Battery Care:** Avoid fully discharging the Li-ion battery frequently. Charge it regularly, even if not in use, to maintain battery health.

TROUBLESHOOTING

If you encounter issues with your Parkside PAT 4 D5 Cordless Stapler, refer to the following common

problems and solutions:

- **Stapler not firing:**
 - Check if the battery is charged. Recharge if necessary.
 - Ensure the magazine is loaded with staples/nails and closed correctly.
 - Verify the stapler is switched on.
 - Make sure the stapler's nose is pressed firmly against the workpiece.
- **Staples/Nails jamming:**
 - Switch off the stapler and remove the battery.
 - Open the magazine and carefully remove any jammed or bent fasteners.
 - Ensure you are using the correct size and type of fasteners for the stapler.
 - Clean the magazine area of any debris.
- **Fasteners not fully driven:**
 - Ensure the battery is fully charged. Low battery can reduce power.
 - Press the stapler more firmly against the workpiece.
 - Check if the fasteners are suitable for the material thickness and hardness.

If the problem persists after attempting these solutions, contact customer support for further assistance.

SPECIFICATIONS

Model	PAT 4 D5
Brand	Parkside (Manufacturer: Crivit)
Battery Type	Lithium-ion
Battery Voltage	4 V
Battery Capacity	2000 mAh
Impact Rate	30 min ⁻¹
Staple Compatibility	4-12 mm
Nail Compatibility	6-10 x 1.2 mm
Material	Plastic, Fiberglass
Dimensions (approx.)	150 x 156 x 45 mm
Weight (approx.)	728 g
Color	Green
Operating Mode	Automatic

WARRANTY AND SUPPORT

For warranty claims, technical support, or service inquiries, please refer to the warranty card included with your product or contact the retailer where the product was purchased. Specific warranty terms and

conditions may vary by region and retailer. Always retain your proof of purchase.

© 2023 Parkside. All rights reserved.