

GUESS GW0609L1

GUESS Women's 26mm Watch - Instruction Manual

Model: GW0609L1

1. INTRODUCTION

Thank you for choosing the GUESS Women's 26mm Watch, Model GW0609L1. This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your new timepiece. Please read this manual thoroughly to ensure optimal performance and longevity of your watch.

This elegant watch features a 26mm silver tone case, a silver dial, and a unique G-link bracelet, designed to complement various styles.

2. PRODUCT OVERVIEW

The GUESS Women's 26mm Watch is an analog timepiece with a sophisticated design. Familiarize yourself with its key components:

- **Case:** The main body of the watch, housing the movement and dial.
- **Dial:** The face of the watch, displaying the time with hour markers and hands.
- **Hands:** Hour, minute, and second hands indicating the time.
- **Crown:** A small knob on the side of the case used for setting the time.
- **Bracelet:** The G-link bracelet secures the watch to your wrist.



Figure 2.1: Front view of the GUESS Women's 26mm Watch, showcasing the silver dial and G-link bracelet.



Figure 2.2: Side view of the watch, highlighting the crown used for time adjustment.



Figure 2.3: Back view of the G-link bracelet, showing the clasp mechanism and brand engraving.

3. SETUP

3.1 Setting the Time

1. Gently pull the crown outwards to the time-setting position.
2. Rotate the crown clockwise or counter-clockwise to move the hands and set the desired time.
3. Once the time is set, push the crown back into its original position to start the watch movement.

3.2 Adjusting the Bracelet

The watch comes with a G-link bracelet. If the bracelet is too loose, it may require adjustment by removing links. Conversely, if it is too tight, additional links may be added. The product includes 2 additional links for adjustment. It is recommended to have bracelet adjustments performed by a qualified jeweler to prevent damage.

4. OPERATING THE WATCH

Your GUESS watch is an analog timepiece designed for accurate timekeeping. Once the time is set as described in Section 3.1, the watch will continuously display the current time.

- **Reading the Time:** The longer hand indicates minutes, and the shorter hand indicates hours. A thin, sweeping hand typically indicates seconds.
- **Daily Wear:** Wear the watch regularly to ensure consistent operation.

5. MAINTENANCE

5.1 Cleaning

To maintain the appearance of your watch:

- Wipe the case and bracelet with a soft, dry cloth regularly to remove dust and fingerprints.
- For more thorough cleaning, a slightly damp cloth can be used, followed immediately by a dry cloth.
- Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish.

5.2 Water Resistance

While many watches offer some level of water resistance, specific ratings are crucial. This watch is designed for everyday wear and is generally resistant to splashes or brief immersion. Avoid prolonged exposure to water, swimming, or showering with the watch unless explicitly stated otherwise in the product specifications. Always ensure the crown is fully pushed in before any contact with water.

5.3 Battery Replacement

The watch is powered by 1 Product Specific battery (included). When the watch stops running, it indicates that the battery needs replacement. Battery replacement should be performed by a qualified watch technician or an authorized service center to prevent damage to the watch's internal components and maintain its water resistance.

5.4 Storage

When not wearing your watch, store it in a cool, dry place, away from direct sunlight, extreme temperatures, and strong magnetic fields. Keeping it in its original box or a watch case can help protect it from dust and scratches.

6. TROUBLESHOOTING

Common Issues and Solutions

Problem	Possible Cause	Solution
Watch not running	Battery depleted; Crown not pushed in.	Replace battery (professional service recommended); Push crown fully into position.
Incorrect time displayed	Time not set correctly; Crown accidentally pulled out.	Reset the time (refer to Section 3.1); Ensure crown is fully pushed in.
Bracelet too loose/tight	Requires link adjustment.	Consult a jeweler for professional adjustment (refer to Section 3.2).

If you encounter issues not listed here or if the suggested solutions do not resolve the problem, please contact GUESS customer support or an authorized service center.

7. SPECIFICATIONS

- **Model Number:** GW0609L1

- **Case Size:** 26mm
- **Case Material:** Silver Tone
- **Dial Color:** Silver
- **Bracelet Type:** G-Link, Silver Tone Stainless Steel
- **Movement:** Analog
- **Product Dimensions:** 13 x 10 x 5 inches; 3.17 ounces
- **Battery:** 1 Product Specific battery (included)
- **Manufacturer:** Guess
- **First Available Date:** October 19, 2023

8. WARRANTY AND SUPPORT

For information regarding the product warranty, please refer to the warranty card or documentation included with your purchase. Warranty terms and conditions typically cover manufacturing defects for a specified period.

For customer support, service inquiries, or to locate an authorized service center, please visit the official GUESS Watches website or contact their customer service department directly. Keep your proof of purchase for any warranty claims.

You can visit the GUESS Store on Amazon for more information:[GUESS Watches Store](#)

