

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Dirt Devil UD76800V

Dirt Devil Multi-Surface Rewind+ Upright Bagless Vacuum Cleaner

MODEL: UD76800V

1. Assembly and Initial Setup

Before operating your Dirt Devil Multi-Surface Rewind+ vacuum cleaner, ensure all components are correctly assembled. Refer to the 'What's in the Box' diagram to identify all parts.



**MULTI-SURFACE REWIND+
UPRIGHT VACUUM**

WHAT'S IN THE BOX



TURBO TOOL™



**11" 2-IN-1 CREVICE
& DUSTING BRUSH**



PET UPHOLSTERY TOOL

Figure 1: Included Components

1. **Handle Assembly:** Insert the upper handle into the main vacuum body until it clicks securely into place.
2. **Hose Connection:** Connect the flexible hose to the designated port on the vacuum body. Ensure a tight fit to maintain suction.
3. **Tool Storage:** Attach the included cleaning tools (Pet Upholstery tool, Turbo tool, 2-in-1 Dusting Brush and Crevice tool) to the onboard storage clips for easy access.



Figure 2: Assembled Vacuum with Tools

2. Operating Instructions

2.1 Powering On/Off

Plug the power cord into a suitable electrical outlet. To turn the vacuum on, step on the power pedal located near the base. Step on it again to turn the vacuum off.

2.2 Cleaning Surfaces

The Multi-Surface Rewind+ is designed for effective cleaning on both carpets and hard floors. The PowerPass Technology helps prevent dust and dirt from scattering on hard surfaces.



Figure 3: Multi-Surface Cleaning



Figure 4: Debris Containment

2.3 Using Attachments

The removable wand and Click Lock tool kit allow for versatile cleaning. Detach the wand and attach the desired tool for above-floor cleaning, upholstery, or tight spaces.

- **Pet Upholstery Tool:** Ideal for removing pet hair from furniture and stairs.
- **Turbo Tool:** Provides concentrated suction for stubborn dirt and debris.
- **2-in-1 Dusting Brush and Crevice Tool:** Use the brush for dusting delicate surfaces and the crevice tool for narrow gaps.

ABOVE-FLOOR CLEANING



Figure 5: Above-Floor Cleaning



Figure 6: Pet Hair Cleaning

2.4 Cord Management

The vacuum features a one-touch cord rewind system. To retract the power cord, gently press the cord rewind pedal located on the side of the vacuum.



Figure 7: One-Touch Cord Rewind

3. Maintenance

3.1 Emptying the Dirt Cup

For optimal performance, empty the dirt cup regularly, especially when debris reaches the 'Max Fill' line. The large, easy-release dirt cup features a one-touch button for convenient emptying.

1. Ensure the vacuum is unplugged.
2. Press the dirt cup release button to detach the dirt cup from the vacuum.
3. Position the dirt cup over a trash receptacle.
4. Press the one-touch button on the bottom of the dirt cup to open the lid and release debris.
5. Close the lid and reattach the dirt cup to the vacuum until it clicks into place.

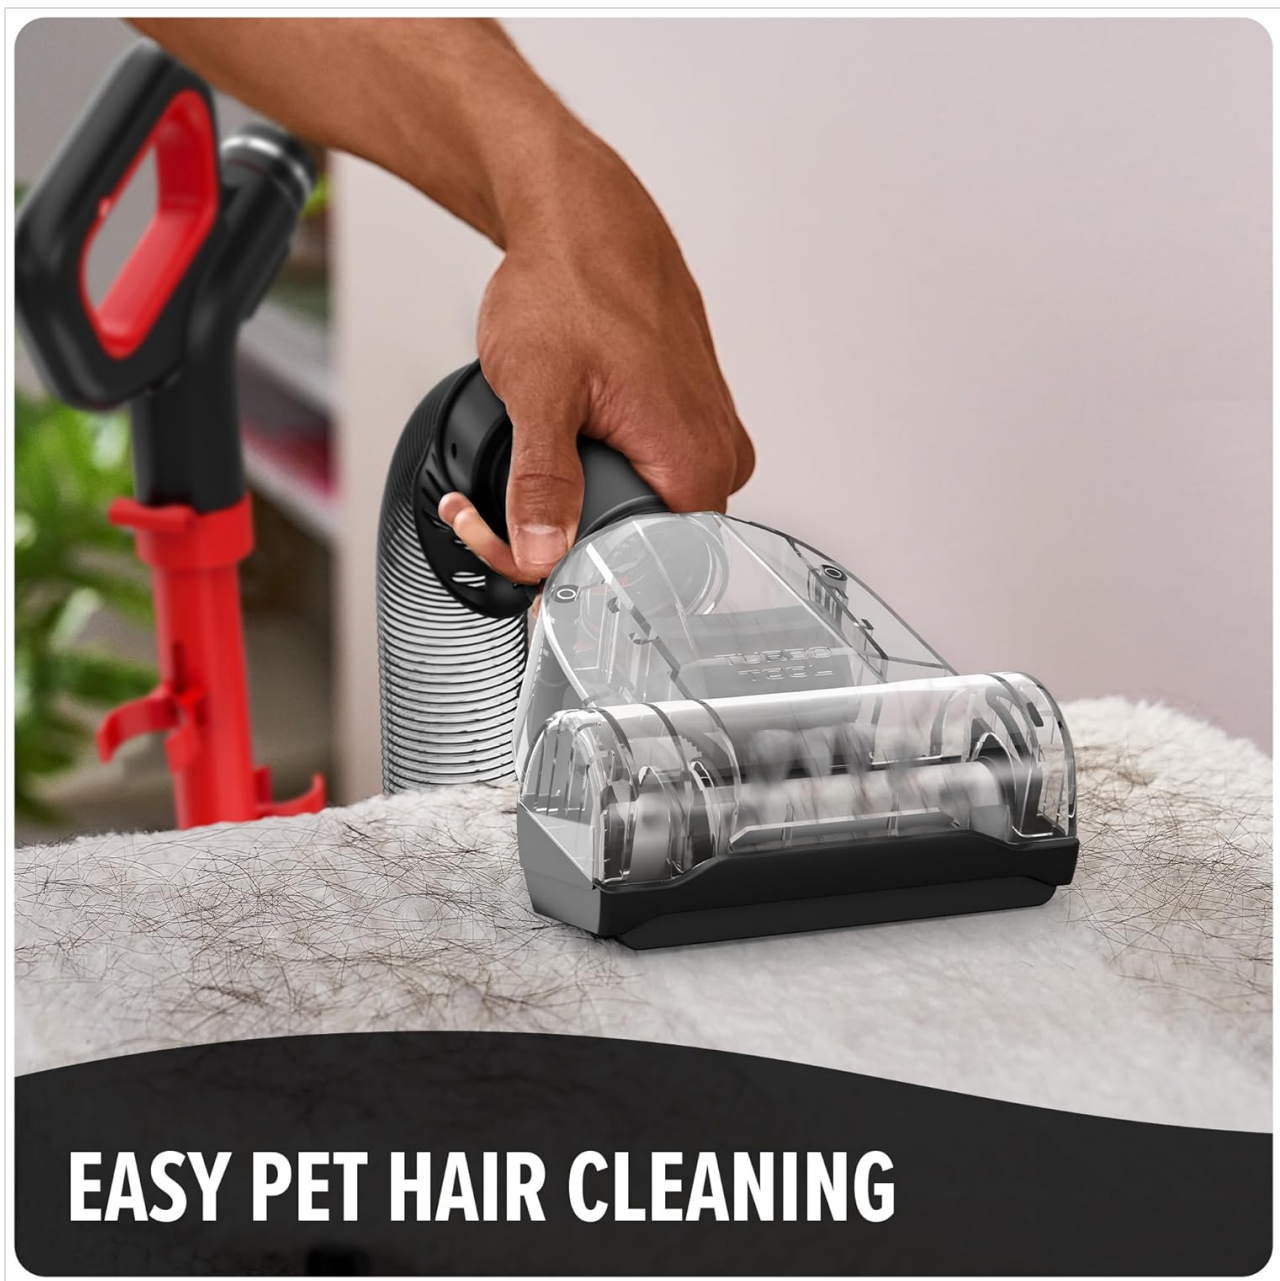


Figure 8: Emptying the Dirt Cup

3.2 Filter Maintenance

The vacuum features extended life filtration with a washable filter. Regularly check and clean the filter to maintain suction power and reduce dust particles released into the air.

1. Unplug the vacuum and remove the dirt cup.
2. Locate and remove the filter assembly from the dirt cup.
3. Tap the filter over a trash can to remove loose dirt.
4. Rinse the filter under running water until the water runs clear. Do not use detergent.
5. Allow the filter to air dry completely for at least 24 hours before reinserting it into the vacuum. Do not operate the vacuum with a wet filter.

3.3 Brush Roll Cleaning

Periodically inspect the brush roll for tangled hair or debris. Unplug the vacuum before attempting to clean the brush roll. Use scissors to carefully cut away any tangled hair or threads.

4. Troubleshooting

If you encounter issues with your vacuum, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Not plugged in; no power to outlet; thermal protector activated	Check power cord connection; check circuit breaker; allow vacuum to cool for 30 minutes if thermal protector activated.
Loss of suction	Dirt cup full; filter clogged; hose or nozzle clogged	Empty dirt cup; clean or replace filter; check hose and nozzle for obstructions.
Brush roll not spinning	Brush roll jammed; belt broken	Unplug vacuum and remove obstructions from brush roll; contact customer support if belt is broken.
Dust escaping from vacuum	Dirt cup not properly installed; filter missing or damaged	Ensure dirt cup is securely latched; check that filter is correctly installed and undamaged.

If the problem persists after attempting these solutions, please contact Dirt Devil customer support.





5. Product Specifications

Feature	Specification
Brand	Dirt Devil
Model Name	Dirt Devil Multi-Surface Rewind+ Upright Vacuum
Model Number	UD76800V
Dimensions (L x W x H)	18.25" x 12.75" x 44"
Item Weight	14.21 pounds
Capacity	1.5 Liters
Filter Type	Washable
Included Components	Crevice Tool, Dusting Brush, Pet Upholstery Tool, Turbo Tool
Is Cordless?	No
Recommended Uses	Carpet, Hard Floor, Rug, Bare Floor
Control Method	Touch (Push Button)

6. Warranty and Support

For information regarding product warranty, please refer to the documentation included with your purchase or visit the official Dirt Devil website. For additional support, parts, or service, you may also visit the [Dirt Devil Store on Amazon](#).

Related Documents

	<p>Dirt Devil Upright Vacuum User Manual</p> <p>Comprehensive user manual for the Dirt Devil Upright Carpet + Hard Floor Cyclonic Upright Vacuum, including assembly, operation, maintenance, and troubleshooting.</p>
	<p>Dirt Devil DD2502 Cyclone Vacuum Cleaner: Instruction Manual</p> <p>Comprehensive instruction manual for the Dirt Devil DD2502 Bagless Single Cyclone Vacuum Cleaner, covering essential safety guidelines, product features, usage, and maintenance for domestic cleaning.</p>
	<p>Dirt Devil Multi-Surface Extended Reach Upright Vacuum User Manual</p> <p>This user manual provides instructions for the Dirt Devil Multi-Surface Extended Reach Upright Vacuum, including assembly, operation, maintenance, troubleshooting, and warranty information. Learn how to safely and effectively use your vacuum cleaner.</p>
	<p>Dirt Devil Carpet + Hard Floor Cyclonic Upright User Manual</p> <p>Comprehensive user manual for the Dirt Devil Carpet + Hard Floor Cyclonic Upright vacuum cleaner. Includes setup, operation, maintenance, troubleshooting, and warranty information for models UD70180, UD70183, and UD70185.</p>