

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Deko](#) /
- › [Deko DVB-T2 DekoTV PRO Digital Terrestrial Receiver User Manual](#)

Deko DekoTV PRO

Deko DVB-T2 DekoTV PRO Digital Terrestrial Receiver User Manual

Model: DekoTV PRO

1. INTRODUCTION

Thank you for choosing the Deko DVB-T2 DekoTV PRO Digital Terrestrial Receiver. This device is designed to provide high-quality digital television reception, supporting the latest DVB-T2 HEVC H.265 standard. This manual will guide you through the setup, operation, and maintenance of your new receiver.

Please read this manual carefully before using the product and retain it for future reference.



The Deko DVB-T2 DekoTV PRO receiver and its included remote control.

Key Features

- **DVB-T2 HEVC H.265 Support:** Compatible with the latest digital terrestrial broadcasting standard for superior picture quality.
- **Full HD Reception:** Delivers crystal-clear Full HD resolution for an enhanced viewing experience.
- **Timeshift Function:** Pause live TV and resume watching later.
- **Personal Video Recorder (PVR):** Record your favorite programs to a USB storage device.
- **Universal Compatibility:** Designed to work with various television sets.
- **USB Media Playback:** Play multimedia files from a USB drive.
- **HDMI and SCART Connectivity:** Versatile connection options for modern and older TVs.



An overview of the Deko DVB-T2 DekoTV PRO's main functionalities, including DVB-T2 Terrestrial reception, HEVC H.265 codec support, universal compatibility, Timeshift, Personal Video Recorder (PVR), and Crystal Clear Full HD output.

2. PACKAGE CONTENTS

Please check the package for the following items:

- Deko DVB-T2 DekoTV PRO Receiver
- Remote Control (AAA batteries not included)
- HDMI Cable
- User Manual

3. SETUP GUIDE

3.1 Connecting the Receiver

Follow these steps to connect your DekoTV PRO receiver to your television and antenna:

1. **Antenna Connection:** Connect your terrestrial antenna cable to the **RF IN** port on the back of the receiver. If you wish to loop the signal to another device, connect a coaxial cable from the **RF LOOP THROUGH (RF OUT)** port to the other device.
2. **TV Connection (HDMI):** For optimal picture quality, connect one end of the provided HDMI cable to the **HDMI** port on the receiver and the other end to an available HDMI input on your television.
3. **TV Connection (SCART):** If your television does not have an HDMI input, connect a SCART cable (not included) from the **SCART** port on the receiver to the SCART input on your television.
4. **Power Connection:** Connect the power cable to the receiver's power input and then plug it into a wall outlet.
5. **USB Device (Optional):** If you plan to use Timeshift or PVR functions, or play media files, connect a USB storage device (e.g., USB flash drive or external hard drive) to the **USB** port on the front of the receiver.



The rear panel of the Deko DVB-T2 DekoTV PRO receiver, clearly labeling the RF IN, RF LOOP THROUGH (RF OUT), HDMI, and SCART ports, along with the power input.



A detailed view of the Deko DVB-T2 DekoTV PRO receiver's rear connections, including ANT IN, ANT OUT, S/PDIF Coaxial, HDMI, SCART, and the power input.

3.2 Initial Power On and Channel Scan

1. Ensure all connections are secure.
2. Insert 2 AAA batteries into the remote control (not included).
3. Turn on your television and select the correct HDMI or SCART input source.
4. Press the **POWER** button on the receiver or remote control to turn on the device.
5. The first time you power on, the receiver will likely display an initial setup wizard. Follow the on-screen prompts to select your preferred language and country.
6. Initiate an automatic channel scan. The receiver will search for available digital terrestrial channels in your area. This process may take several minutes.
7. Once the scan is complete, the receiver will save the channels and display the first available channel.

4. OPERATING INSTRUCTIONS

4.1 Remote Control Functions

Familiarize yourself with the remote control buttons for easy navigation and control.

- **POWER:** Turns the receiver on or off.
- **CH+/CH-:** Changes channels up or down.
- **VOL+/VOL-:** Adjusts the volume level.
- **MUTE:** Mutes or unmutes the audio.
- **MENU:** Accesses the main menu for settings and features.
- **EXIT:** Exits the current menu or screen.
- **OK/ENTER:** Confirms selections or displays channel information.
- **Navigation Buttons (Up/Down/Left/Right):** Navigates through menus and options.
- **INFO:** Displays program information.
- **EPG:** Accesses the Electronic Program Guide.
- **REC:** Starts recording the current program (with USB device connected).
- **PLAY/PAUSE, STOP, FF, REW:** Controls media playback and Timeshift functions.
- **Numeric Buttons (0-9):** Directly enters channel numbers.

4.2 Channel Management

- **Changing Channels:** Use the **CH+/CH-** buttons or enter the channel number directly using the numeric buttons.
- **Electronic Program Guide (EPG):** Press the **EPG** button to view program schedules for the next few days.
- **Favorite Channels:** You can create a list of your favorite channels through the main menu settings.

4.3 Recording and Timeshift

To use recording (PVR) and Timeshift functions, a USB storage device must be connected to the receiver.

- **Recording:** While watching a program, press the **REC** button on the remote to start recording. Press **STOP** to end the recording. Recorded programs can be accessed via the Media menu.
- **Timeshift:** Press the **PAUSE** button during live TV to activate Timeshift. The program will pause, and you can resume watching by pressing **PLAY**. You can also fast-forward or rewind within the buffered content.

4.4 Media Playback

Connect a USB storage device containing multimedia files (videos, music, photos) to the USB port. Navigate to the Media menu to browse and play your files.

4.5 Wi-Fi Connectivity (Optional)

If your DekoTV PRO receiver supports Wi-Fi and you have an external Wi-Fi dongle (not included), you can connect it to the USB port to enable internet-based features (if available in your model's firmware).



The Deko DVB-T2 DekoTV PRO receiver shown with an optional external Wi-Fi dongle connected to its USB port, enabling internet connectivity for certain features.

5. MAINTENANCE

5.1 Cleaning

- Always unplug the receiver from the power outlet before cleaning.
- Use a soft, dry cloth to wipe the exterior of the receiver.
- Do not use liquid cleaners, aerosols, or abrasive cleaning agents, as they may damage the finish or internal components.

5.2 Software Updates

Periodically check the manufacturer's website for any available software updates. Updates can improve performance, add new features, or fix bugs. Follow the instructions provided with the update package carefully.

6. TROUBLESHOOTING

If you encounter problems with your receiver, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
No Power	Power cable disconnected; Power outlet faulty; Receiver off.	Check power cable connection; Try a different outlet; Press POWER button on receiver/remote.
No Picture/Sound	Incorrect TV input selected; HDMI/SCART cable loose or faulty; No signal.	Select correct TV input (HDMI/AV); Check cable connections; Ensure antenna is connected and positioned correctly; Perform a channel scan.
Remote Control Not Working	Batteries depleted or incorrectly inserted; Obstruction between remote and receiver; Remote faulty.	Replace batteries (AAA); Ensure clear line of sight to receiver; Try another remote if available.
Poor Picture Quality/Pixelation	Weak antenna signal; Antenna not properly aligned; Interference.	Check antenna connection; Adjust antenna position; Consider a signal amplifier if signal is consistently weak.
Cannot Find Channels	Antenna not connected; Incorrect country selected; No channel scan performed.	Ensure antenna is connected; Verify country setting in menu; Perform an automatic channel scan.

6.1 Factory Reset


If problems persist, you may perform a factory reset. This will revert all settings to their default values and erase all saved channels. You will need to perform the initial setup and channel scan again.

1. Go to the main **MENU**.
2. Navigate to the **System** or **Tools** section.
3. Select **Factory Reset** or **Restore Default**.
4. You may be prompted to enter a password (default is usually 0000 or 1234).
5. Confirm the reset. The receiver will restart.

7. SPECIFICATIONS

Feature	Detail
Brand	Deko
Model Number	PRO
Color	Black
Connectivity Technology	HDMI, USB, Wi-Fi (with optional dongle)
Compatible Devices	Television
Controller Type	Remote Control

Feature	Detail
Video Encoding	H.265/HEVC
Audio Output Mode	Stereo
Surround Sound Channel Configuration	5.1
Total HDMI Ports	1
Total USB Ports	1
Power Input	100-240V, 50/60Hz
Remote Control Batteries	2 x AAA (not included)
Dimensions (approx.)	168mm (W) x 36mm (H) x 84mm (D)

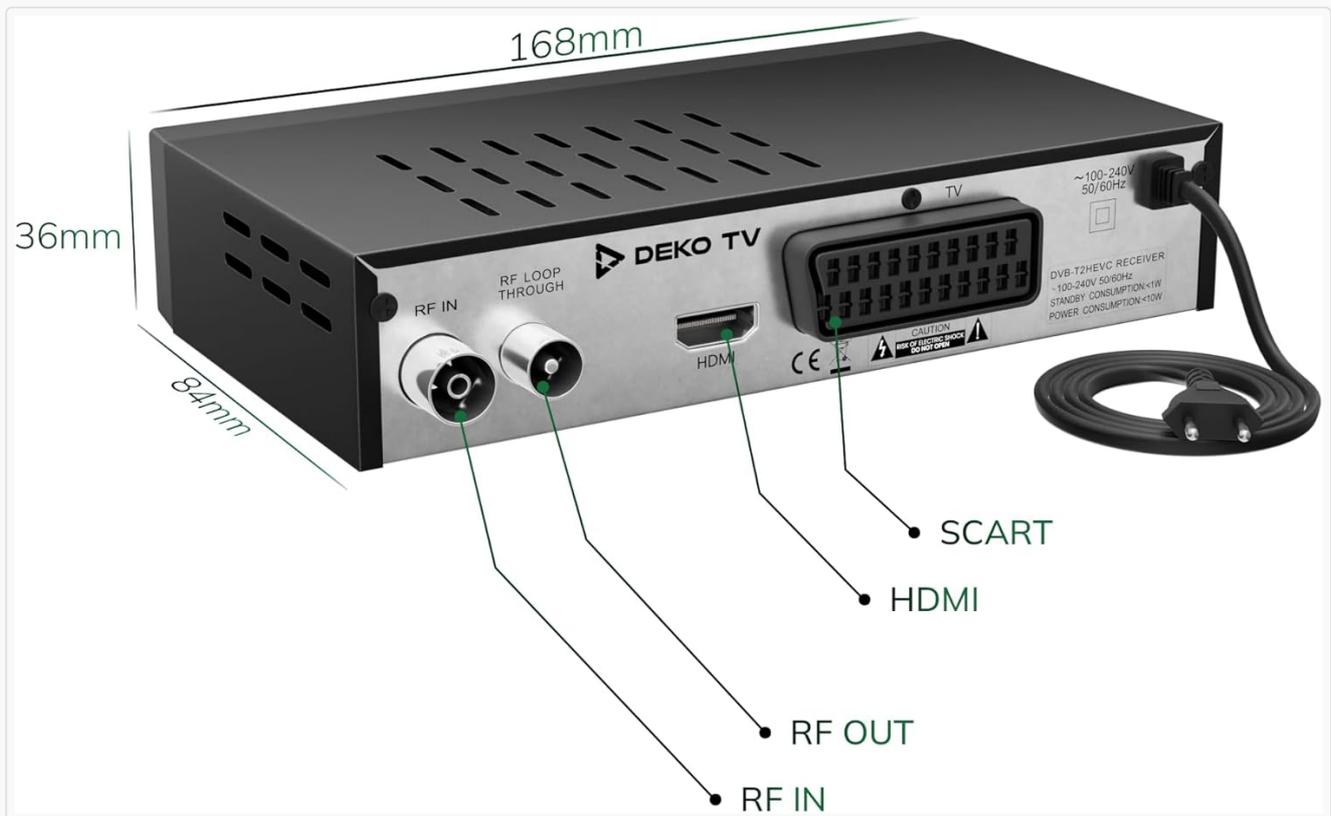

The back panel of the Deko DVB-T2 DekoTV PRO receiver, illustrating its dimensions (168mm width, 36mm height, 84mm depth) and available ports: RF IN, RF OUT, HDMI, SCART, and power input.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

For detailed warranty information, please refer to the warranty card included with your product or visit the official Deko website. Warranty terms may vary by region and retailer.

8.2 Technical Support

If you require technical assistance or have questions not covered in this manual, please contact your retailer or visit

the official Deko support website for further assistance.

