

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Sharp](#) /

› [Sharp SJB1255GS 24-inch Bottom-Freezer Refrigerator User Manual](#)

Sharp SJB1255GS

Sharp SJB1255GS 24-inch Bottom-Freezer Refrigerator

Model: SJB1255GS

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using your new refrigerator. Keep this manual for future reference.

- **Electrical Safety:** Ensure the refrigerator is connected to a properly grounded electrical outlet. Do not use extension cords.
- **Ventilation:** Allow adequate space around the refrigerator for proper ventilation to prevent overheating.
- **Flammable Materials:** Do not store explosive substances or flammable materials inside or near the refrigerator.
- **Children Safety:** Supervise children to ensure they do not play with the appliance. Old refrigerators can be dangerous if children get trapped inside.
- **Cleaning:** Always unplug the refrigerator before cleaning. Use non-abrasive cleaners.
- **Service:** Do not attempt to repair or replace any part of your refrigerator unless specifically recommended in this manual. All other servicing should be referred to a qualified technician.

PRODUCT OVERVIEW AND KEY FEATURES

The Sharp SJB1255GS is a 24-inch counter-depth bottom-freezer refrigerator designed for efficient food storage in compact spaces. Its sleek stainless-steel finish is fingerprint and smudge-resistant, maintaining a clean appearance.







Front view of the Sharp SJB1255GS refrigerator, showcasing its sleek stainless steel design.

Key Features:

- **Counter-Depth Design:** Fits flush with cabinetry for a seamless kitchen aesthetic.
- **Spacious Capacity:** Offers 11.5 cubic feet total capacity, including a 7.3 cu. ft. fresh food capacity and a 4.2 cu. ft. freezer capacity.
- **Fingerprint and Smudge-Resistant:** Stainless steel exterior designed for easy cleaning and maintenance.
- **Reversible Door Option:** Allows for flexible installation to open from either the left or right side.
- **Multi Air Flow System:** Ensures even temperature distribution throughout both compartments.
- **Fresh Converter Drawer:** A versatile drawer that can be set as a Chiller for fresh meats/fish or a Crisper for fruits and vegetables.
- **Removable Wine Rack:** Provides dedicated storage for wine bottles.
- **Electronic Temperature Control with LED Display:** Easy-to-read display for precise temperature management.
- **Freeze Boost:** Quickly lowers freezer temperature for rapid freezing.
- **Vacation Mode:** Optimizes energy consumption when you are away.
- **Auto Defrost:** Prevents frost buildup in the freezer.
- **Door Open Alarm:** Alerts you if the door is left open for too long.
- **Energy Star Certified:** Designed for energy efficiency.



The Sharp SJB1255GS is designed to be 'Garage Ready', capable of operating reliably in a wide range of ambient temperatures, from extreme cold (38°F) to extreme heat (110°F).



The SJB1255GS is Energy Star certified, indicating its energy efficiency. It has an estimated yearly energy cost of \$48 and uses approximately 397 kWh annually.

SETUP INSTRUCTIONS

1. Unpacking and Placement

- Remove all packaging materials, including tape and protective films.
- Place the refrigerator on a flat, stable surface. Ensure there is at least 2 inches (5 cm) of space on the sides and back for proper air circulation.
- Avoid placing the refrigerator in direct sunlight or near heat sources like ovens or radiators.

2. Leveling the Refrigerator

- Use a level to check if the refrigerator is balanced.
- Adjust the leveling feet at the bottom front of the appliance by turning them clockwise to raise or counter-clockwise to lower.

3. Electrical Connection

- Plug the refrigerator into an exclusive, grounded 115V AC, 60Hz electrical outlet.
- Do not use an adapter or extension cord.

4. Initial Cleaning


- Before storing food, clean the interior and exterior of the refrigerator with a mild detergent and warm water. Wipe dry thoroughly.

5. Door Reversal (Optional)

- The doors on the SJB1255GS are reversible. If you need to change the door swing direction, refer to the detailed instructions provided in the full product manual or contact customer support.

OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and internal features for optimal performance.

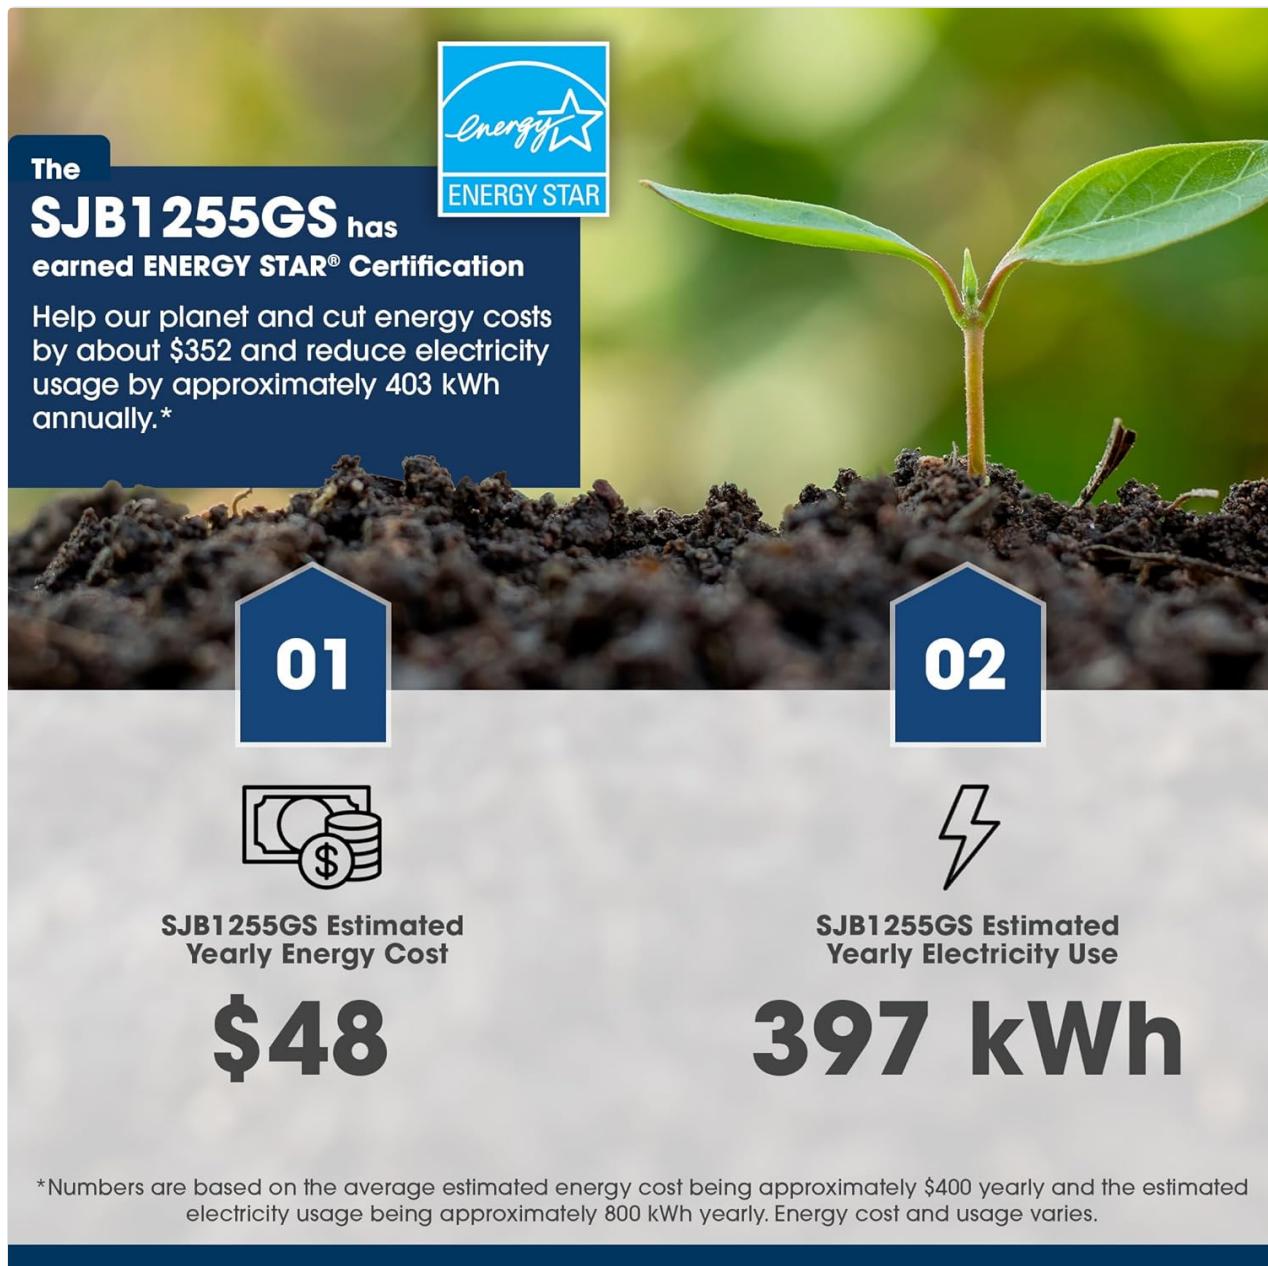

The LED control panel allows for easy adjustment of temperature and special modes.

1. Temperature Control

- Use the **TEMP** button on the LED display to adjust the temperature for both the refrigerator and freezer compartments.
- Press **TEMP** to cycle through available temperature settings. The display will show the current temperature.
- The **ZONE** button allows you to select which compartment (Fridge or Freezer) you are adjusting.

2. Fresh Converter Drawer

This dual-purpose drawer offers flexible storage options:



The Fresh Converter Drawer can be set to Chiller or Crisper mode to optimize storage conditions for different food types.

- **Chiller Mode:** Ideal for short-term storage of fresh meats and fish, maintaining a slightly colder temperature.
- **Crisper Mode:** Provides optimal humidity and temperature for keeping fruits and vegetables fresh and crisp.
- Adjust the setting using the control on the drawer itself or via the main control panel if applicable.

3. Freeze Boost Function

Activate Freeze Boost for rapid freezing of newly added items.



The Freeze Boost function quickly reduces the freezer temperature to -13°F for efficient freezing.

- Press the **FREEZE BOOST** button on the control panel.
- This function will temporarily lower the freezer temperature to -13°F (-25°C) to quickly freeze food.
- It will automatically deactivate after a set period or can be manually turned off.

4. Eco Mode

- Press the **ECO** button on the control panel to activate energy-saving mode.
- This mode optimizes the refrigerator's operation to consume less energy.

5. Vacation Mode

Use Vacation Mode when you are away for an extended period.





Vacation Mode helps save energy and keep food fresh while you are away, contributing to lower electric bills.

- Select **Vacation Mode** from the control panel.
- In this mode, the refrigerator compartment will turn off, while the freezer compartment remains operational to preserve frozen items.

6. Door Open Alarm



The Door Open Alarm feature helps prevent food spoilage by alerting you if the refrigerator door remains open for 60 seconds or longer.

- The refrigerator is equipped with an alarm that sounds if the door is left open for 60 seconds or more.
- Close the door to silence the alarm.

7. Internal Storage

Fresh Zone Temperature Control

Adjust the temperature of the Crisper and Fresh Converter Drawers to help meet your food storage needs.



The refrigerator compartment offers adjustable shelves and door bins for flexible storage.

Save Energy with Vacation Mode



Help save energy



Help keep your food fresh



Help lower your electric bill



SJB1255GS

The freezer compartment features three spacious drawers for organized storage of frozen foods.



Door Open Alarm Feature

Help prevent food from spoiling by being notified when the door has been left open for 60 seconds or more.

SJB1255GS

A removable wine rack is included for convenient storage and display of wine bottles.

MAINTENANCE

1. Cleaning the Interior

- Unplug the refrigerator before cleaning.
- Wash interior surfaces with a solution of mild soap and warm water.
- Rinse and dry thoroughly. Avoid using abrasive cleaners or solvents.

2. Cleaning the Exterior

- Wipe the exterior with a soft cloth dampened with mild detergent and water.
- For stainless steel surfaces, use a stainless steel cleaner and polish, wiping in the direction of the grain.

3. Door Gaskets

- Clean door gaskets regularly to ensure a tight seal. Use a soft cloth and mild soap.

4. Defrosting

- The SJB1255GS features an Auto Defrost system, which automatically prevents frost buildup in the freezer. Manual defrosting is generally not required.

5. Power Outages

- During a power outage, keep the refrigerator and freezer doors closed to maintain internal temperatures for as long as possible.

TROUBLESHOOTING

Before contacting customer service, try these simple solutions for common issues:

Problem	Possible Cause	Solution
Refrigerator does not operate	Not plugged in; circuit breaker tripped; power outage.	Ensure plug is secure; reset circuit breaker; check household power.
Temperature is not cold enough	Door left open; large amount of warm food added; temperature setting too high; poor ventilation.	Check door seal; allow time for new food to cool; adjust temperature setting lower; ensure proper clearance around unit.
Excessive noise	Refrigerator not level; items vibrating inside; compressor noise.	Adjust leveling feet; rearrange items; compressor noise is normal during operation.
Door does not close completely	Food packages blocking; door gasket dirty/damaged; refrigerator not level.	Rearrange food; clean/inspect gasket; adjust leveling feet.

SPECIFICATIONS



Key dimensions of the Sharp SJB1255GS refrigerator.

Specification	Value
Brand	Sharp
Model Info	SJB1255GS
Item Weight	163.1 pounds
Product Dimensions (D x W x H)	27 x 23.6 x 72.8 inches
Total Capacity	11.5 Cubic Feet

Specification	Value
Annual Energy Consumption	397 Kilowatt Hours Per Year
Refrigerator Fresh Food Capacity	7.3 Cubic Feet
Freezer Capacity	4.2 Cubic Feet
Installation Type	Freestanding
Form Factor	Compact, Freezer Bottom
Color	Stainless Steel
Voltage	115 Volts
Crispers/Drawers	1 (Fresh Converter Drawer)
Defrost System	Frost Free
Door Hinges	Reversible
Shelf Type	Plastic
Number of Shelves	2
Certification	Energy Star

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

This video from Sharp Electronics Corporation highlights the key features and benefits of the Sharp SJB1255GS Refrigerator.

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Sharp website. For technical support, service, or to order replacement parts, please contact Sharp customer service.

- Online Support:** Visit the Sharp official website for FAQs, troubleshooting guides, and contact information.
- Customer Service:** Refer to your product documentation for specific contact numbers and hours of operation.

