Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- ARCADE1UP /
- Arcade1Up Time Crisis Arcade Game Machine User Manual

ARCADE1UP 195570019429

Arcade1Up Time Crisis Arcade Game Machine User Manual

Brand: ARCADE1UP | Model: 195570019429

1. Introduction

Welcome to the world of classic arcade gaming with your new Arcade1Up Time Crisis Arcade Game Machine. This machine brings the thrill of arcade light gun shooters directly to your home, featuring iconic titles and authentic gameplay. This manual provides essential information for assembly, operation, maintenance, and troubleshooting to ensure you get the most out of your arcade experience.

2. IMPORTANT SAFETY INFORMATION

Please read all safety warnings and instructions carefully before assembling and operating the machine. Failure to do so may result in injury or damage to the product.

- **Electrical Safety:** Ensure the machine is connected to a grounded power outlet. Do not expose to water or excessive humidity. Unplug before cleaning or maintenance.
- Weight and Stability: The machine weighs approximately 99 pounds. Exercise caution during assembly and moving. Ensure it is placed on a stable, level surface to prevent tipping.
- Age Recommendation: This product is recommended for users aged 17 years and up.
- Ventilation: Do not block ventilation openings. Ensure adequate airflow around the machine.

3. WHAT'S INCLUDED

Verify that all components are present before beginning assembly:

- Arcade Cabinet Panels
- 17-inch LCD Screen
- Control Panel with 2 Light Guns (Red and Blue)
- Single Action Foot Pedal
- Light-Up Marquee
- · Power Adapter
- Assembly Hardware (screws, bolts, etc.)
- · Instruction Manual (this document)

4. SETUP AND ASSEMBLY

Assembly of your Arcade1Up machine is designed to be straightforward, with many components preassembled for your convenience. Follow the detailed instructions provided in the included assembly guide.

4.1 Unpacking

Carefully remove all components from the packaging. Keep packaging materials until assembly is complete in case of missing parts or return needs.

4.2 Assembly Steps

- 1. Assemble the main cabinet structure using the provided hardware.
- 2. Install the 17-inch LCD screen into the designated slot.
- 3. Attach the control panel, ensuring all cables for the light guns and buttons are properly connected.
- 4. Secure the light-up marquee to the top of the cabinet.
- 5. Connect the foot pedal to its designated port.
- 6. Once fully assembled, place the machine on a stable, level surface.

4.3 Power Connection

Connect the power adapter to the machine's power input and then to a standard electrical outlet. The machine is now ready for operation.





Image: The fully assembled Arcade1Up Time Crisis cabinet, showcasing its vibrant artwork and dual light guns.



Image: Side and front view of the Arcade1Up Time Crisis machine with key dimensions: 70.28" height, 20.87" width, and 18.82" length.

5. OPERATING INSTRUCTIONS

Learn how to power on your machine, select games, and utilize its unique features.

5.1 Powering On/Off

Locate the power switch, typically on the back or side of the cabinet. Flip the switch to the 'ON' position to power up the machine. To power off, flip the switch to the 'OFF' position.

5.2 Game Selection

Your Arcade1Up Time Crisis machine includes 4 classic light gun games:

- Time Crisis
- Point Blank

- Steel Gunner
- Steel Gunner 2

Navigate through the game selection menu using the controls on the panel. Select your desired game to begin playing.

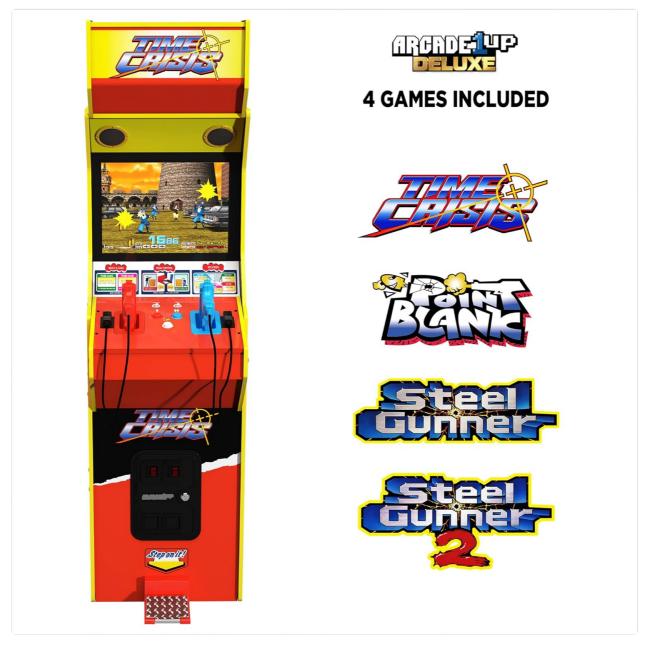


Image: Visual representation of the four classic games included: Time Crisis, Point Blank, Steel Gunner, and Steel Gunner 2.

5.3 Gameplay Controls

- **Light Guns:** Use the red and blue light guns to aim and shoot on the screen. The mechanical slide action provides realistic feedback.
- Foot Pedal: The single action foot pedal is used for specific in-game actions, such as taking cover or reloading, depending on the game.
- Start Buttons: Press the start buttons on the control panel to begin a game or add credits.



Image: A person actively playing the Arcade1Up Time Crisis machine, demonstrating the use of the light gun.

5.4 Wi-Fi Connectivity and Online Features

Your machine is Wi-Fi enabled, allowing you to connect to online leaderboards and potentially access other features via the Arcade1Up Companion App.

- 1. **Connecting to Wi-Fi:** Access the network settings through the machine's menu to connect to your home Wi-Fi network.
- 2. **Online Leaderboards:** Compete with other players by posting your high scores to the online leaderboards.
- 3. **Companion App:** Download the Arcade1Up Companion App for additional features and community interaction.

Video: Official gameplay footage of Time Crisis Deluxe, demonstrating the game's mechanics and visual experience on the Arcade1Up machine.

Regular maintenance will help prolong the life and performance of your arcade machine.

- Cleaning: Use a soft, dry cloth to wipe down the cabinet and screen. For stubborn marks, a slightly damp cloth with mild cleaner can be used, but avoid excessive moisture. Do not spray cleaners directly onto the screen or control panel.
- **Dusting:** Regularly dust the machine, especially around ventilation areas, to prevent dust buildup.
- **Storage:** If storing the machine for an extended period, ensure it is unplugged and covered to protect it from dust and moisture.

7. TROUBLESHOOTING

If you encounter any issues with your Arcade1Up machine, refer to the common problems and solutions below.

Problem	Possible Cause	Solution
Machine does not power on.	Power cable not connected; outlet not working; power switch off.	Ensure power cable is securely plugged into the machine and a working outlet. Check power switch is in 'ON' position.
Light guns are not responsive or inaccurate.	Cables loose; gun calibration needed.	Check that light gun cables are securely connected to the control panel. Access the gun calibration option in the machine's settings menu and follow on-screen instructions.
No sound or low sound.	Volume too low; speaker connection issue.	Adjust the volume using the controls on the machine. Ensure speaker connections are secure.
Wi-Fi connection issues.	Incorrect password; weak signal; network interference.	Double-check Wi-Fi password. Move machine closer to router or reduce interference. Restart machine and router.

If problems persist after attempting these solutions, please contact customer support.

8. Product Specifications

• Product Dimensions: 18.82 x 20.87 x 70.28 inches (Length x Width x Height)

Item Weight: 99 poundsScreen Size: 17-inch LCD

• Games Included: Time Crisis, Point Blank, Steel Gunner, Steel Gunner 2

• Connectivity: Wi-Fi enabled

• Controls: 2 Light Guns with mechanical slide action, 1 Single Action Foot Pedal

• Additional Features: Light-up marquee, integrated speakers, molded faux coin door

• Manufacturer Recommended Age: 17 years and up

• Release Date: October 20, 2023

9. WARRANTY AND SUPPORT

Arcade1Up products typically come with a manufacturer's warranty covering defects in materials and workmanship. For specific warranty terms and conditions, please refer to the documentation included with your purchase or visit the official Arcade1Up website.

For technical support, replacement parts, or any other inquiries, please contact Arcade1Up customer service.

10. CONTACT US

For the most up-to-date contact information and support resources, please visit the official Arcade1Up website:

www.arcade1up.com

© 2023 Arcade1Up. All rights reserved.

Related Documents - 195570019429



Arcade1Up Time Crisis Deluxe Owner's Manual: Setup, Controls, and Safety Guide

Comprehensive owner's manual for the Arcade1Up Time Crisis Deluxe arcade machine. Learn about safety precautions, installation, game controls for Time Crisis, Point Blank, and Steel Gunner, troubleshooting tips, and product specifications.



Arcade1Up Terminator 2 Owners Manual: Setup, Safety, and Troubleshooting Guide

Official owner's manual for the Arcade1Up Terminator 2 arcade machine (Model TER-A-10159). Provides essential safety precautions, setup guidance, troubleshooting steps, game settings, control explanations, and technical specifications.



Arcade1Up Pong Owners Manual: Setup, Troubleshooting, and Game Controls

Comprehensive owners manual for the Arcade1Up Pong arcade game table, covering setup, safety precautions, troubleshooting common issues, game controls, and specifications. Learn how to operate and maintain your Arcade1Up Pong unit.



Arcade1Up 40th Anniversary Cabinet Assembly Guide

Comprehensive assembly instructions for the Arcade1Up 40th Anniversary arcade cabinet. Includes a detailed parts list, tools required, step-by-step guidance with textual descriptions of diagrams, and safety information.



NFL Blitz Arcade1Up Owner's Manual

Comprehensive owner's manual for the NFL Blitz Arcade1Up, covering safety precautions, troubleshooting, game settings, and controls. Learn how to set up and operate your Arcade1Up.



Arcade1Up® Arcade Machine: Assembly, Use, Care, and Warranty Guide

This guide provides essential information for assembling, operating, maintaining, and understanding the warranty for your Arcade1Up® Arcade Machine. It covers unpacking, assembly steps, operational guidelines, cleaning advice, and warranty service procedures.