

iJoy DS20215

iJoy Disney Tim Burton's The Nightmare Before Christmas Bluetooth Speaker

MODEL: DS20215

Introduction

This manual provides instructions for the operation and maintenance of your iJoy Disney Tim Burton's The Nightmare Before Christmas Bluetooth Speaker. This portable, splashproof wireless speaker features Bluetooth connectivity, an SD card slot, and FM radio functionality, allowing for versatile audio playback.



Image: The iJoy Disney Tim Burton's The Nightmare Before Christmas Bluetooth Speaker, featuring Jack Skellington and Sally artwork.

What's in the Box

Please verify that all items are present:

- Bluetooth Speaker
- USB Charging Cable
- Backup AUX Cable
- Owners Manual (this document)

Setup

1. Charging the Speaker

Before initial use, fully charge the speaker. Connect the provided USB charging cable to the speaker's Micro USB charging port and to a standard USB power source (e.g., computer USB port, USB wall adapter). The LED indicator light will illuminate during charging and turn off when fully charged. A full charge typically takes approximately 2 hours.

2. Powering On/Off

Press and hold the Power On/Off button located on the top panel of the speaker to turn the device on or off. A sound prompt will indicate the power status.

3. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode. The LED indicator will flash, indicating it is ready to pair.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "iJoy Speaker" or a similar name from the list of found devices.
4. Once paired, the speaker will emit a confirmation sound, and the LED indicator will stop flashing and remain solid.

Party however you like!

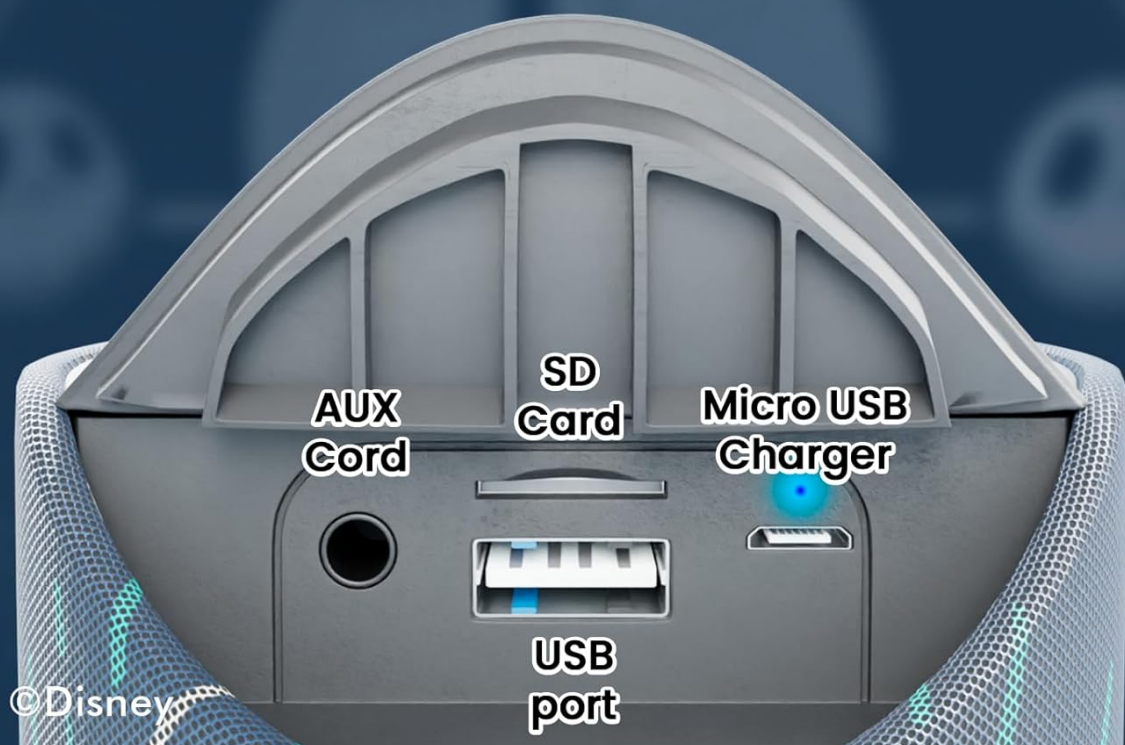


Image: Close-up view of the speaker's top panel revealing the AUX port, SD card slot, Micro USB charging port, and USB port.

Operating Instructions

Control Buttons Overview



Image: Top view of the speaker showing the control buttons: Volume -, Volume +, Play/Pause/Take Call, Mode Switch, and Power On/Off.

- **Volume -**: Press to decrease volume.
- **Volume +**: Press to increase volume.
- **Play / Pause / Take Call**: Press to play or pause audio. Press to answer an incoming call. Press and hold to reject an incoming call.
- **Mode Switch (M)**: Press to cycle through available modes: Bluetooth, FM Radio, SD Card, AUX.
- **Power On / Off**: Press and hold to turn the speaker on or off.

Bluetooth Mode

After successful pairing (refer to Setup section), your speaker will automatically connect to the last paired device when powered on. Audio from your device will play through the speaker.

SD Card Mode

Insert a Micro SD card (TF card) containing MP3 audio files into the SD card slot. The speaker will automatically switch to SD card mode and begin playing music. Use the Play/Pause and Volume buttons to control playback.

FM Radio Mode

Press the 'M' (Mode Switch) button until you hear the FM radio. For best reception, ensure the speaker is in an open area. Use the Play/Pause button to auto-scan and save available stations. Use the Volume buttons to navigate between saved stations (short press) or adjust volume (long press).

AUX Mode

Connect an external audio device using the provided 3.5mm AUX cable to the speaker's AUX port. The speaker will automatically switch to AUX mode. Control playback from your connected device.

Call Handling

When connected via Bluetooth to a smartphone, the speaker can be used for hands-free calls. Press the Play/Pause button to answer an incoming call. Press it again to end the call. Press and hold the Play/Pause button to reject an incoming call.

Maintenance

Cleaning

Wipe the speaker with a soft, dry cloth. Do not use abrasive cleaners, solvents, or harsh chemicals. Ensure all ports are dry before charging or connecting cables.

Water Resistance

This speaker is IPX4 rated, meaning it is splashproof and resistant to water splashes from any direction. It is not designed to be submerged in water. Avoid exposing the speaker to heavy rain or direct water jets.

Troubleshooting

- **Speaker will not power on:** Ensure the battery is charged. Connect the speaker to a power source using the USB charging cable and try again.
- **Cannot pair via Bluetooth:** Ensure the speaker is in pairing mode (flashing LED). Make sure Bluetooth is enabled on your device and it is within range (up to 30 feet). Try restarting both the speaker and your device.
- **No sound or low volume:** Check the volume levels on both the speaker and your connected device. Ensure the correct mode (Bluetooth, SD, FM, AUX) is selected.
- **Poor sound quality:** Move the speaker closer to your Bluetooth device to reduce interference. Ensure there are no obstructions between the speaker and the device.
- **FM radio reception is poor:** Try moving the speaker to a location with better signal reception, away from electronic interference.

Specifications

Model Name	Jack and Sally Bluetooth Speaker
Model Number	DS20215
Speaker Type	Portable Bluetooth Speaker
Connectivity Technology	Bluetooth

Wireless Communication Technology	Bluetooth
Bluetooth Range	Up to 30 Feet
Special Features	Built-in Microphone, LED Indicator Lights, Portable, SD Card Slot, FM Radio
Power Source	Battery Powered
Battery Capacity	800 Milliamp Hours
Charging Time	Approximately 2 Hours
Playtime	Up to 3 Hours
Water Resistance Level	IPX4 (Splashproof)
Product Dimensions	3"D x 3"W x 6"H
Item Weight	8 Ounces
Included Components	Bluetooth Speaker, USB Charging Cable, Backup AUX Cable, Owners Manual

Take it anywhere!

**6.3 Inches
Tall**

**2.9 Inches
Across**

©Disney



Image: Diagram illustrating the speaker's dimensions: 6.3 inches tall and 2.9 inches across.







Warranty Information

This product is covered by a 90-day manufacturer's warranty. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects and does not cover damage caused by misuse, accidents, or unauthorized modifications.

Customer Support

For further assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact iJoy customer support. Refer to the product packaging or the official iJoy website for current contact information.

Related Documents - DS20215

	<p>iJoy AQUA IPX4 Splashproof Speaker User Manual</p> <p>User manual for the iJoy AQUA wireless splashproof speaker, including setup, operation, specifications, and FCC compliance information.</p>
	<p>iJoy Mini+ Massage Chair: Use, Care, and Maintenance Manual</p> <p>Comprehensive user manual for the iJoy Mini+ robotic massage chair, covering setup, operation, safety guidelines, maintenance, and warranty information for optimal relaxation and well-being.</p>
	<p>iJoy 550 Massage Chair: Use & Care Manual</p> <p>Comprehensive guide to operating, assembling, and maintaining your iJoy 550 massage chair by Interactive Health. Learn about safety features, massage modes, and warranty information.</p>
	<p>iJoy-250 Turbo2 Use & Care Manual: Interactive Health Massage Chair</p> <p>Comprehensive use and care manual for the Interactive Health iJoy-250 Turbo2 robotic massage chair. Learn about safety instructions, operation, features, maintenance, and warranty for your robotic massage experience.</p>
	<p>IJOY Elite Mini Kit: Comprehensive User Manual and Guide</p> <p>Detailed user manual for the IJOY Elite Mini Kit, covering specifications, operation, functions, troubleshooting, and safety warnings. Learn how to use your 60W vaping device.</p>
	<p>iJoy 127 Massage Chair Use & Care Manual</p> <p>Discover the features, safety guidelines, and maintenance instructions for the iJoy 127 Robotic Massage Chair by Interactive Health. This comprehensive manual covers operation, massage modes, grounding, warranty, and specifications for optimal well-being.</p>