

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [FRIWOLE](#) /

› [FRIWOLE Electric Spin Scrubber User Manual](#)

FRIWOLE B0CCRB4MBM

FRIWOLE Electric Spin Scrubber User Manual

Model: B0CCRB4MBM

1. INTRODUCTION

Thank you for choosing the FRIWOLE Electric Spin Scrubber. This powerful and versatile cleaning tool is designed to simplify your household cleaning tasks, offering efficient scrubbing for various surfaces. This manual provides essential information on the safe operation, setup, maintenance, and troubleshooting of your new device. Please read this manual thoroughly before first use and retain it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, please observe the following safety precautions:

- **Read All Instructions:** Familiarize yourself with all operating instructions before using the scrubber.
- **Water Exposure:** The main unit is designed for cleaning wet surfaces, but do not submerge the entire unit in water. Keep the charging port dry.
- **Charging:** Use only the provided charging cable. Do not charge near water or in excessively humid environments. Unplug the scrubber when fully charged or not in use.
- **Children and Pets:** Keep the device out of reach of children and pets. This is not a toy.
- **Damaged Unit:** Do not operate the scrubber if it has been dropped, damaged, left outdoors, or dropped into water. Contact customer support for assistance.
- **Proper Use:** Use the scrubber only for its intended purpose as described in this manual. Do not use it on delicate surfaces that may be scratched.
- **Brush Head Safety:** Ensure brush heads are securely attached before operation. Do not touch rotating brush heads during use.
- **Storage:** Store the scrubber in a cool, dry place when not in use.

3. PACKAGE CONTENTS

Please check the package contents to ensure all items are present and in good condition:

- 1 x FRIWOLE Electric Spin Scrubber Main Unit

- 1 x Adjustable Extension Pole (consisting of multiple segments)
- 8 x Replaceable Brush Heads (various shapes and textures for different cleaning tasks)
- 1 x USB Charging Cable
- 1 x Wall Mount Hook
- 1 x Mesh Storage Bag
- 1 x User Manual (this document)



Figure 3.1: All components included in the FRIWOLE Electric Spin Scrubber package. This includes the main scrubber unit with a digital display, three extension pole segments, a variety of brush heads (dome, flat, corner, small round, sponge, scouring pad, microfiber pad), a USB charging cable, a wall mount hook, and a mesh storage bag.

4. PRODUCT OVERVIEW

Familiarize yourself with the main parts of your Electric Spin Scrubber:

- **Main Unit:** Contains the motor, battery, power button, and digital display. The display shows battery percentage and

speed mode.

- **Extension Pole:** Allows for adjustable length, reaching high or low areas without bending or stretching. It consists of multiple interlocking segments.
- **Brush Head Attachment Point:** Located at the end of the main unit and extension pole, where various brush heads can be securely attached.
- **Power Button:** Controls the ON/OFF function and switches between speed modes.
- **Charging Port:** Located on the main unit, used for connecting the USB charging cable.



Figure 4.1: The main unit of the scrubber, highlighting the digital display which indicates battery level (e.g., 100%) and the power button. The attachment point for brush heads is visible at the bottom.

5. SETUP

5.1 Initial Charging

1. Before first use, fully charge the scrubber.

2. Locate the charging port on the main unit.
3. Connect the USB charging cable to the scrubber and plug the other end into a compatible USB power adapter (not included) or a USB port.
4. The digital display will indicate charging status. Charge until the display shows 100%.

5.2 Attaching Brush Heads

1. Select the appropriate brush head for your cleaning task.
2. Align the brush head with the attachment point on the main unit or the end of the extension pole.
3. Push firmly until it clicks into place, ensuring it is securely fastened.
4. To remove, pull the brush head firmly away from the attachment point.

5.3 Assembling the Extension Pole

1. To extend the reach, connect the main unit to one or more extension pole segments.
2. Align the male end of the main unit with the female end of an extension pole segment.
3. Push and twist gently until the segments lock securely.
4. Repeat for additional segments if a longer pole is desired.
5. To disassemble, twist and pull the segments apart.

6. OPERATING INSTRUCTIONS

6.1 Powering On/Off and Speed Control

1. Press the power button once to turn on the scrubber. It will start at the default speed.
2. Press the power button again to switch to the higher speed mode. The digital display will indicate the current speed.
3. Press the power button a third time to turn off the scrubber.

6.2 Cleaning Tips

- **Surface Preparation:** For best results, pre-wet the surface to be cleaned and apply your preferred cleaning solution directly to the surface or the brush head.
- **Application:** Gently press the rotating brush head against the surface. Allow the scrubber's motor to do the work; excessive pressure is not necessary and may reduce battery life or motor efficiency.
- **Brush Head Selection:**
 - *Dome Brush:* Ideal for curved surfaces like sinks, bathtubs, and toilets.
 - *Flat Brush:* Best for large flat surfaces such as floors, walls, and shower doors.
 - *Corner Brush:* Designed for cleaning grout lines, corners, and tight spaces.
 - *Small Round Brush:* Suitable for detailed cleaning of faucets, fixtures, and small areas.
 - *Sponge/Scouring Pad/Microfiber Pad:* For gentle scrubbing or polishing, attach these pads to the appropriate backing plate (if included).
- **Rinsing:** After scrubbing, rinse the surface with clean water.

7. MAINTENANCE AND CARE

7.1 Cleaning the Scrubber

- After each use, remove the brush head.
- Wipe down the main unit and extension pole with a damp cloth. Do not use abrasive cleaners or immerse the main

unit in water.

- Ensure the charging port is dry before storing or recharging.

7.2 Cleaning Brush Heads

- Rinse brush heads thoroughly under running water to remove dirt and cleaning solution residue.
- Allow brush heads to air dry completely before storing to prevent mildew.
- Replace brush heads when they show signs of wear or become less effective.

7.3 Storage

- Store the scrubber and its accessories in a cool, dry place, away from direct sunlight and extreme temperatures.
- Use the provided wall mount hook for convenient storage of the main unit.
- Keep all components organized, perhaps in the mesh storage bag, to prevent loss.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Scrubber does not turn on.	Battery is depleted.	Charge the scrubber fully.
Brush head does not spin or spins slowly.	Battery is low. / Brush head is not properly attached. / Excessive pressure applied.	Recharge the battery. / Reattach the brush head securely. / Reduce pressure during cleaning.
Digital display is not working.	Unit is off or battery is completely depleted.	Press the power button to turn on. Charge the unit. If problem persists, contact support.
Scrubber stops unexpectedly during use.	Battery is depleted. / Overload protection activated.	Recharge the battery. / Reduce pressure or allow the motor to cool down.

9. SPECIFICATIONS

Brand	FRIWOLE
Model	B0CCRB4MBM
Color	Black
Handle Material	Plastic
Product Dimensions	1"L x 2"W x 1"H
Material	Nylon, Plastic
Special Feature	Adjustable
Max RPM	Up to 420 RPM (Dual Speed Motor)
Item Weight	1.2 Kilograms (2.64 pounds)
Surface Recommendation	Floor, Glass, Grout, Tile

10. WARRANTY AND SUPPORT

For warranty information, technical support, or assistance with your FRIWOLE Electric Spin Scrubber, please refer to the contact information provided with your purchase or visit the official FRIWOLE website. You may also contact Amazon customer service for support related to your purchase.

FRIWOLE Store Link: [Visit the FRIWOLE Store on Amazon](#)