

[Manuals.plus](#) /

› [MOOKEENONE](#) /

› MOOKEENONE Dishwasher Upper Mounting Brackets 8269145 - Installation Manual

MOOKEENONE 8269145

MOOKEENONE Dishwasher Upper Mounting Brackets 8269145 - Installation Manual

Brand: MOOKEENONE | Model: 8269145

1. PRODUCT OVERVIEW

The MOOKEENONE 8269145 Dishwasher Upper Mounting Brackets are designed to securely fasten your under-counter dishwasher, preventing it from moving, shaking, or tilting forward during operation. Constructed from high-quality, durable material, these brackets ensure long-lasting stability for your appliance.

These brackets are compatible with a wide range of popular dishwasher brands, including KitchenAid, Whirlpool, Kenmore, Maytag, Jenn-Air, Amana, Estate, Magic Chef, Inglis, Crosley, and Roper. They serve as a direct replacement for part numbers WP8269145 and WP8269145VP.

Each bracket measures approximately 7.6 cm (3 inches) in length and 1.6 cm (0.63 inches) in width, providing a robust solution for dishwasher stabilization.



Image 1.1: Overview of the two MOOKEENONE 8269145 dishwasher upper mounting brackets and accompanying screws.

2. SAFETY INFORMATION

- Always disconnect power to the dishwasher before beginning any installation or maintenance.
- Wear appropriate personal protective equipment, such as gloves and eye protection, during installation.
- Handle tools carefully to prevent injury.
- If you are unsure about any step, consult a qualified appliance technician.
- Ensure all connections are secure before restoring power to the appliance.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 2 x MOOKEENONE Dishwasher Upper Mounting Brackets (Part #8269145)
- 2 x Mounting Screws



Image 3.1: Contents of the package, showing two brackets and two screws.

4. INSTALLATION INSTRUCTIONS

These brackets are designed for quick and easy installation. Follow these steps to secure your dishwasher:

Step 1: Prepare the Dishwasher

Ensure the dishwasher is disconnected from its power supply. Carefully slide the dishwasher out from under the counter to access the top mounting points.

Step 2: Locate Mounting Slots

Identify the mounting slots on the top edge of your dishwasher. These are typically located on either side of the dishwasher's top panel, designed to accept mounting brackets.

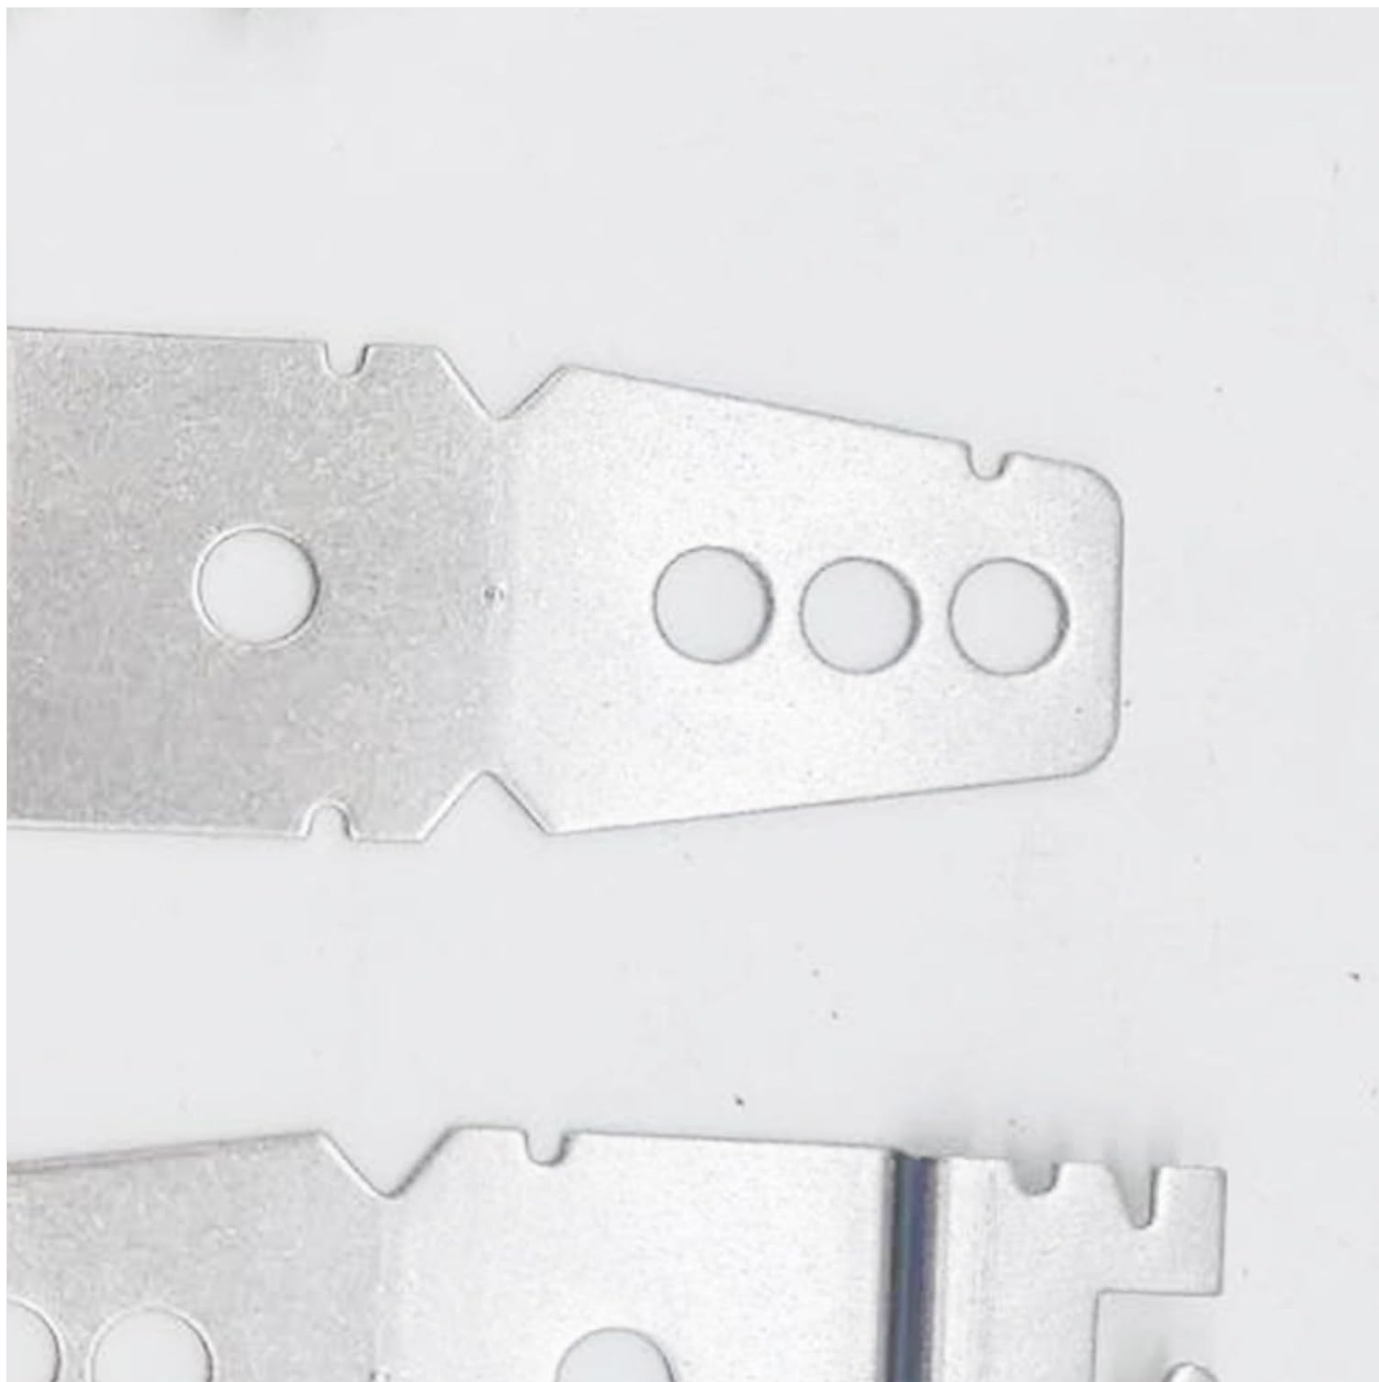


Image 4.1: Detail of the bracket's end, showing the hook mechanism for engaging with the dishwasher frame.

Step 3: Attach Brackets to Dishwasher

Slide one mounting bracket into the designated slot on each side of the dishwasher's top panel. Ensure the bracket is fully seated and oriented correctly, with the flat portion extending upwards towards the underside of the countertop.



Image 4.2: Detail of the bracket's other end, featuring multiple screw holes for flexible attachment to the countertop.

Step 4: Position Dishwasher

Carefully slide the dishwasher back into its under-counter position. Ensure the top edges of the brackets are flush against the underside of the countertop.

Step 5: Secure Brackets to Countertop

Using the provided screws, fasten each bracket to the underside of the countertop. Choose the screw hole on the bracket that provides the most secure attachment. Do not overtighten the screws.

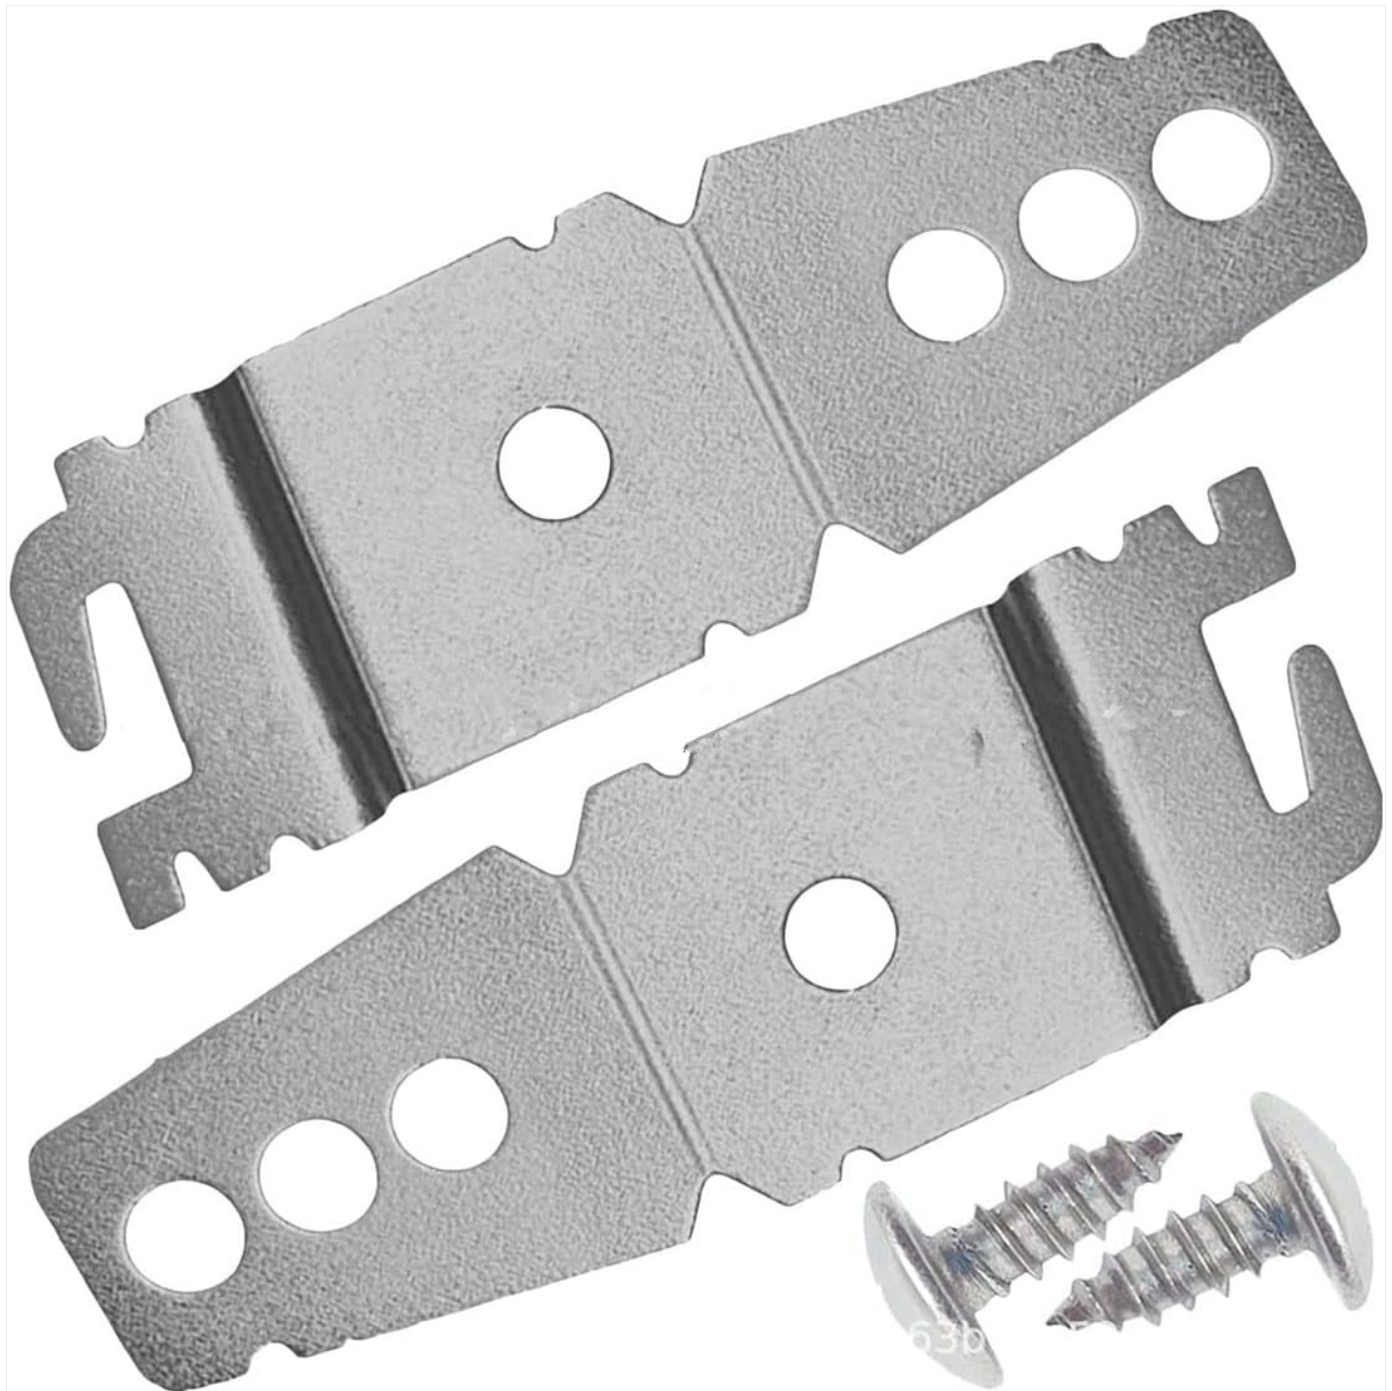


Image 4.3: Angled view of the brackets and screws, illustrating how they would be positioned for installation.

Step 6: Final Check

Gently push and pull the dishwasher to ensure it is firmly secured and does not move. Once satisfied, reconnect the dishwasher to its power supply.

5. OPERATING

These mounting brackets are passive components designed to secure your dishwasher. They do not have operational functions. Refer to your dishwasher's specific user manual for operating instructions.

6. MAINTENANCE


The MOOKEENONE 8269145 mounting brackets require minimal maintenance. Periodically inspect the brackets and screws for any signs of loosening or corrosion. If any issues are found, tighten the screws or replace the brackets as necessary. Ensure the area around the brackets remains clean and free of debris.

7. TROUBLESHOOTING

- **Dishwasher still moves after installation:** Ensure the brackets are fully seated in the dishwasher's mounting slots and securely fastened to the underside of the countertop. Check for any gaps between the bracket and the countertop.
- **Screws do not hold:** If the countertop material is soft or damaged, consider using larger screws (if appropriate for the bracket holes) or alternative mounting methods recommended by your dishwasher manufacturer.
- **Bracket does not fit:** Verify that your dishwasher model is compatible with part number 8269145. While these brackets are widely compatible, some models may require different types of mounting hardware.

8. SPECIFICATIONS

Brand	MOOKEENONE
Model Number (Part #)	8269145 (Replaces WP8269145, WP8269145VP)
Manufacturer Model	92+D365300000
Material	Durable Metal
Dimensions (per bracket)	Approx. 7.6 cm (3 inches) L x 1.6 cm (0.63 inches) W
Package Weight	Approx. 50 g
Compatibility	KitchenAid, Whirlpool, Kenmore, Maytag, Jenn-Air, Amana, Estate, Magic Chef, Inglis, Crosley, Roper

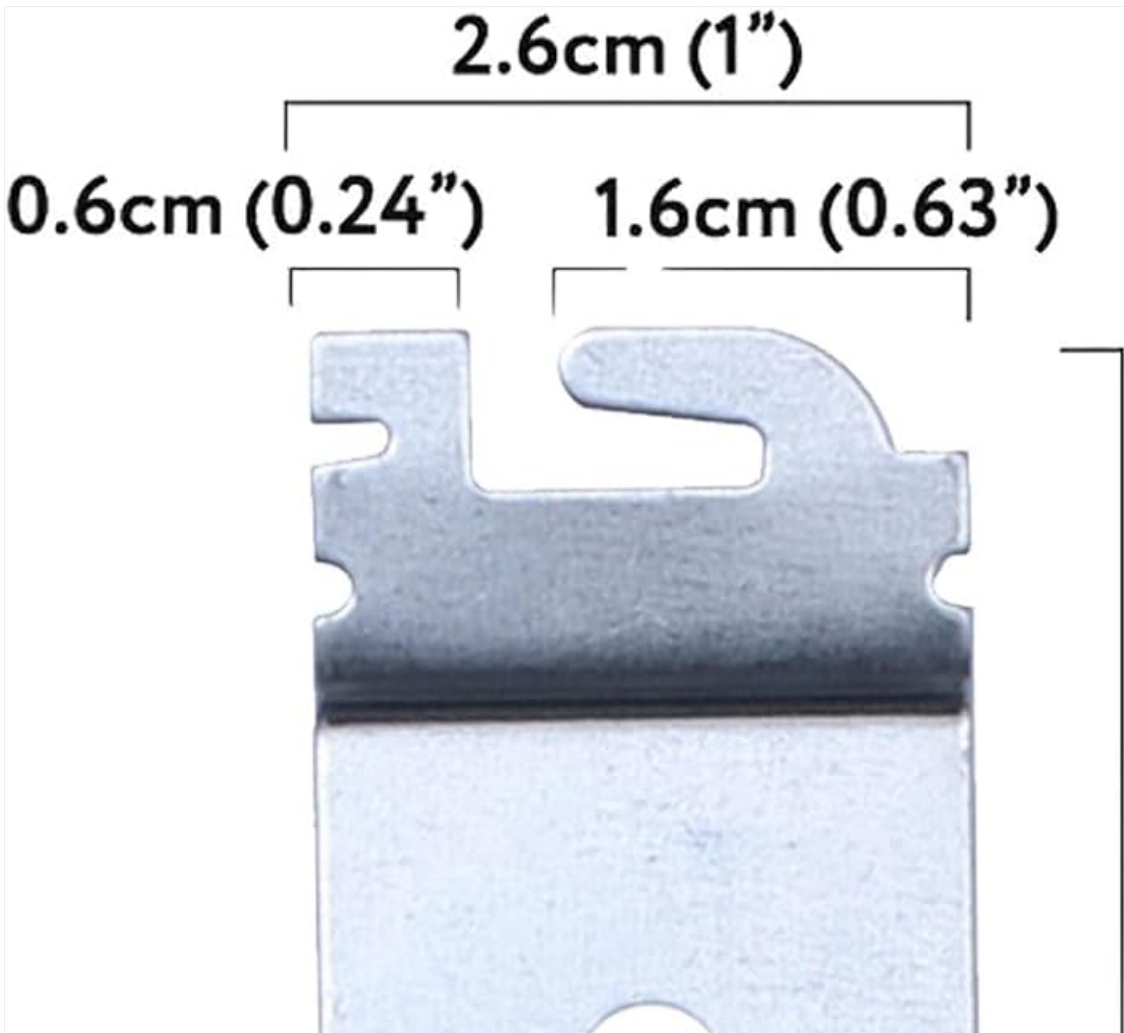

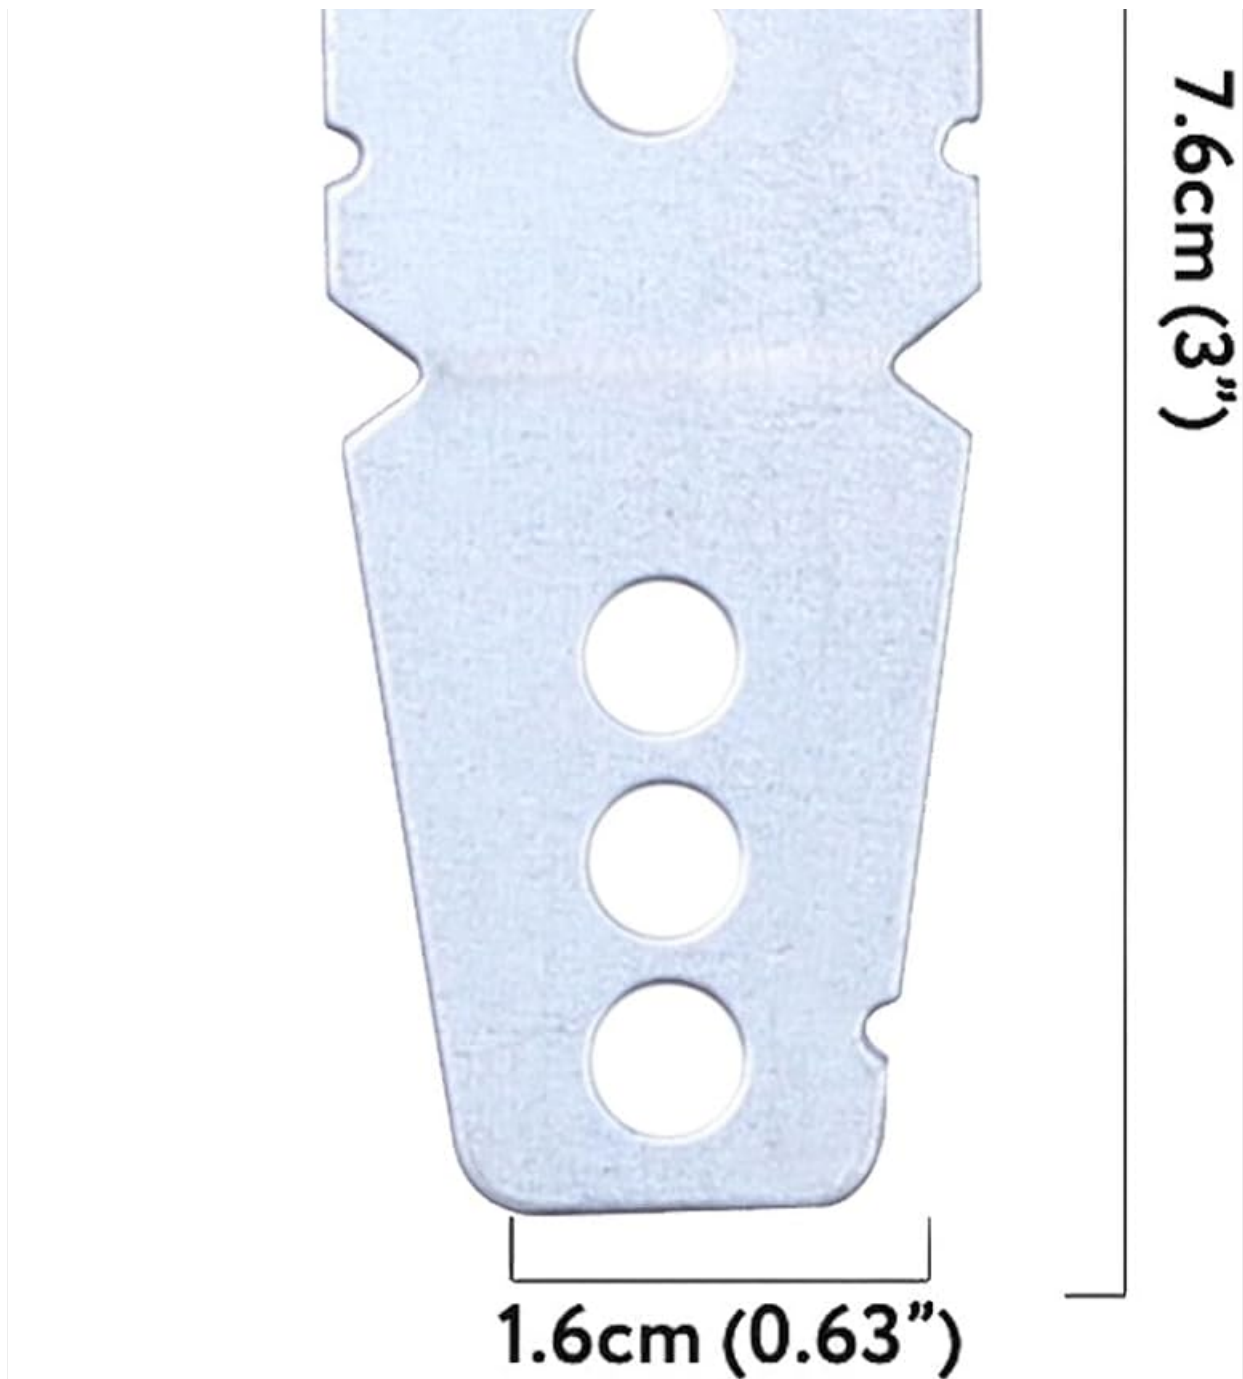 


Image 8.1: Detailed dimensions of the mounting bracket.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact MOOKEENONE customer service directly. Keep your purchase receipt for warranty claims.

© 2023 MOOKEENONE. All rights reserved.

This manual is for informational purposes only. MOOKEENONE is not responsible for any damages or injuries resulting from improper installation or use of this product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question