

## Fun Memories 12x16 Picture Frame

# Fun Memories 12x16 Walnut Solid Oak Wood Picture Frame User Manual

Model: 12x16 Picture Frame

## 1. INTRODUCTION

---

Thank you for choosing the Fun Memories 12x16 Walnut Solid Oak Wood Picture Frame. This frame is designed to display your cherished photos or artwork with elegance and protection. Crafted from natural solid oak wood and featuring high-definition tempered glass, it provides a clear view and durable safeguard for your memories. This manual provides detailed instructions for assembly, use, and care.



Image 1.1: The Fun Memories 12x16 Walnut Solid Oak Wood Picture Frame, showcasing its design and included mat.

## 2. PRODUCT COMPONENTS

---

Your Fun Memories picture frame package includes the following components:

- **Solid Oak Wood Frame:** The main frame structure, made from natural walnut-colored oak wood.
- **Tempered Glass:** A 2.0mm thick, high-definition tempered glass front with polished edges for safety and clarity.
- **Removable Mat:** A 1.2mm ivory mat, pre-cut to display an 8.5x11 inch photo within the 12x16 inch frame. This mat can be removed to display a full 12x16 inch photo.
- **Sturdy Backing:** A durable back panel that secures your photo and mat in place.
- **Secure Turn Fasteners:** Multiple fasteners on the back to hold the backing securely.
- **Sawtooth Hanger:** Pre-installed hardware for horizontal or vertical wall mounting.
- **Protective Corner Buffers:** Included for safe transit and handling.



Each frame is made of  
100% natural solid oak wood



**Solid Oak Wood Frame**   **Tempered Glass**   **Removable Mat**   **Fun Memories Print**   **Sturdy Backing**

Image 2.1: Exploded view illustrating the individual components of the picture frame, including the solid oak wood frame, tempered glass, removable mat, and sturdy backing.

### 3. SETUP INSTRUCTIONS

#### 3.1 Inserting Your Photo

1. **Prepare the Frame:** Place the frame face down on a clean, soft surface to prevent scratching the glass or frame.
2. **Open the Backing:** Rotate the secure turn fasteners to release the backing. Carefully lift and remove the backing and the mat (if you intend to use the full 12x16 space).
3. **Position Your Photo:**
  - If using the mat for an 8.5x11 inch photo: Center your 8.5x11 inch photo behind the mat opening. Secure it with tape on the back of the mat to prevent shifting.
  - If displaying a 12x16 inch photo without the mat: Place your 12x16 inch photo directly onto the tempered glass.
4. **Reassemble:** Place the mat (with photo attached, if applicable) back into the frame, followed by the sturdy backing. Ensure all layers are aligned correctly.

5. **Secure the Backing:** Rotate the secure turn fasteners back into position to firmly hold the backing in place.

### 3.2 Hanging the Frame

The frame includes pre-installed sawtooth hangers for easy wall mounting. You can hang the frame horizontally or vertically.

1. **Choose Orientation:** Decide whether you want to hang your frame vertically or horizontally. The sawtooth hanger is designed to accommodate both orientations.
2. **Mark Wall Position:** Hold the frame against the wall at your desired height and position. Use a pencil to mark the location for your nail or hook, aligning it with the center of the sawtooth hanger.
3. **Install Hanging Hardware:** Insert a nail or wall hook (not included, but standard hanging hardware is compatible) into the marked spot on the wall. Ensure it is securely fastened.
4. **Hang the Frame:** Carefully align the sawtooth hanger on the back of the frame with the installed nail or hook on the wall. Gently lower the frame until it rests securely. Adjust as needed to ensure it is level.



Image 3.1: Detailed view of the back of the frame, showing the secure turn fasteners and the sawtooth hanger for easy installation.

## Wall Hang Horizontally or Vertically

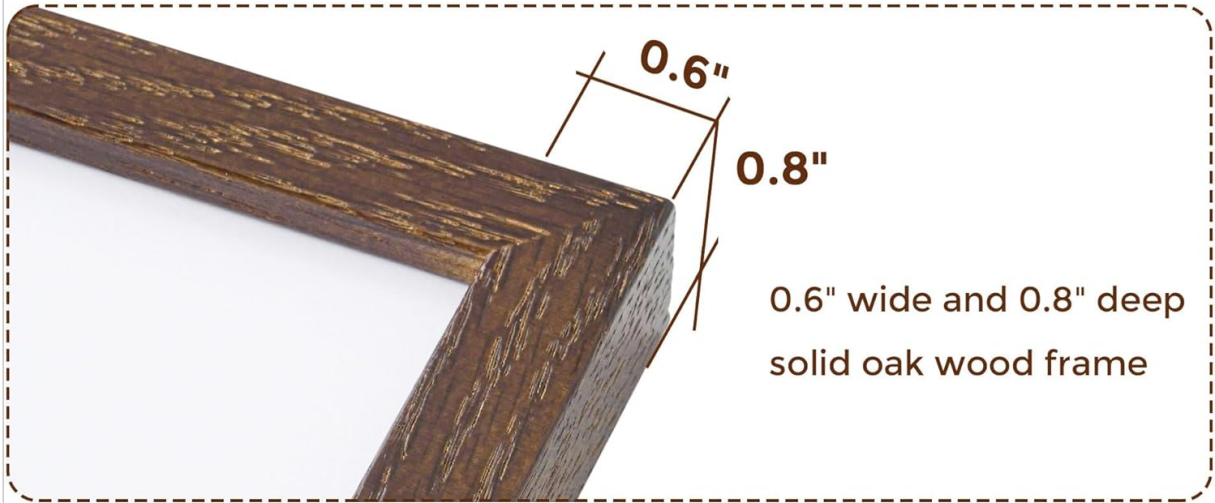


Image 3.2: Examples of the picture frame displayed both horizontally and vertically on a wall, demonstrating its versatile hanging options.

## 4. OPERATING INSTRUCTIONS

---

Once your photo or artwork is securely placed within the frame and the frame is hung or placed on a tabletop, no further operation is required. The frame is designed for static display. To change the displayed item, follow the photo insertion steps in Section 3.1.

## 5. MAINTENANCE

---

Proper care will ensure your Fun Memories picture frame remains in excellent condition for years.

- **Cleaning the Glass:** Use a soft, lint-free cloth and a non-abrasive glass cleaner. Spray the cleaner onto the cloth, not directly onto the glass, to avoid liquid seeping into the frame edges. Wipe gently.
- **Cleaning the Frame:** Wipe the oak wood frame with a dry, soft cloth. For stubborn marks, a slightly damp cloth can be used, followed immediately by a dry cloth. Avoid harsh chemicals or abrasive cleaners, as these can damage the wood finish.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading of your photo and

potential discoloration or warping of the wood frame. Position the frame in an area with indirect light.

- **Handle with Care:** When moving or adjusting the frame, always hold it by the sides to prevent fingerprints on the glass and to maintain structural integrity.

## 6. TROUBLESHOOTING

---


If you encounter any issues with your picture frame, please refer to the following common solutions:

- **Difficulty with Turn Fasteners:** The turn fasteners are designed to be secure. If they are stiff, apply gentle, firm pressure while rotating. Avoid using excessive force or tools that could damage the frame or fasteners.
- **Photo Shifting Inside Frame:** Ensure your photo is properly secured to the mat with tape (if using the mat) or positioned snugly against the glass (if not using the mat). Verify that the backing is fully secured by all turn fasteners.
- **Frame Appears Unstable When Hung:** Confirm that the wall hardware (nail/hook) is appropriate for the weight of the frame and securely installed. Ensure the sawtooth hanger is fully engaged with the wall hardware.
- **Scratches on Glass:** The tempered glass is designed to be scratch-resistant. If scratches appear, they may be on the surface and can sometimes be removed with a specialized glass scratch remover, or they may indicate damage to the glass itself.

## 7. SPECIFICATIONS

---

Feature	Detail
Brand	Fun Memories
Model	12x16 Picture Frame
Color	Walnut
Product Dimensions	16.9"L x 13"W (Overall Frame)
Photo Size (without mat)	12x16 inches
Photo Size (with mat)	8.5x11 inches
Frame Material	Solid Oak Wood
Cover Material	2.0mm Tempered Glass
Mat Material	1.2mm Ivory Mat
Mounting Type	Wall & Tabletop (Wall hanging hardware included)
Orientation	Both (Horizontal and Vertical)
Item Weight	2.92 pounds

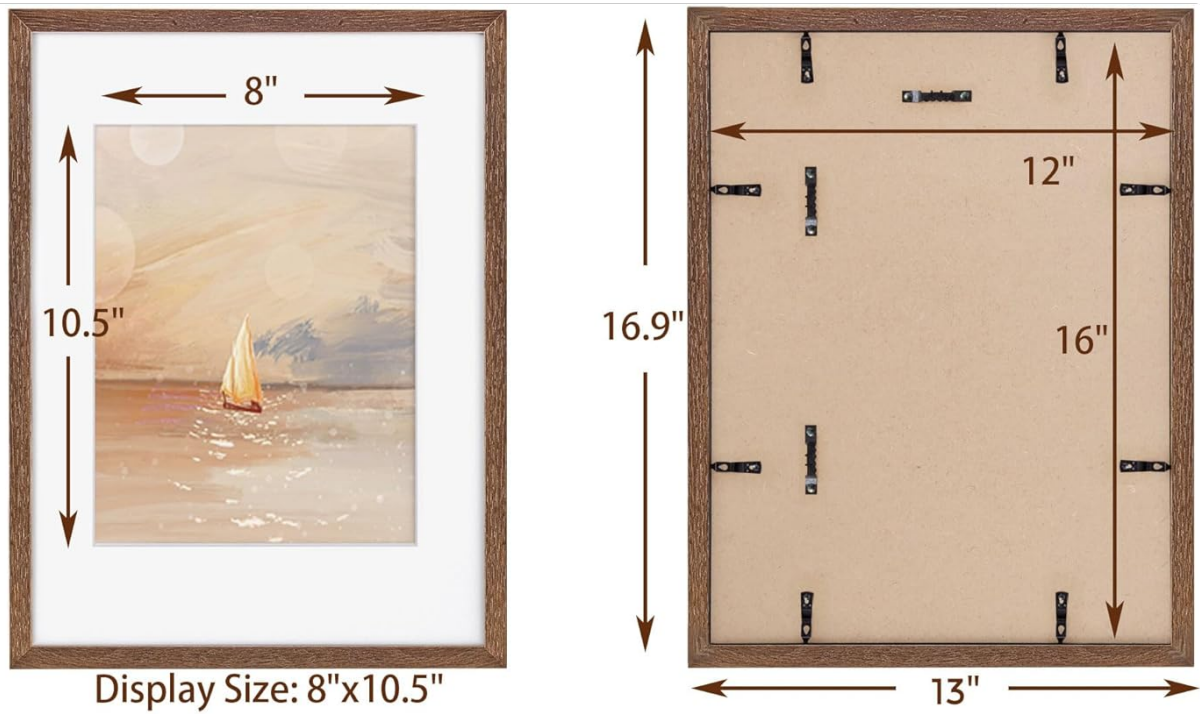

Display Size: 8"x10.5"

Frame Size: 13"x16.9"

Photo Size: 12"x16"



Display Size: 11.8"x15.7"

Image 7.1: Visual representation of the frame's overall dimensions, photo size, and mat opening size.



Image 7.2: A comparison highlighting the benefits of 2mm tempered glass, such as high transparency, anti-scratch properties, polished edges, and safety, over plexiglass.

## 8. WARRANTY AND SUPPORT

Fun Memories is committed to providing high-quality products. While specific warranty details are not provided in this manual, we encourage you to contact our customer support for any product-related inquiries or assistance.

For support, please refer to the contact information provided at the point of purchase or visit the official Fun Memories store online. Our team is available to help with any questions regarding your picture frame.

Thank you for choosing Fun Memories.

