

Vanzon V40

Vanzon V40 Portable Wireless Speaker User Manual

Brand: Vanzon | Model: V40

INTRODUCTION

Thank you for choosing the Vanzon V40 Portable Wireless Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. The Vanzon V40 is designed to deliver powerful, clear stereo sound with extended playtime, making it ideal for various environments, from home entertainment to outdoor adventures.

KEY FEATURES

- **Shocking Stereo Sound:** TWS (True Wireless Stereo) technology allows pairing two V40 speakers for enhanced dual stereo sound, creating an immersive audio experience.
- **IPX7 Structure Waterproof:** Designed with strong waterproof protection, featuring a durable silicone case and port cover for better internal protection, suitable for various environments including wet conditions.
- **Extended Wireless Range & Connectivity:** Offers an extended wireless range of up to 66 feet and enhanced connectivity via Bluetooth 5.0. Includes a built-in microphone for clear sound quality during calls.
- **Compact & Practical Design:** Small size and lightweight, with a portable rope for easy carrying on bags or duffel bags.
- **Long Playtime:** High-efficiency 3600mAh lithium-ion battery provides up to 24 hours of playtime.
- **Multiple Play Modes:** Supports TF card (WAV / FLAC / APE / MP3 format) and 3.5mm AUX input, in addition to Bluetooth, offering versatile playback options.

The Vanzon V40 speaker is shown half-submerged in water, with "IPX7 OUTDOOR WATERPROOF" text, emphasizing its robust water protection for outdoor use.

An X-ray view of the Vanzon V40 speaker revealing its internal battery components, accompanied by text indicating "24H LONG PLAY TIME" and "With 50% volume can play for more than 15 hours," showcasing its extended battery life.

A smartphone screen shows a music playlist, with two Vanzon V40 speakers depicted below, illustrating Bluetooth 5.0 connectivity and support for Micro SD and AUX input.

An exploded view of the Vanzon V40 speaker highlights its internal two drives and two passive radiators, explaining how they emit 20W stereo sound for a "TWS STEREO EFFECT."

Two individuals are shown holding Vanzon V40 speakers, with arrows indicating wireless connection between them, illustrating the True Wireless Stereo (TWS) function for pairing two speakers to create a small home theater effect.

WHAT'S IN THE BOX

- 1 x Bluetooth Speaker
- 1 x User Manual
- 1 x Type C Charging Cable
- 1 x Portable Rope

SETUP

Charging the Speaker

Before first use, fully charge the speaker. Connect the provided Type C charging cable to the speaker's charging port and the other end to a USB power adapter (not included). The charging indicator light will show charging status.

Bluetooth Pairing

1. Power on the speaker by pressing and holding the Power button () until you hear an audible prompt.
2. The speaker will automatically enter Bluetooth pairing mode, indicated by a flashing blue LED light.
3. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select "Vanzon V40" from the list. Once connected, the LED light will turn solid blue, and you will hear a confirmation tone.

TWS Pairing (True Wireless Stereo)

To achieve true wireless stereo sound, you can pair two Vanzon V40 speakers together:

1. Ensure both Vanzon V40 speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker (this will be your primary speaker), press and hold the Mode button (M) for 2-3 seconds until you hear a pairing tone.
3. The two speakers will automatically connect to each other. Once connected, the primary speaker's LED will flash blue, and the secondary speaker's LED will be solid blue.
4. Now, connect your device to the primary speaker via Bluetooth as described in the "Bluetooth Pairing" section.

OPERATING INSTRUCTIONS

Controls Overview

Button	Function
(Power)	Press and hold to Power ON/OFF.
M (Mode)	Short press to switch between Bluetooth, TF Card, and AUX modes. Long press for TWS pairing.
▶ (Play/Pause)	Short press to Play/Pause music. Short press to Answer/End calls. Long press to Reject calls.
- (Volume Down/Previous)	Short press for Volume Down. Long press for Previous Track.
+ (Volume Up/Next)	Short press for Volume Up. Long press for Next Track.

Playing Music

- **Bluetooth Mode:** After successful pairing, music from your connected device will play through the speaker. Use your device or the speaker's controls to manage playback.
- **TF Card Mode:** Insert a TF (Micro SD) card with supported audio files (WAV / FLAC / APE / MP3) into the designated slot. The speaker will automatically switch to TF Card mode and begin playback.
- **AUX Mode:** Connect an audio device using a 3.5mm AUX cable to the speaker's AUX input port. The speaker will switch to AUX mode. Control playback from your connected device.

MAINTENANCE

- **Cleaning:** Use a soft, damp cloth to clean the speaker's surface. Do not use harsh chemicals or abrasive cleaners.
- **Water Resistance:** The speaker is IPX7 waterproof, meaning it can be submerged in up to 1 meter of water for 30 minutes. Ensure the port cover is securely closed before exposure to water. Do not expose to saltwater or other chemicals.
- **Storage:** Store the speaker in a cool, dry place away from extreme temperatures and direct sunlight.
- **Battery Care:** To prolong battery life, fully charge the speaker at least once every three months if not in regular use.

TROUBLESHOOTING

Issue	Possible Solution
Speaker does not turn on.	Ensure the battery is charged. Connect to a power source and try again.
Cannot pair with Bluetooth device.	Make sure the speaker is in pairing mode (flashing blue LED). Ensure Bluetooth is enabled on your device. Move speaker closer to device. Forget "Vanzon V40" from your device's Bluetooth list and try pairing again.
No sound or low volume.	Increase volume on both the speaker and your connected device. Ensure the speaker is not muted. Check if the correct play mode (Bluetooth, TF, AUX) is selected.
TWS pairing fails.	Ensure both speakers are Vanzon V40 models. Make sure neither speaker is connected to another Bluetooth device. Try resetting both speakers and repeating the TWS pairing steps.
Sound distortion.	Reduce the volume on both the speaker and your device. Ensure the speaker is within Bluetooth range.

SPECIFICATIONS

Feature	Detail
Model Name	V40
Speaker Type	Outdoor
Special Feature	Portable
Recommended Uses	For Music Players, travel, outdoor activities, home entertainment, wireless music streaming
Compatible Devices	Smartphone
Subwoofer Diameter	6 Millimeters
Unit Count	1.0 Count
Controller Type	Battery Powered
Surround Sound Channel Configuration	5.0
Color	Midnight
Battery Life	24 Hours
Product Dimensions	7.32"D x 3.19"W x 2.17"H

Feature	Detail
Is Waterproof	True (IPX7)
Battery Capacity	3600 Milliamp Hours
Warranty Type	Basic Warranty or Manufacturer's Warranty
Maximum Range	66 Feet
Number of Items	1
Wireless Communication Technology	Bluetooth
Speaker Size	7.32 Inches
Power Source	Battery Powered
Number of Batteries	1 Lithium Ion batteries required. (included)
Bluetooth Range	66 Feet
Number of Microphones	1
Connectivity Protocol	Bluetooth
Series Number	40
Manufacturer	Vanzon Sounds
Item Weight	1.28 pounds
Material	Plastic

WARRANTY & SUPPORT

The Vanzon V40 Portable Wireless Speaker comes with a Basic Warranty or Manufacturer's Warranty. Please refer to the warranty card included in your packaging for specific terms and conditions. For further assistance, troubleshooting, or product inquiries, please contact Vanzon customer support through the official channels provided with your purchase documentation.