

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [COULAX](#) /

› [COULAX Sonic Electric Toothbrush User Manual](#)

## COULAX HH06015 U17

# COULAX Sonic Electric Toothbrush

Model: HH06015 U17

## INTRODUCTION

Thank you for choosing the COULAX Sonic Electric Toothbrush. This manual provides essential information for the safe and effective use of your new toothbrush. Please read it thoroughly before first use and keep it for future reference.



Image: The COULAX Sonic Electric Toothbrush, showcasing the main unit, charging base, and a set of six replacement brush heads, all neatly packaged.

## PACKAGE CONTENTS

- 1 x COULAX Sonic Electric Toothbrush Handle
- 6 x DuPont Brush Heads
- 1 x USB Charging Cable
- 1 x Toothbrush Holder
- 1 x User Manual

## SETUP

### Initial Charging

Before first use, fully charge the toothbrush. Connect the USB charging cable to the charging port on the toothbrush handle and plug the other end into a compatible USB power source (e.g., power bank, PC, phone charger). A full charge typically takes approximately 3 hours and can provide up to 60 days of use (based on 2 minutes of brushing, twice a day).



Image: The electric toothbrush connected to a wall adapter via a USB cable, illustrating the charging process. The image highlights the '3 Hours Fast Charge' and 'Lasts Up to 60 Day' features.

### Attaching a Brush Head

Align the brush head with the metal shaft on the toothbrush handle and push it down firmly until it clicks into place. Ensure it is securely attached before use.



Image: A close-up view of six replacement DuPont brush heads, emphasizing their 'W' shaped design for effective cleaning. Text indicates that 6 heads provide 18 months of use, with dentists suggesting changing heads every 3 months.

## OPERATING INSTRUCTIONS

### Power On/Off

To turn the toothbrush ON, press the power button once. To turn the toothbrush OFF, press and hold the power button for at least three seconds.

### Selecting a Mode

The toothbrush features 5 performance modes to suit various dental needs. Press the power button repeatedly to cycle through the modes:

1. **Clean Mode:** For daily dental care and thorough cleaning.
2. **Sensitive Mode:** Recommended for first-time users or individuals with sensitive teeth and gums.
3. **White Mode:** Designed for stain removal and teeth whitening.
4. **Polish Mode:** For polishing teeth and enhancing brightness.
5. **Massage Mode:** Gently massages gums to improve circulation.

### Smart Timer and Quadpacer

The intelligent 2-minute timer ensures you brush for the dentist-recommended duration. The toothbrush will pause briefly every 30 seconds, signaling you to move to another quadrant of your mouth. This helps ensure even and thorough cleaning across all areas.

### Brushing Technique

Apply a small amount of toothpaste to the brush head. Place the brush at a 45-degree angle to your gums. Gently move the brush across your teeth, allowing the sonic vibrations to do the work. Do not scrub aggressively. The toothbrush's micro-vibrations are highly effective at removing plaque.



Image: A magnified view of the toothbrush bristles in action, demonstrating how micro-vibrations effectively remove up to 99.99% more plaque from tooth surfaces.



Image: A woman demonstrating the use of the COULAX electric toothbrush, highlighting its effectiveness for teeth whitening and breath freshening.

## MAINTENANCE

---

### Cleaning the Toothbrush

After each use, rinse the brush head and handle thoroughly under running water. The toothbrush is IPX7 waterproof, allowing for easy rinsing. Wipe the handle dry with a soft cloth. Do not immerse the charging base in water.

### Replacing Brush Heads

Dentists recommend replacing your toothbrush head every 3 months, or sooner if the bristles become frayed. To replace, pull the old brush head straight off the handle and push a new one on until it clicks into place.

## TROUBLESHOOTING

---

- **Toothbrush not turning on:** Ensure the toothbrush is fully charged. If the battery is low, charge it for at least 3 hours.
- **Weak vibration:** This may indicate a low battery. Recharge the toothbrush. If the issue persists after charging, contact customer support.
- **Brush head not staying on:** Ensure the brush head is pushed down firmly until it clicks into place. If it still detaches, the brush head or handle may be damaged.
- **Charging indicator not working:** Check the USB cable and power source connection. Try a different USB port or adapter.

## SPECIFICATIONS

Feature	Description
Model Number	HH06015 U17
Power Source	Battery Powered, Corded Electric (USB charging)
Battery Type	1 Lithium Ion battery (included)
Battery Life	Up to 60 days on a full charge (2 min/2x a day)
Charging Time	Approx. 3 hours
Waterproof Rating	IPX7 (handle)
Brushing Modes	5 (Clean, Sensitive, White, Polish, Massage)
Special Features	Brushing Timer (2-minute with 30-second quadpacer)
Brush Head Type	DuPont bristles, 'W' shaped
Item Firmness	Soft
Age Range	Adult and Kids
Package Dimensions	7.64 x 5.08 x 1.69 inches
Item Weight	9.88 ounces
Manufacturer	Wenzhou Liangte Electric Co.,Ltd.
ASIN	B0CCRFVFS8

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official COULAX website. If you encounter any issues not covered in this manual, please contact COULAX customer service for assistance.