

## CUBOT MAX 3

# CUBOT MAX 3 Smartphone User Manual

Model: MAX 3

## 1. INTRODUCTION

---

This manual provides essential information for the safe and efficient use of your CUBOT MAX 3 Smartphone. Please read it carefully before using your device to ensure optimal performance and longevity. The CUBOT MAX 3 features a 6.95-inch HD display, 4GB RAM, 64GB ROM (expandable up to 512GB), a 48MP triple camera, and a 5000mAh battery, powered by an Octa-Core processor running Android 11.



Image: Front view of the CUBOT MAX 3 Smartphone, showcasing its large display.

## 2. WHAT'S IN THE BOX

Verify that all items are present in your package:

- 1 x CUBOT MAX 3 Smartphone
- 1 x USB Cable
- 1 x Battery Charger
- 1 x SIM Ejector Tool

- 1 x User Manual
- 1 x Protective Case

## **3. SETUP**

---

### **3.1. Battery Installation and Initial Power On**

Before first use, you must remove the insulating protective film from the battery. This film prevents the battery from connecting during shipping.

1. Gently open the back cover of the phone.
2. Locate the battery and carefully remove the insulating film.
3. Ensure the battery is properly seated.
4. Replace the back cover.
5. Press and hold the power button until the CUBOT logo appears to turn on the device.

# Requires Attention



Open the back cover



Discover film tips



Removing the film

## 4G Global Dual SIM



Dual Nano SIM Card  
Or 1 Nano SIM Card  
and 1 TF Card

Image: Visual guide for removing the battery insulating film and installing SIM/TF cards.

### 3.2. SIM Card and TF Card Installation

The CUBOT MAX 3 supports dual Nano SIM cards or one Nano SIM card and one TF (microSD) card for expanded storage.

1. With the phone powered off, open the back cover.
2. Locate the SIM card slots.
3. Insert your Nano SIM card(s) and/or TF card into the appropriate slots, ensuring correct orientation.
4. Close the back cover securely.

## 4. KEY FEATURES

### 4.1. Display

The device features a large 6.95-inch HD+ display with a resolution of 720 x 1640P, providing clear and vivid visuals. The display ratio is 20:9.



Image: The CUBOT MAX 3 display with specifications for size, ratio, and aspect.

### 4.2. Performance and Storage

Equipped with an Octa-Core processor, 4GB RAM, and 64GB internal storage (ROM), the MAX 3 ensures smooth operation. Storage is expandable up to 512GB via a TF card.

# 4GB RAM+64GB ROM 256GB Extended



Image: Depiction of the phone's internal components highlighting 4GB RAM, 64GB ROM, and Octa-Core processor.

### 4.3. Camera System

The MAX 3 features a 48MP AI triple rear camera and a 16MP front camera. The rear camera setup includes a 48MP main lens, a 5MP macro lens, and a 0.3MP photosensitive lens, supporting a Super Night mode for low-light conditions.

# MAX 3 HD Triple Camera



**16MP**  
Front Camera



**48MP**  
Main Lens



**5MP**  
Macro Lens



**0.3MP**  
Photosensitive Lens



Image: Detailed breakdown of the MAX 3's camera system, including front and rear lens specifications.

## 4.4. Battery

A 5000mAh large capacity battery provides extended usage time, reducing the need for frequent recharging. The battery is removable for easy replacement.

# 5000mAh Battery

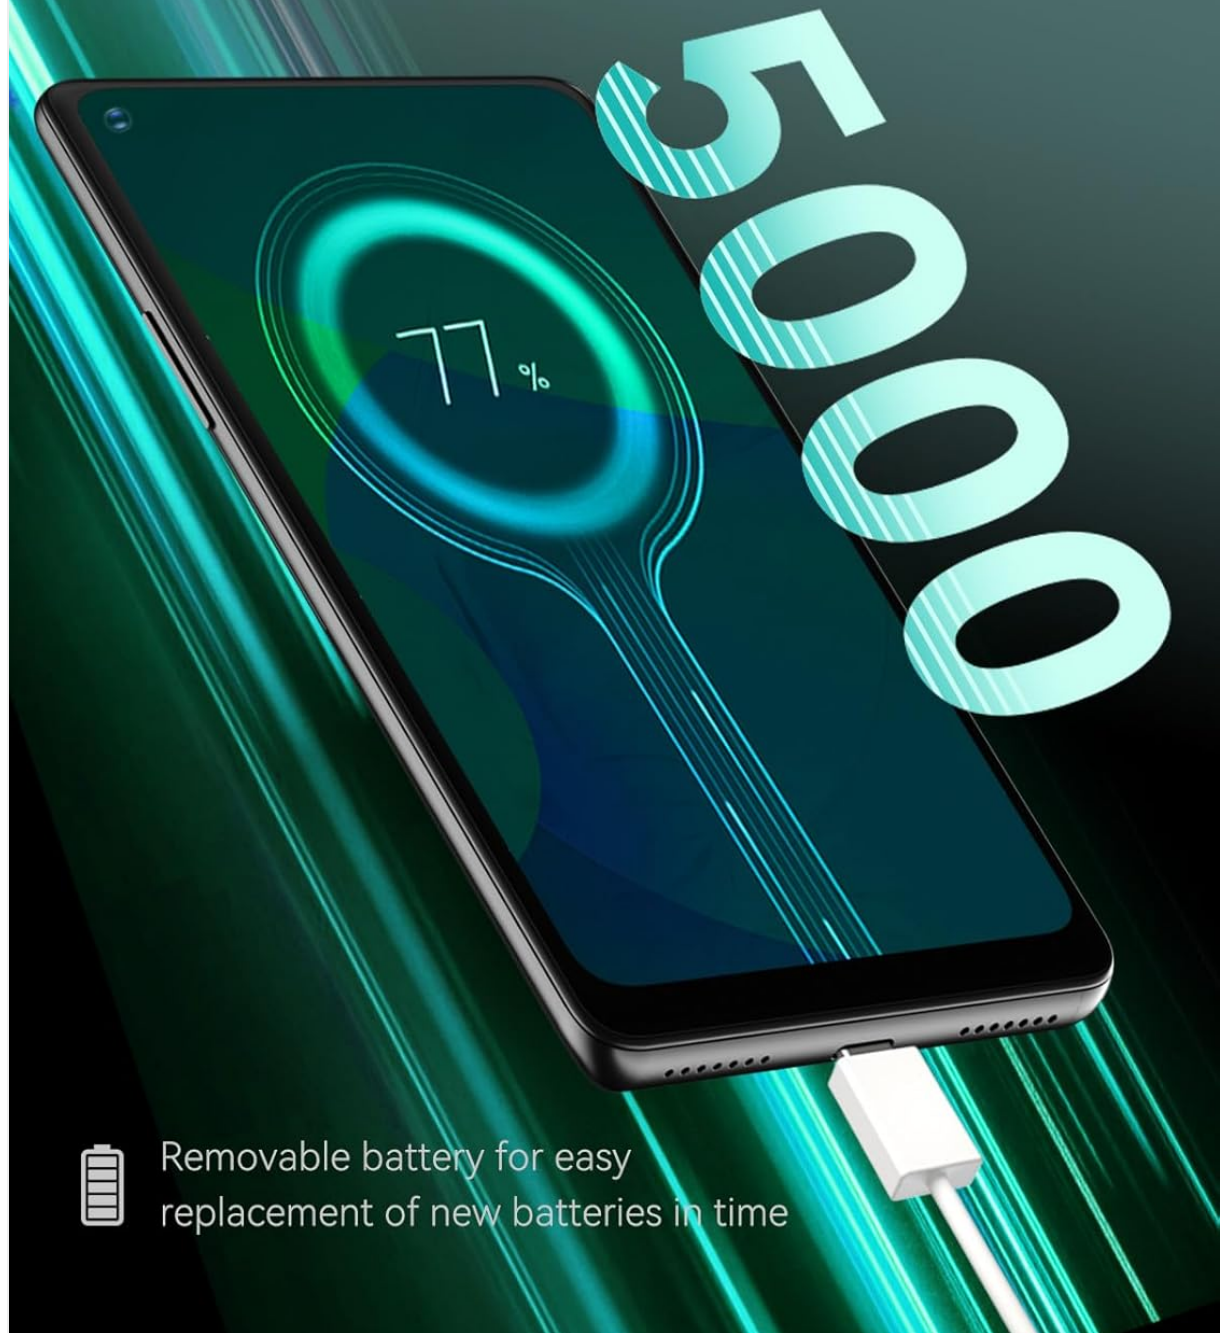


Image: The CUBOT MAX 3 charging, highlighting its 5000mAh battery capacity.

## 4.5. Operating System and Connectivity

The phone runs on Android 11, offering a fast and fluid user experience. It supports 4G global dual SIM, NFC, Face ID, fingerprint unlock, GPS, Wi-Fi 2.4G/5G, and Bluetooth 5.0.



Image: Visual representation of Android 11 interface and features like Face ID, OTG, GPS, and NFC.

## 5. OPERATING INSTRUCTIONS

### 5.1. Basic Navigation

The CUBOT MAX 3 operates on Android 11. Use touch gestures for navigation:

- **Tap:** Select an item or open an app.
- **Swipe:** Scroll through screens or lists.
- **Pinch:** Zoom in or out on photos and web pages.

- **Long Press:** Access contextual menus or move icons.
- **Notification Panel:** Swipe down from the top of the screen to access quick settings and notifications.

## 5.2. Camera Usage

To open the camera, tap the Camera icon on your home screen or app drawer. You can switch between front and rear cameras, select different modes (e.g., Photo, Video, Super Night, Macro), and adjust settings.

1. Open the Camera app.
2. Select your desired mode (e.g., "Imagen" for photo, "Video" for video).
3. Tap the shutter button to capture a photo or start/stop recording a video.
4. Use the toggle icon to switch between front and rear cameras.

## 5.3. Media Playback and Settings Adjustment

The CUBOT MAX 3 supports various media formats. You can play videos, music, and view photos using pre-installed applications. Adjusting system settings like volume, Wi-Fi, Bluetooth, and screen rotation can be done via the quick settings panel.

Your browser does not support the video tag.

Video: Demonstration of media playback (YouTube video) and quick settings panel interaction on the CUBOT MAX 3 Smartphone, including volume adjustment and toggling features like NFC and screen rotation.

## 6. MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid harsh chemicals.
- **Temperature:** Do not expose the device to extreme temperatures (hot or cold).
- **Water Resistance:** The device is water-resistant, but avoid submerging it in water or exposing it to high-pressure water jets.
- **Charging:** Use only the provided charger and USB cable to prevent damage and ensure safety.
- **Software Updates:** Keep your device's software updated to ensure optimal performance and security.

## 7. TROUBLESHOOTING

- **Device not turning on:** Ensure the battery insulating film is removed and the battery is charged. Connect to the charger for at least 15 minutes before attempting to power on.
- **Poor network signal:** Check your SIM card installation. Move to an area with better network coverage.
- **Apps crashing:** Clear the app's cache or reinstall the app. Ensure your system software is up to date.
- **Battery draining quickly:** Reduce screen brightness, close unused apps, or enable battery saver mode.
- **Touchscreen unresponsive:** Restart the device. If the issue persists, contact support.

## 8. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	CUBOT
Model Number	max_3
Operating System	Android 11.0
RAM Size	4 GB
Internal Storage (ROM)	64 GB (Expandable up to 512 GB with TF card)
Screen Size	6.95 Inches
Resolution	1920 x 1080 (Max), 720 x 1640P (HD+)
Display Type	LCD
Aspect Ratio	16:9
Pixel Density	257 Pixels per inch (PPI)
Mobile Technology	4G
Connectivity Technology	NFC, Wi-Fi 2.4G/5G, Bluetooth 5.0
Wireless Technology	GSM
SIM Card Slots	Dual SIM (Nano SIM)
Biometric Security	Fingerprint Recognition, Face Recognition
Rear Camera Resolution	48 MP (Main), 5 MP (Macro), 0.3 MP (Photosensitive)
Front Camera Resolution	16 MP
Camera Flash	Built-in
Video Recording Resolution	720p
Battery Capacity	5000 mAh (Li-Ion)
GPS Functionality	True
Dimensions	17.3 x 7.7 x 0.93 cm
Weight	490 g
Water Resistance Level	Water Resistant

## 9. SAFETY INFORMATION

- Do not attempt to disassemble or modify the device.
- Avoid exposing the device to direct sunlight for prolonged periods.
- Keep the device away from strong magnetic fields.
- Dispose of the device and battery responsibly according to local regulations.
- Do not use the phone while driving or in situations where it could distract you.

## 10. WARRANTY AND SUPPORT

---

For warranty information and technical support, please refer to the warranty card included in your package or visit the official CUBOT website. Keep your proof of purchase for warranty claims.

**Official CUBOT Website:** [www.cubot.net](http://www.cubot.net)