

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Parblo](#) /

› [Parblo Intangbo X7 Drawing Tablet User Manual](#)

Parblo Intangbo X7

Parblo Intangbo X7 Drawing Tablet User Manual

Model: Intangbo X7

INTRODUCTION

Welcome to the user manual for your Parblo Intangbo X7 Drawing Tablet. This manual provides essential information for setting up, operating, and maintaining your digital drawing tablet. The Intangbo X7 is designed to offer a natural and precise drawing experience for digital art, design, and creative work across various operating systems.

WHAT'S IN THE Box

Upon unboxing your Parblo Intangbo X7, please ensure all the following items are present:

- Intangbo X7 Drawing Tablet
- S01 Stylus
- USB Type-C Cable
- Replacement Nibs (8 pieces)
- Pen Case
- Type-C OTG Adapter
- Quick Start Guide
- Drawing Glove
- Cleaning Cloth

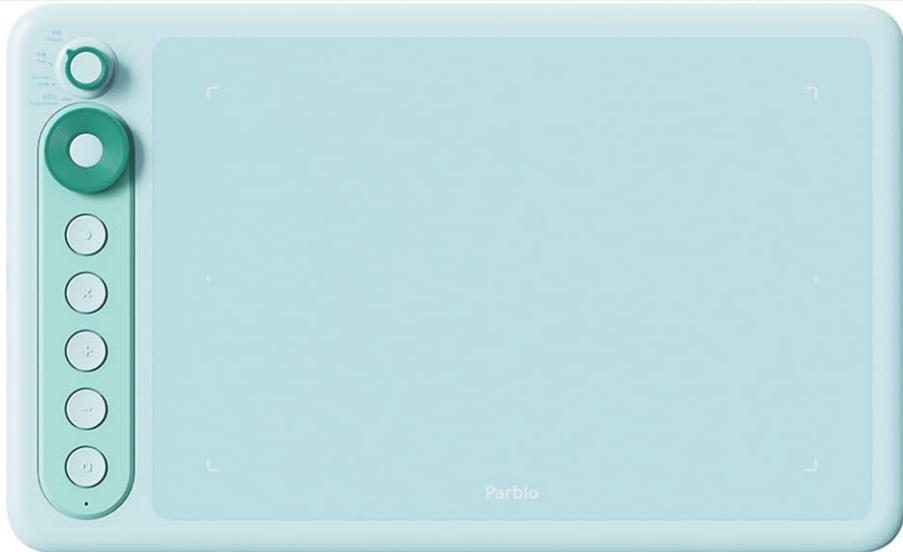


Image: All items included in the Parblo Intangbo X7 package, neatly arranged.

SETUP

1. Driver Installation

For optimal performance and full functionality, it is recommended to install the latest drivers for your Parblo Intangbo X7.

1. Visit the official Parblo website (www.parblo.com) and navigate to the support or download section.
2. Locate the drivers for the Intangbo X7 model.
3. Download the appropriate driver for your operating system (Windows, macOS).
4. Follow the on-screen instructions to complete the installation. Restart your computer if prompted.

2. Connecting the Tablet

The Intangbo X7 connects via a USB Type-C cable.

- **For Computers (Windows/macOS/Chrome OS):** Connect one end of the USB Type-C cable to the tablet and the other end to an available USB port on your computer.
- **For Android Devices (Phones/Tablets):** Use the provided Type-C OTG adapter to connect the tablet to your Android phone or tablet. Ensure your Android device supports OTG functionality.



Image: The Pablo Intangbo X7 tablet connected to a laptop, tablet, and smartphone, illustrating its multi-OS compatibility.

Note: The Pablo Intangbo X7 is not compatible with iPhone or iPad devices.

OPERATING THE TABLET

1. S01 Passive Stylus

The Intangbo X7 comes with an advanced S01 passive stylus, which does not require batteries.

- **Pressure Sensitivity:** Features 8192 levels of pressure sensitivity for precise control over line thickness and opacity.
- **Tilt Function:** Supports $\pm 60^\circ$ tilt function, allowing for natural shading and brush effects.
- **Side Buttons:** The stylus includes customizable side buttons, typically used for switching between drawing and erasing modes. These can be configured via the tablet's driver software.
- **Nib Storage:** The pen cap can be swiveled open to store up to 3 replacement nibs. A metal ring pen picker is included for easy nib replacement.

New Passive Stylus S01

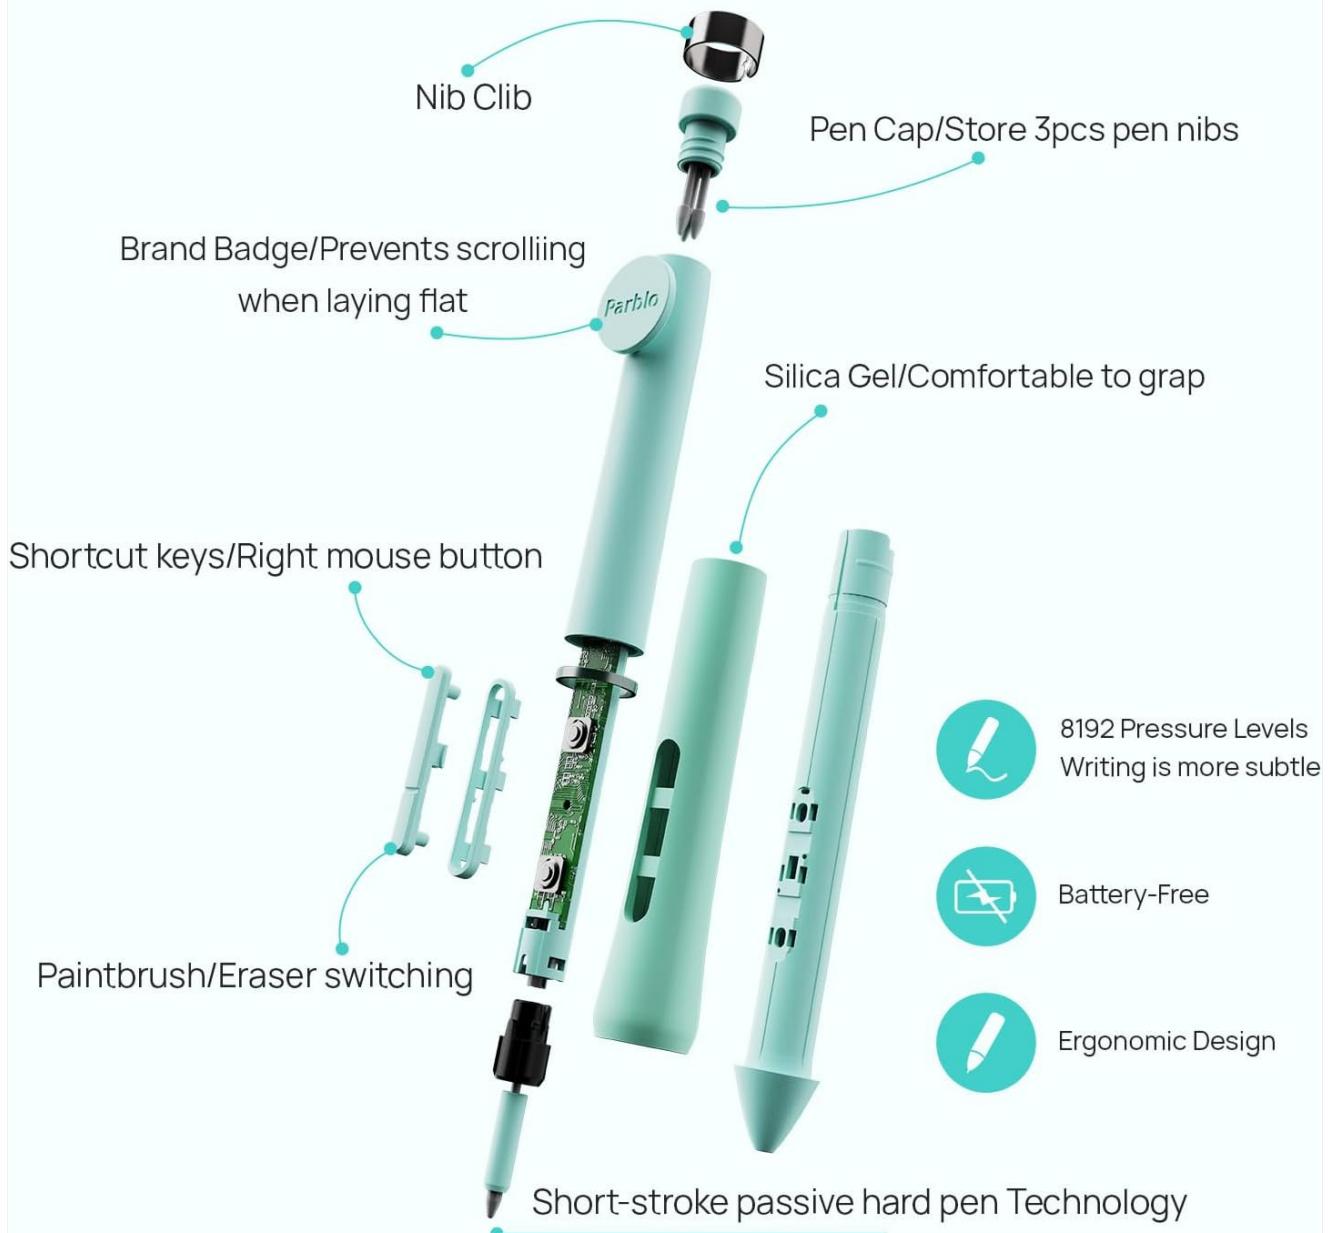


Image: Detailed breakdown of the S01 stylus, showing its components like the nib, pen cap with nib storage, shortcut keys, and ergonomic design.

Your browser does not support the video tag.

Video: Demonstrates the features of the Parblo Intangbo X7, including the S01 passive pen, pressure sensitivity, tilt support, and smooth drawing capabilities.

2. Mode Selection

The Intangbo X7 features an intuitive knob for effortless switching between different operating modes, optimizing the tablet's active area for various devices.

- **Mobile Mode:** Optimized for smartphone use.
- **Tablet Mode:** Optimized for tablet use.
- **Chromebook Mode:** Optimized for Chromebook devices.
- **Custom Mode:** Allows for user-defined active area settings via the driver software.

Unique Device Switch Mode

Supports switching between window/android/tablet/chrome devies.



Image: Close-up of the tablet's mode switch knob, indicating options for Phone, Pad, Chromebook, and Customized modes.

3. Customizable Keys

The tablet is equipped with 6 customizable keys and a mechanical dial to enhance your workflow. These keys can be programmed through the driver software to perform various functions, shortcuts, or commands in your preferred drawing applications.

- **Default Functions:** Common default assignments include Zoom In/Out, Undo, Dropper Tool, Gripper Tool, and Function Switching.
- **Customization:** Refer to the driver software interface for detailed instructions on how to customize each key and the mechanical dial.

5+1 Powerful shortcut key



Image: The Parblo Intangbo X7 tablet highlighting its 6 customizable shortcut keys and mechanical dial, with labels for common functions like Zoom, Undo, and tool selection.

4. Drawing Experience

The Intangbo X7 is designed for a smooth and responsive drawing experience, with a report rate of 266RPS to ensure lines appear without delay. It supports a wide range of drawing software.

Match Multiple Drawing Software



Image: The Parblo Intangbo X7 tablet displaying icons of multiple compatible drawing software, including ZBrush, Photoshop, CorelDRAW, Illustrator, and more.

MAINTENANCE

1. Cleaning

- Use the provided cleaning cloth or a soft, dry, lint-free cloth to wipe the tablet surface and stylus.
- Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the surface.
- Ensure the tablet is disconnected from power before cleaning.

2. Storage

- Store the tablet and stylus in a cool, dry place away from direct sunlight and extreme temperatures.
- When not in use, place the stylus in its pen case to protect the nib.
- Avoid placing heavy objects on the tablet.

3. Nib Replacement

The stylus nibs are consumable items and will wear down with use. Replace the nib when it becomes too short or feels rough.

1. Gently pull out the old nib using the metal ring pen picker.
2. Insert a new replacement nib firmly into the stylus until it is secure.

TROUBLESHOOTING

1. Tablet Not Responding

- Ensure the USB cable is securely connected to both the tablet and your device.
- Try connecting to a different USB port.
- Restart your computer or device.
- Verify that the correct drivers are installed and up to date. Reinstall drivers if necessary.
- Check if the tablet's mode switch is set correctly for your connected device.

2. Stylus Not Working

- Ensure the stylus nib is properly inserted and not worn out. Replace if needed.
- Confirm that the tablet is powered on and connected.
- Test the stylus on a different area of the tablet or with a different application.

3. Pressure Sensitivity Issues

- Check the pressure sensitivity settings in the tablet's driver software.
- Ensure your drawing application supports pressure sensitivity and that it is enabled within the application settings.
- Reinstall the tablet drivers.

SPECIFICATIONS

Feature	Detail
Brand	Parblo
Model Number	Intangbo X7
Product Dimensions	11 x 6.5 x 0.1 inches
Active Area	7.2 x 4.5 inches
Item Weight	1.87 pounds (tablet approximately 320g)
Connectivity Technology	USB
Pressure Sensitivity	8192 Levels
Tilt Support	±60°
Operating System Compatibility	Windows 8 and above, Mac OS 10.12 and above, Android 6.0 and above, Harmony OS 1.0 and above, Chrome OS 88 and above
Special Features	60° Tilt Support, Device Switch Button, Extra-Slim Design, Programmable Press Keys

Active Area

7.2*4.5 inch

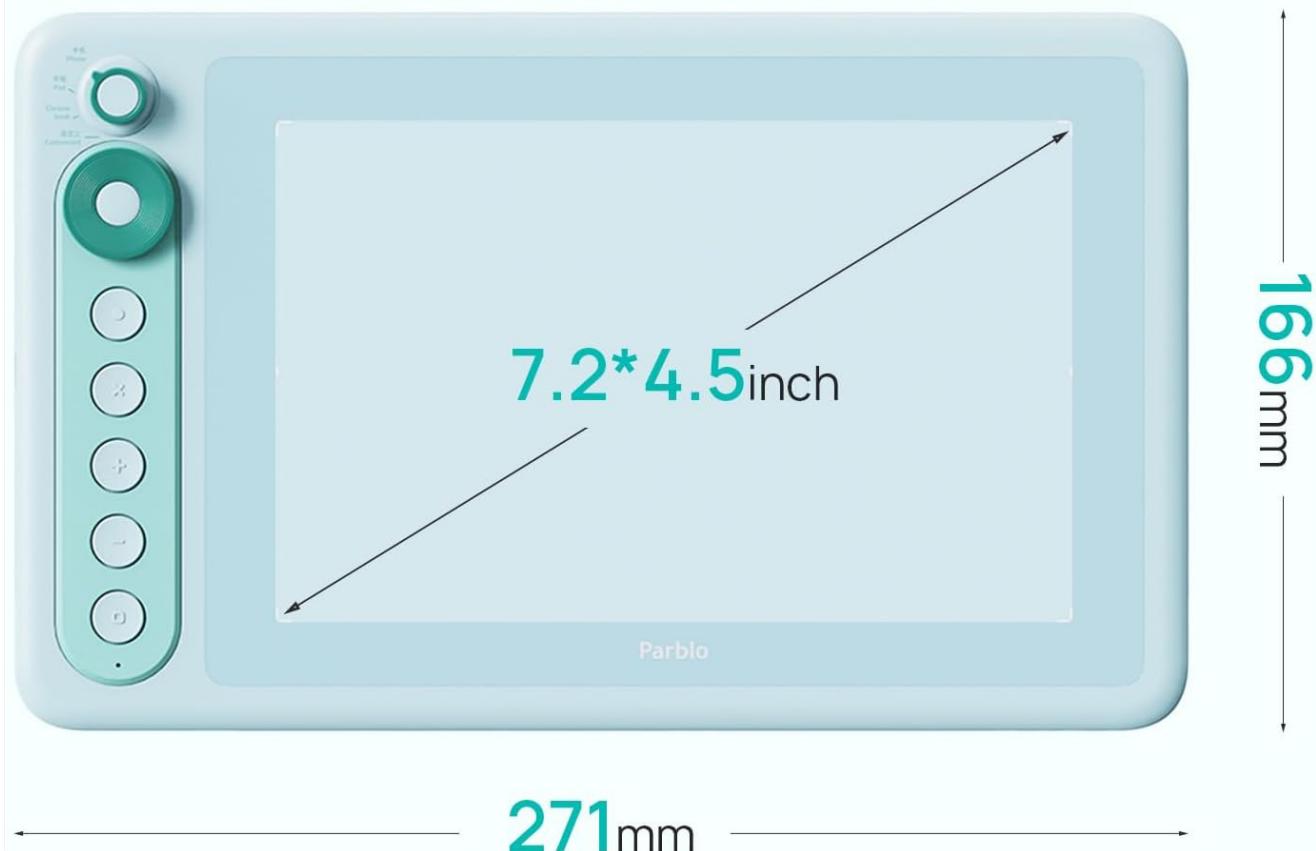


Image: Diagram illustrating the active drawing area of the Intangbo X7 tablet, measuring 7.2 x 4.5 inches.

WARRANTY AND SUPPORT

Parblo products typically come with a manufacturer's warranty. Please refer to the warranty card included in your product packaging or visit the official Parblo website for detailed warranty information and terms.

For technical support, driver downloads, or further assistance, please visit the Parblo support page or contact their customer service directly.

- Official Website: www.parblo.com
- Support Contact: Refer to the website for contact details.