

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [eXtremeRate](#) /

> [eXtremeRate Back Paddles for PS5 Edge Controller - Instruction Manual](#)

### eXtremeRate BHPFD001

# eXtremeRate Back Paddles for PS5 Edge Controller - Instruction Manual

Model: BHPFD001

## INTRODUCTION

---

This manual provides instructions for the installation and care of your eXtremeRate Metallic Neptune Blue replacement back paddles for the PlayStation 5 Edge Controller. These metal paddles are designed to be interchangeable and offer a durable replacement for the original controller components.

## PACKAGE CONTENTS

---

The package includes the following items:

- 4 x Back Buttons (Paddles)

*Note: The PS5 Edge controller and other parts are not included.*



Image: Contents of the eXtremeRate back paddles package, showing two long and two short metallic blue paddles.

## SETUP AND INSTALLATION

The eXtremeRate back paddles are designed for easy, tool-free installation. They are interchangeable and can be inserted directly into the designated slots on your PS5 Edge controller.

- 1. Identify Paddle Types:** The package contains two types of paddles: longer lever-style paddles and shorter half-dome style paddles. Choose the style that best suits your ergonomic preference.
- 2. Locate Controller Slots:** On the rear of your PS5 Edge controller, identify the four slots where the back paddles attach.
- 3. Insert Paddles:** Gently align the base of the chosen paddle with the corresponding slot on the controller. Push the paddle firmly but carefully until it clicks into place. No tools are required for this process.
- 4. Verify Secure Attachment:** Ensure each paddle is securely seated and does not wobble excessively.



Image: A close-up view demonstrating how to insert a metallic blue back paddle into the PS5 Edge controller's rear slot.

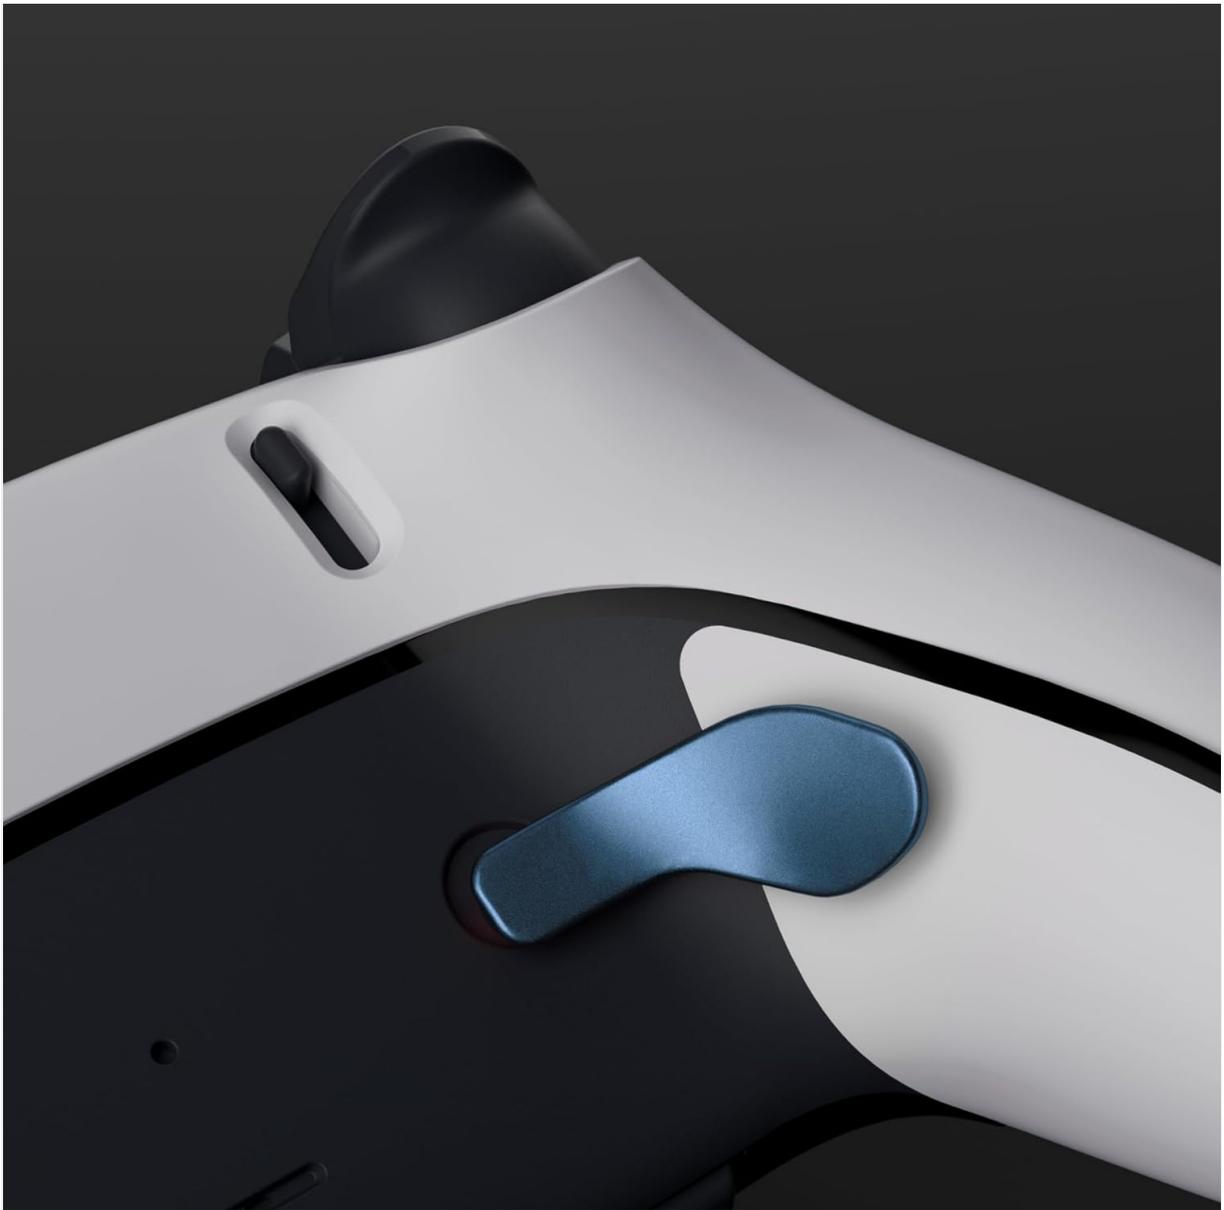


Image: Rear view of the PS5 Edge controller showing two metallic blue lever-style back paddles correctly installed.



Image: Rear view of the PS5 Edge controller showing two metallic blue half-dome style back paddles correctly installed.

## OPERATING INSTRUCTIONS

---

Once installed, the eXtremeRate back paddles function identically to the original PS5 Edge controller back buttons. You can customize their assignments through your PlayStation 5 console's controller settings menu to enhance your gaming experience.

## MAINTENANCE

---

To ensure the longevity and optimal performance of your metal back paddles, follow these maintenance guidelines:

- **Cleaning:** It is recommended to clean the paddles with a soft, damp cloth. For more thorough cleaning, use a cloth dampened with less than 70% alcohol.
- **Drying:** After cleaning, place the paddles in a well-ventilated area to dry completely.
- **Avoid Direct Spray:** Do not spray water or alcohol directly onto the product surface.
- **Chemicals:** Do not use any other organic solvents or harsh chemicals for cleaning, as these may damage the metallic finish.

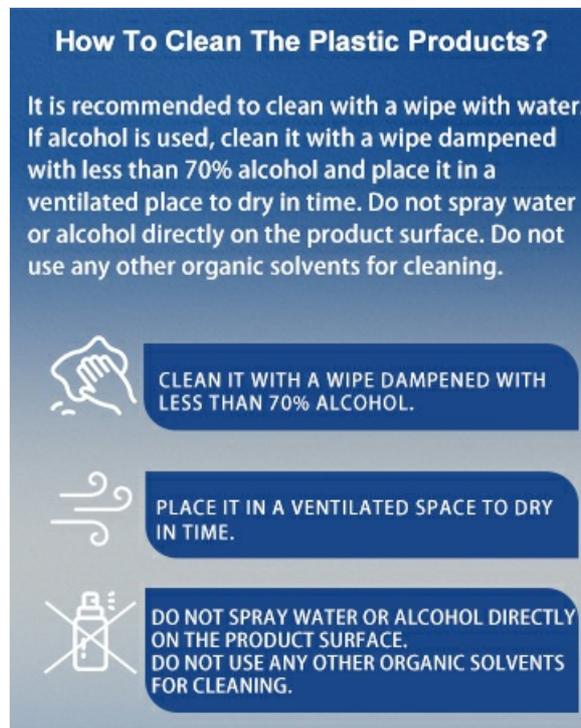


Image: General cleaning recommendations for product accessories, advising gentle cleaning and proper drying.

## TROUBLESHOOTING

If you encounter any issues with your eXtremeRate back paddles, consider the following:

- **Paddles Not Staying in Place:** Ensure the paddles are fully inserted and clicked into their slots. Check for any debris in the slot that might prevent a secure fit.
- **Paddles Not Registering Input:** Confirm that the paddles are correctly installed. If the issue persists, check your PS5 console's controller settings to ensure the back buttons are properly mapped and enabled.
- **Physical Damage:** Inspect the paddles and controller slots for any visible damage. If damage is present, contact customer support.

## SPECIFICATIONS

|                           |                          |
|---------------------------|--------------------------|
| <b>Brand</b>              | eXtremeRate              |
| <b>Model Number</b>       | BHPFD001                 |
| <b>Material</b>           | Metal Stainless Steel    |
| <b>Color</b>              | Metallic Neptune Blue    |
| <b>Product Dimensions</b> | 1.57 x 0.39 x 0.2 inches |
| <b>Item Weight</b>        | 0.71 ounces              |
| <b>Compatibility</b>      | PS5 Edge Controller      |

## WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in this manual. For details regarding warranty coverage, returns, or technical support, please refer to the eXtremeRate official website or contact their customer

service directly. You may also consult your purchase receipt or the retailer's return policy.  
For further assistance, visit the [eXtremeRate Store on Amazon](#).