

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Scheppach](#) /
- › [Scheppach S800 Manual Sweeper Instruction Manual](#)

Scheppach S800

Scheppach S800 Manual Sweeper Instruction Manual

1. PRODUCT OVERVIEW

The Scheppach S800 manual sweeper is designed for efficient and thorough cleaning of various outdoor surfaces. Its robust construction and effective sweeping system make it ideal for maintaining cleanliness in large areas.

Key features include a wide sweeping path, a large collection bin, and a specialized brush system for optimal debris collection.




Figure 1: Suitable for various debris types including leaves, sand, gravel, and grass clippings.



ANWENDUNGSBEISPIELE

GEEIGNET FÜR

Terrassen

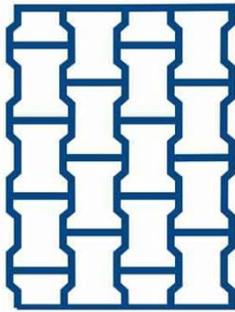

Hofflächen



Auffahrten



Gehweg



Figure 2: Application examples: terraces, courtyards, driveways, and sidewalks.

2. SETUP AND ASSEMBLY

The Scheppach S800 manual sweeper is designed for straightforward assembly. Follow these steps to prepare your sweeper for use:

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all components listed in the packing list are present.
2. **Unfold the Handle:** Release the quick-release mechanisms on the handle. Extend the handle upwards until it locks securely into the operating position. Ensure both sides are firmly locked.
3. **Attach Collection Bin:** Slide the 20-liter collection bin into its designated slot at the rear of the sweeper. Ensure it is seated correctly to prevent it from detaching during operation.

GEEIGNET FÜR



Figure 3: The sweeper in operational configuration, demonstrating its 650mm sweeping width.

3. OPERATING INSTRUCTIONS

To achieve optimal cleaning results, follow these operating guidelines:

1. **Surface Preparation:** For best results, ensure the surface is relatively dry. Avoid sweeping excessively wet debris or very fine dust that could clog the brushes.
2. **Pushing Technique:** Push the sweeper forward at a steady, consistent pace. The soft profile wheels and 360° swivel castor allow for easy maneuvering around obstacles and corners.
3. **Effective Sweeping:** The 3-brush sweeping system with durable bristles is designed for effective cleaning, reaching thoroughly and close to edges. Overlap your sweeping paths slightly to ensure complete coverage.
4. **Collection Bin Monitoring:** Periodically check the collection bin. Empty it before it becomes completely full to maintain sweeping efficiency and prevent spills.

3-Bürsten-Kehrsyst^m für effektives Reinigen, gründlich und randnah



Figure 4: The 3-brush sweeping system ensures thorough cleaning, even near edges.

4. MAINTENANCE AND STORAGE

Regular maintenance ensures the longevity and optimal performance of your Scheppach S800 manual sweeper.

- **Emptying the Collection Bin:** The large 20 L dustbin is made of impact-resistant plastic and features a carrying handle for easy removal and emptying. After each use, or when full, remove the bin and dispose of the collected debris.
- **Cleaning Brushes:** Inspect the brushes regularly for wear or trapped debris (e.g., long grass, string). Remove any obstructions to maintain effective sweeping. Clean the brushes with a stiff brush or water if necessary.
- **General Cleaning:** Wipe down the exterior of the sweeper with a damp cloth. Avoid using harsh chemicals that could damage the plastic components.
- **Storage:** For space-saving storage, the handle can be folded down using the quick-release mechanisms. Store the sweeper in a dry, protected area away from direct sunlight and extreme temperatures.



**Einfache und schnelle
Entleerung des Kehrbehälters**

Figure 5: Simple and quick emptying of the collection bin.

Platzsparend zu verstauen dank wegklappbaren Führungsholm



Figure 6: The sweeper can be folded for space-saving storage.

5. TROUBLESHOOTING GUIDE

This section addresses common issues you might encounter with your Scheppach S800 manual sweeper.

Problem	Possible Cause	Solution
Poor sweeping performance	<ul style="list-style-type: none">• Collection bin is full.• Brushes are worn or clogged.• Sweeping speed is too fast or too slow.	<ul style="list-style-type: none">• Empty the collection bin.• Clean brushes of debris; replace if excessively worn.• Adjust sweeping speed to a steady, moderate pace.

Problem	Possible Cause	Solution
Collection bin detaches during storage/folding	<ul style="list-style-type: none"> This is a known characteristic when the handle is folded. 	<ul style="list-style-type: none"> Ensure the collection bin is empty before folding the handle. Re-seat the bin after unfolding or store it separately if preferred. This does not indicate a malfunction.
Difficulty maneuvering	<ul style="list-style-type: none"> Wheels are obstructed. Uneven surface. 	<ul style="list-style-type: none"> Check wheels for debris and clear any obstructions. Adjust your path or technique for very uneven surfaces.

6. PRODUCT SPECIFICATIONS

Detailed specifications for the Scheppach S800 manual sweeper:

- **Model:** S800
- **Item Model Number:** 5909806915
- **Manufacturer:** Scheppach
- **Sweeping Width:** 650 mm
- **Cleaning Capacity:** Up to 2600 m²/h
- **Collection Bin Capacity:** 20 Liters
- **Product Dimensions (L x W x H):** 59.3 x 65 x 100 cm
- **Weight:** 9 Kilograms
- **Sweeping System:** 3-Brush System
- **Components Included:** Sweeper
- **Batteries Required:** No
- **Country of Origin:** China

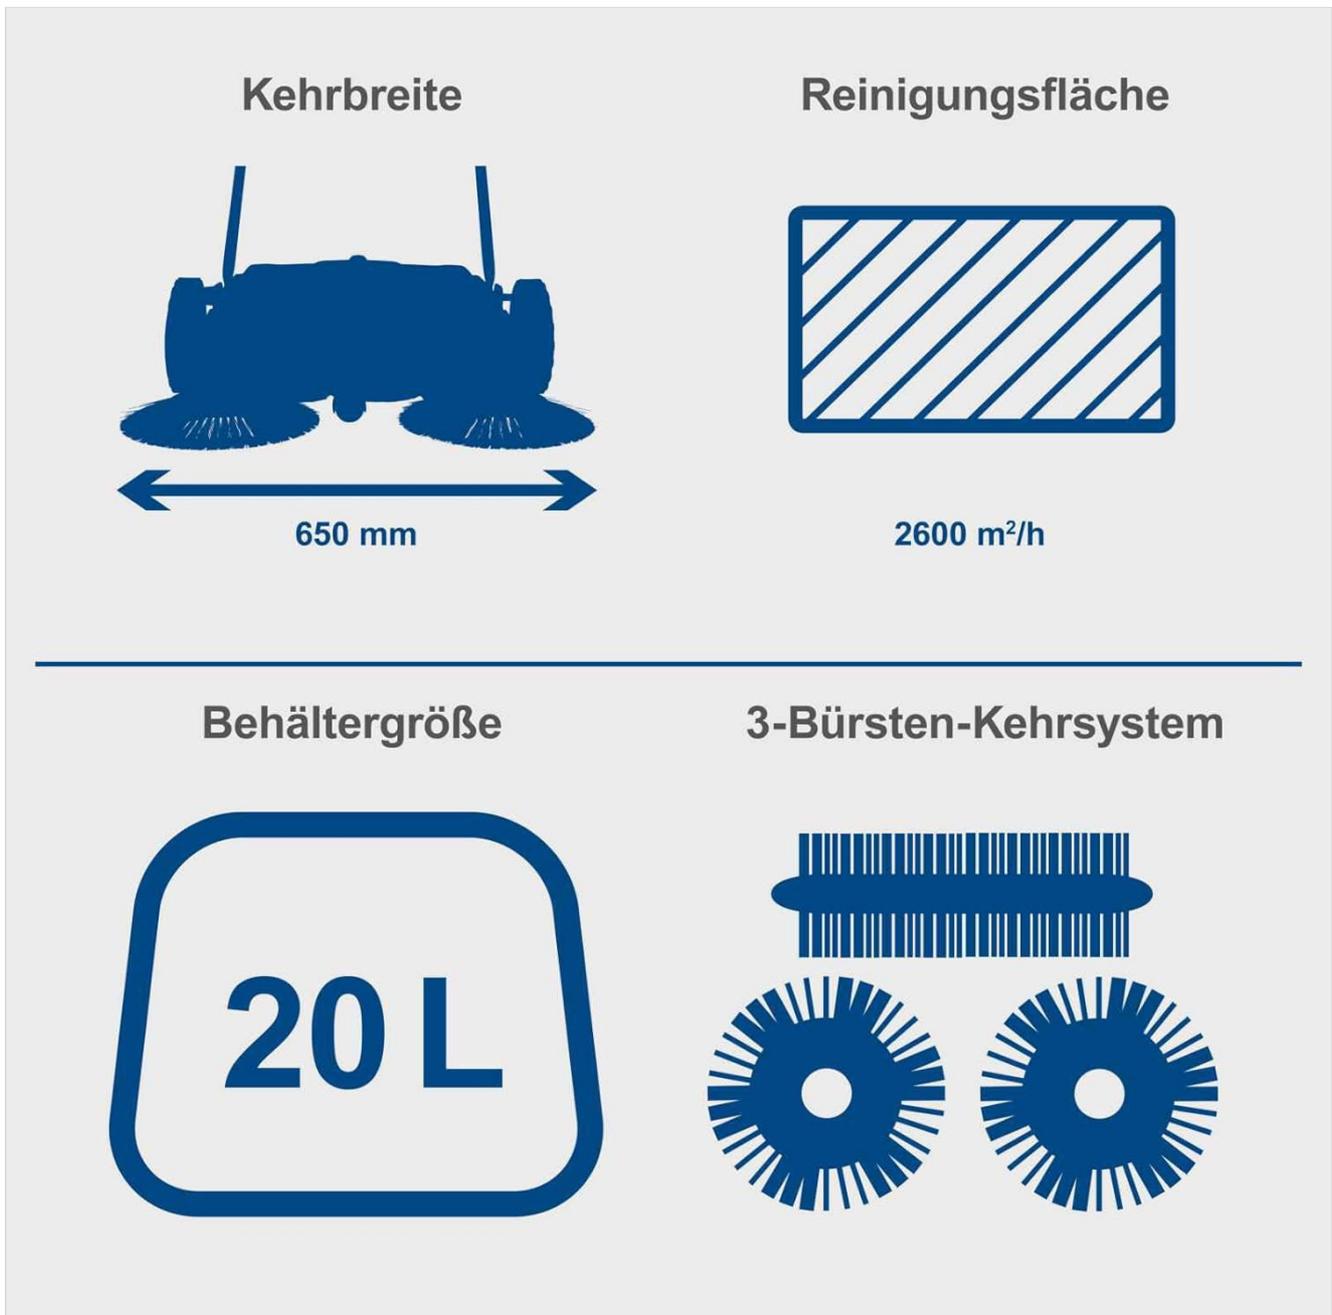


Figure 7: Key specifications at a glance.

7. WARRANTY INFORMATION

Specific warranty details for the Scheppach S800 manual sweeper are not provided in this document. For comprehensive warranty information, please refer to the documentation included with your purchase or visit the official Scheppach website. Standard consumer rights and return policies (e.g., 30-day return policy from Amazon) may apply.

8. CUSTOMER SUPPORT

Should you require further assistance, have questions about your Scheppach S800 manual sweeper, or need to order spare parts, please contact Scheppach customer support through their official website or the retailer from whom you purchased the product. Please have your model number (S800) and item model number (5909806915) ready when contacting support.

