

JTEMAN JT-L36

JTEMAN Cell Phone Stand with Wireless Bluetooth Speaker and Alarm Clock - User Manual

Model: JT-L36

INTRODUCTION

Thank you for purchasing the JTEMAN Cell Phone Stand with Wireless Bluetooth Speaker and Alarm Clock. This multi-functional device is designed to enhance your daily routine by combining essential features into one compact and stylish unit. It serves as a high-quality Bluetooth speaker, a reliable alarm clock with a clear display, and a stable, adjustable stand for your mobile devices. Please read this manual carefully to ensure proper use and optimal performance.

SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Keep away from water and other liquids. If the device comes into contact with liquid, disconnect it immediately and allow it to dry completely before reuse.
- Do not attempt to disassemble, repair, or modify the device yourself. Refer all servicing to qualified personnel.
- Use only the provided charging cable or a certified equivalent.
- Keep out of reach of children.

PACKAGE CONTENTS

- JTEMAN Cell Phone Stand with Wireless Bluetooth Speaker and Alarm Clock (Model: JT-L36)
- Type-C Charging Cable
- User Manual

PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your JTEMAN device:



Figure 1: Front view of the JTEMAN device with a smartphone on the adjustable stand, displaying the time and temperature.

Multi-functional Bluetooth Speaker with Alarm Clock



Figure 2: Overview highlighting the multi-functional aspects including Bluetooth speaker, 12/24H time display, temperature display, foldable phone stand, TF card support, microphone, charging station, dual alarm clocks, and 9 ringtones.

Controls and Ports:

- **Display Screen:** Shows time, temperature, day of the week, and alarm indicators.
- **SNOOZE/DIMMER Button:** Press to snooze an active alarm (5 minutes); long press to adjust display brightness (4 levels).
- **Power On/Off/Mode Button:** Long press to power on/off; short press to cycle through modes (Bluetooth, TF Card).
- **Play/Pause/Answer Button:** Controls music playback; answers/ends calls.
- **Volume Up/Next Track Button:** Increases volume; short press for next track.
- **Volume Down/Previous Track Button:** Decreases volume; short press for previous track.
- **Bluetooth Pairing Button:** Initiates Bluetooth pairing mode.
- **Alarm 1 & Alarm 2 Buttons:** For setting and managing dual alarms.
- **Microphone:** For hands-free calling.

- **Type-C Input Port:** For charging the device.
- **Type-C Output Port:** For charging external devices.
- **TF Card Slot:** For playing music directly from a TF card.
- **Adjustable Phone Stand:** Foldable and extendable for various viewing angles. Features anti-slip pads and base for stability.

SETUP

1. Initial Charging

1. Connect the provided Type-C charging cable to the **Type-C Input Port** on the device.
2. Connect the other end of the cable to a compatible USB power adapter (not included) and plug it into a wall outlet.
3. The display will indicate charging status. Fully charge the device before first use.

Use the Type-C cable for device charging

1. Connect the Type-C cable to the **"Input"** port for charging firstSuitable for 4 to 13inch Devices
2. Use another cable to connect to the **"output"** port to charge other devices



Figure 3: The device connected via Type-C for charging itself and an external phone.

2. Setting Time and Date

1. Upon powering on, the device should automatically synchronize the current time.
2. If manual adjustment is needed, refer to the detailed instructions in the full user manual (included in the package).
3. To switch between 12/24 hour format or °F/°C temperature display, use the dedicated buttons or refer to the full manual.



Figure 4: The HD display showing time, temperature, and alarm settings with brightness adjustment levels.

OPERATING INSTRUCTIONS

1. Using the Phone Stand

- The integrated phone stand can be pulled up from the back of the unit.
- Adjust the height and angle of the stand to your preferred viewing position. The stand is designed to be stable and strong, accommodating devices from 4.0 to 13 inches.
- When not in use, the stand can be folded back into the unit for a compact form factor.

Stable Phone Stand & Adjustable Angle



Figure 5: Demonstrates the adjustable height and angle of the phone stand, along with its anti-slip features and foldable design.

2. Bluetooth Speaker Function

1. **Power On:** Long press the Power On/Off/Mode button. The device will enter Bluetooth pairing mode, indicated by a flashing Bluetooth icon on the display.
2. **Pairing:** On your smartphone or other Bluetooth-enabled device, search for “JT-L36” in the Bluetooth settings and select it to pair. A confirmation sound will indicate successful pairing.
3. **Music Playback:** Once paired, you can play audio from your device through the JTEMAN speaker. Use the Play/Pause, Volume Up/Next Track, and Volume Down/Previous Track buttons to control playback.

3. TF Card Playback

- Insert a TF card (not included) with audio files into the TF Card Slot.
- The device will automatically switch to TF Card mode and begin playing music. If not, short press the Mode button to select TF Card mode.

4. Alarm Clock Features

- **Setting Alarms:** Use the Alarm 1 and Alarm 2 buttons to set up to two independent alarms. Follow the on-screen prompts to set the time and alarm frequency (e.g., Mon-Fri, Sat-Sun, Mon-Sun).
- **Snooze Function:** When an alarm sounds, press the large SNOOZE button on top to activate a 5-minute snooze.
- **Brightness Adjustment:** Long press the SNOOZE/DIMMER button to cycle through four levels of display brightness, including an off setting for minimal light disturbance.

5. Hands-Free Calling

- When a call comes in while your phone is connected via Bluetooth, press the Play/Pause/Answer button to answer the call.
- Use the built-in microphone for clear communication.
- Press the Play/Pause/Answer button again to end the call.

6. Charging External Devices

- Connect your external device (e.g., smartphone, tablet) to the **Type-C Output Port** on the JTEMAN unit using a compatible charging cable.
- The JTEMAN device will provide power to charge your external device.

MAINTENANCE

- Clean the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Ensure all ports are free of dust and debris.
- Store the device in a cool, dry place when not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery; power adapter/cable issue.	Charge the device fully. Check power adapter and cable connections.
No sound from speaker.	Volume too low; not paired correctly; wrong mode.	Increase volume on both device and connected phone. Re-pair Bluetooth. Ensure correct mode (Bluetooth/TF Card).
Bluetooth pairing fails.	Device too far; pairing mode not active; interference.	Ensure device is in pairing mode and within 10 meters. Turn off other Bluetooth devices. Try restarting both devices.
Alarm does not sound.	Alarm not set; alarm volume too low; alarm disabled.	Verify alarm settings and ensure it's enabled. Increase alarm volume.
Phone not charging via output port.	Cable issue; device battery low; incompatible device.	Ensure the JTEMAN device is charged. Try a different charging cable. Confirm your phone is compatible with Type-C charging.

SPECIFICATIONS

Brand	JTEMAN
Model Number	JT-L36
Product Dimensions	6.1 x 4.3 x 2.1 inches
Item Weight	1.26 pounds
Color	Black
Hardware Interface	USB 2.0
Total USB Ports	2 (Type-C Input, Type-C Output)
Compatibility	4.0-13 inch devices

WARRANTY AND SUPPORT

JTEMAN products are manufactured with high standards of quality. For specific warranty information, please refer to the warranty card included in your product packaging or visit the official JTEMAN website. If you encounter any issues or have questions not covered in this manual, please contact JTEMAN customer support through the contact information provided on the product packaging or website.

Please retain your proof of purchase for warranty claims.

