Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Crivit /
- > Crivit Silvercrest SHD 7.4 A1 Handheld Vacuum Cleaner Instruction Manual

Crivit SHD 7.4 A1

Crivit Silvercrest SHD 7.4 A1 Handheld Vacuum Cleaner Instruction Manual

Model: SHD 7.4 A1

1. Introduction

Thank you for choosing the Crivit Silvercrest SHD 7.4 A1 Handheld Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your device. Please read these instructions thoroughly before first use and retain them for future reference.

2. SAFETY INSTRUCTIONS

To ensure safe operation, always adhere to the following guidelines:

- Keep the vacuum cleaner away from water and moisture.
- Do not vacuum flammable or combustible liquids, hot ashes, or sharp objects.
- Ensure the charging adapter is compatible with your power supply.
- Do not operate the device if it is damaged or malfunctioning.
- Keep hair, loose clothing, fingers, and all body parts away from openings and moving parts.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. PRODUCT OVERVIEW

The Crivit Silvercrest SHD 7.4 A1 is a cordless handheld vacuum cleaner designed for quick and convenient cleaning tasks. It features a powerful Li-ion battery and an integrated EPA filter.

Components:

- · Handheld Vacuum Unit
- 2-in-1 Nozzle (Crevice Tool and Brush)
- · Charging Base/Stand
- Power Adapter

• Integrated EPA Filter



Image 3.1: Overview of the Crivit Silvercrest SHD 7.4 A1 handheld vacuum cleaner, including the main unit, 2-in-1 nozzle, charging base, and power adapter.



Image 3.2: All components of the handheld vacuum cleaner neatly arranged on a wooden surface, showing the main unit, charging base, power adapter, and the 2-in-1 nozzle.



Image 3.3: The Crivit Silvercrest SHD 7.4 A1 handheld vacuum cleaner standing upright in its charging base, ready for use or charging.



Image 3.4: A close-up view of the versatile 2-in-1 nozzle, which functions as both a crevice tool and a brush attachment.

4. SETUP

4.1 Initial Charging

- 1. Place the handheld vacuum cleaner into the charging base.
- 2. Connect the power adapter to the charging base.
- 3. Plug the power adapter into a suitable wall outlet.
- 4. Allow the device to charge fully before first use. The charging indicator light will show the charging status (refer to the device for specific light indications).

4.2 Attaching the 2-in-1 Nozzle

- 1. Align the 2-in-1 nozzle with the suction opening of the main vacuum unit.
- 2. Push the nozzle firmly until it clicks into place.
- 3. To switch between the crevice tool and brush function, slide the brush attachment forward or backward on the nozzle.



Image 4.1: The Crivit Silvercrest SHD 7.4 A1 handheld vacuum cleaner with the 2-in-1 nozzle securely attached, ready for operation.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

- 1. Press the power button located on the top of the main unit to turn the vacuum cleaner on.
- 2. Press the power button again to turn the vacuum cleaner off.

5.2 Using the Vacuum Cleaner

- 1. Ensure the dustbin is empty and the filter is clean before use.
- 2. Select the appropriate nozzle setting (crevice tool or brush) for the cleaning task.
- 3. Turn on the vacuum cleaner and move the nozzle slowly over the surface to be cleaned.
- 4. For delicate surfaces like keyboards, use the brush attachment. For tight spaces, use the crevice tool.



Image 5.1: The handheld vacuum cleaner being used with the brush attachment to clean dust and debris from a laptop keyboard, demonstrating its precision cleaning capability.

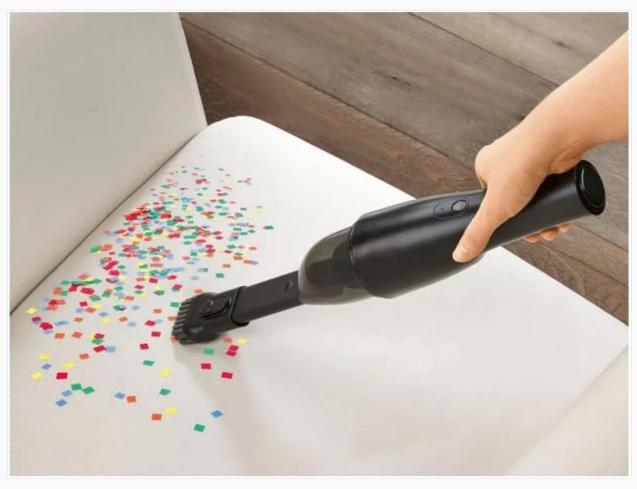


Image 5.2: The handheld vacuum cleaner effectively removing small pieces of confetti from a white chair, highlighting its strong suction for various debris.

6. MAINTENANCE

6.1 Emptying the Dustbin

- 1. Ensure the vacuum cleaner is turned off.
- 2. Locate the dustbin release button or twist mechanism.
- 3. Detach the dustbin from the main unit.
- 4. Empty the contents into a waste bin.
- 5. Reattach the dustbin securely until it clicks into place.

6.2 Cleaning the EPA Filter

The integrated EPA filter should be cleaned regularly to maintain optimal suction performance.

- 1. Remove the dustbin as described above.
- 2. Carefully remove the EPA filter from the dustbin.
- 3. Tap the filter gently over a waste bin to dislodge dust and debris.
- 4. If necessary, rinse the filter under cool running water. Ensure it is completely dry before reinserting.
- 5. Reinsert the clean, dry filter into the dustbin, then reattach the dustbin to the main unit.

Note: Do not use harsh detergents or abrasive materials to clean the filter. Allow the filter to air dry completely before reassembly to prevent damage to the vacuum cleaner.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is discharged.	Charge the battery fully.
Reduced suction power.	Dustbin is full.	Empty the dustbin.
Reduced suction power.	Filter is clogged.	Clean or replace the EPA filter.
Reduced suction power.	Nozzle or suction opening is blocked.	Remove any obstructions from the nozzle or suction opening.
Charging indicator not working.	Power adapter not connected properly.	Ensure the power adapter is securely plugged into both the charging base and the wall outlet.

8. SPECIFICATIONS

Feature	Detail	
Model Number	SHD 7.4 A1	
Brand	Crivit / Silvercrest	
Power Source	Rechargeable Li-ion Battery (7.4 V)	

Feature	Detail	
Filter Type	Integrated EPA Filter	
Special Features	Cordless operation, 2-in-1 nozzle (crevice tool and brush), practical stand function	
Color	Black	

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact the retailer/manufacturer directly. Keep your proof of purchase for warranty claims.

© 2023 Crivit / Silvercrest. All rights reserved.

Related Documents - SHD 7.4 A1



CRIVIT 2-in-1 Kurzhantel- und Langhantel-Set: Anleitung und Übungen

Umfassende Anleitung für das CRIVIT 2-in-1 Kurzhantel- und Langhantel-Set. Entdecken Sie Montagehinweise, Sicherheitstipps und effektive Übungsvorschläge für Ihr Ganzkörpertraining zu Hause.



Crivit 1-LD3292 Heart Rate Watch with Chest Belt User Manual

Comprehensive user manual for the Crivit 1-LD3292 heart rate watch and chest belt, covering setup, features, operation, troubleshooting, and technical specifications. Includes instructions for time settings, alarms, stopwatch, heart rate monitoring, pedometer, calorie tracking, and more.



CRIVIT Saddle Bag with Bike Tool Kit: Instructions and Repair Guide

Comprehensive instructions and safety information for the CRIVIT Saddle Bag with Bike Tool Kit, including a 15-in-1 multi-tool. Learn how to use, maintain, and repair bicycle inner tubes with this guide.



CRIVIT Urban E-Bike X.2 / Y.2 Betriebsanleitung und Bedienungshandbuch

Umfassende Betriebsanleitung für das CRIVIT Urban E-Bike X.2 und Y.2. Erfahren Sie alles über Montage, Sicherheitshinweise, technische Daten, Wartung und Zubehör für Ihr Elektrofahrrad. Besuchen Sie www.lidl-service.com für weitere Informationen.



CRIVIT Golf Laser Rangefinder Bedienungsanleitung

Diese Bedienungsanleitung bietet detaillierte Informationen zum CRIVIT Golf Laser Rangefinder (IAN: 369598, Art. Nr.: 9625821). Sie deckt wichtige Sicherheitshinweise, technische Daten, Bedienung und Wartung ab.



Crivit 1-LD3141 Heart Rate Watch with Chest Belt User Manual

Comprehensive user manual for the Crivit 1-LD3141 heart rate watch and chest belt, covering setup, features, heart rate monitoring, calorie tracking, BMI calculation, fitness level assessment, troubleshooting, and technical specifications.