

[Manuals.plus](#) /

> [COSORI](#) /

> COSORI 9Qt 10-in-1 Dual Air Fryer User Manual

COSORI CAF-R901-AUS

COSORI 9Qt 10-in-1 Dual Air Fryer User Manual

Model: CAF-R901-AUS

INTRODUCTION

Welcome to the world of convenient and healthy cooking with your new COSORI 9Qt 10-in-1 Dual Air Fryer. This appliance is designed to elevate your culinary journey, offering versatile cooking functions and dual basket capabilities for balanced and efficient meal preparation. With its intuitive controls and thoughtful design, you can easily prepare fresh, nutritious meals for your family.



Image: The COSORI 9Qt 10-in-1 Dual Air Fryer, showcasing its sleek design, dual baskets, and digital control panel, accompanied by a recipe book.

IMPORTANT SAFEGUARDS

Please read all instructions carefully before using your COSORI Dual Air Fryer. Basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Leave 13 cm / 5 inches of space behind and above the air fryer oven. Leave enough room in front of the air fryer to remove the basket.

GETTING STARTED

Unboxing and Initial Setup

Carefully remove all packaging materials from your air fryer. Ensure all components are present: the main unit, two crisper plates, and two removable baskets. Before first use, wipe down the exterior of the air fryer with a damp cloth. Wash the crisper plates and baskets with warm, soapy water, then rinse and dry thoroughly.

Test Run

To ensure the air fryer is functioning correctly and to eliminate any potential odors from the manufacturing process, perform a test run before cooking food. Follow these steps:

1. Place the air fryer on a stable, heat-resistant surface.
2. Insert the crisper plates into the baskets, then slide the baskets into the air fryer.
3. Plug the air fryer into a grounded electrical outlet.
4. Select a cooking function (e.g., Air Fry) and set the temperature to 350°F (175°C) for 15 minutes.
5. Allow the air fryer to complete the cycle. A slight odor may be present during the first use; this is normal.
6. Once complete, unplug the unit and let it cool down completely before proceeding.

USING YOUR AIR FRYER

The COSORI Dual Air Fryer offers a variety of functions and features to simplify your cooking process.

Dual Basket Functionality: SyncCook & SyncFinish

This air fryer features two independent 4.5-quart baskets, allowing you to cook different foods simultaneously without flavor transfer. The total capacity is 9 quarts, ideal for family meals.

- **SyncCook:** Use this function to apply the same cooking settings (temperature and time) to both baskets with a single touch. Perfect for cooking larger batches of the same food.
- **SyncFinish:** This intelligent feature allows you to set different cooking times and temperatures for each basket,

ensuring both dishes finish cooking at the exact same time. No more cold sides!

Enjoy More Fresh Dinners Together



Sync Finish:
Cook Two Fresh and Nutritious Dishes Rather Than Reheating Meals.



Image: A couple enjoying a fresh meal, illustrating how the Sync Finish function ensures both dishes are ready simultaneously, preventing reheating.



Image: The dual baskets of the COSORI Air Fryer, showing salmon in one and asparagus in the other, demonstrating how flavors remain distinct.

10 Cooking Functions

Your COSORI Dual Air Fryer comes with 10 preset cooking functions for various culinary needs:

- **Air Fry:** For crispy results with significantly less oil.
- **Roast:** Ideal for meats and vegetables.
- **Broil:** For browning and crisping the top layer of food.
- **Bake:** Perfect for cakes, pastries, and other baked goods.
- **Dry:** For dehydrating fruits, vegetables, or making jerky.
- **Reheat:** Efficiently warms up leftovers.
- **Preheat:** Ensures the air fryer reaches the desired temperature before adding food.
- **Shake:** A reminder to shake or flip food for even cooking.
- **Sync Cook:** (As described above)
- **Sync Finish:** (As described above)



Image: The air fryer preparing a balanced meal for a child, with chicken air-fried at 380°F for 24 minutes and roasted vegetables at 425°F for 15 minutes.

Temperature and Time Control

The air fryer allows for precise temperature control from 95°F to 450°F and time settings up to 48 hours, depending on the function. Use the dedicated temperature and time buttons on the control panel to adjust settings as needed for your recipes.

Shake Reminder

For optimal crispiness and even cooking, the air fryer will prompt you with a "Shake" reminder during certain cooking cycles. Simply remove the basket, shake or flip the food, and reinsert the basket to resume cooking.

CARE AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your COSORI Dual Air Fryer and ensure optimal performance.

Cleaning

- Always unplug the air fryer and allow it to cool completely before cleaning.
- The crisper plates and baskets are **dishwasher safe** for effortless cleaning. They can also be washed by hand with warm, soapy water and a non-abrasive sponge.
- Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water or any other liquid.
- Clean the interior of the air fryer with a damp cloth and mild detergent if necessary. Avoid abrasive cleaners or scouring pads.



Image: The removable crisper plates and baskets of the COSORI Air Fryer placed inside a dishwasher, demonstrating their dishwasher-safe convenience.

TROUBLESHOOTING

If you encounter any issues with your COSORI Dual Air Fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet issue; unit malfunction.	Ensure the power cord is securely plugged into a working outlet. Check your home's circuit breaker. Contact customer support if the issue persists.
Food is not cooked evenly.	Baskets overloaded; food not shaken/flipped; incorrect temperature/time.	Do not overload baskets; cook in smaller batches if necessary. Utilize the "Shake" reminder and manually shake or flip food. Adjust temperature and time as per recipe guidelines.
White smoke coming from the air fryer.	Grease residue from previous cooking; high-fat food.	Clean baskets and crisper plates thoroughly after each use. For high-fat foods, drain excess oil from the basket during cooking.
Appliance emits a plastic smell.	First use odor.	This is normal for the first few uses. Ensure good ventilation. The smell will dissipate with continued use.

If your problem is not listed or persists, please contact COSORI Customer Support for assistance.

SPECIFICATIONS

Feature	Detail
Model	CAF-R901-AUS
Capacity	9 Quarts (2 x 4.5-Quart Baskets)
Temperature Range	95°F–450°F
Time Range	0-48 hours
Rated Power	1750 Watts
Power Supply	AC 120V, 60Hz
Product Dimensions (including handle)	17.3"D x 15.4"W x 11.9"H
Item Weight	19.2 Pounds
Material	Non-stick, Aluminum (baskets), Plastic, Glass (inner components)
Control Method	Touch
Dishwasher Safe Parts	Baskets, Crisper Plates
UPC	810123671557

WARRANTY AND SUPPORT

COSORI provides a warranty for its products. For detailed warranty information and to register your product, please visit the official COSORI website or refer to the warranty card included with your purchase.

If you require technical assistance, have questions about your product, or need to claim warranty service, please contact COSORI Customer Support. You can often find contact information on the official website or in the included user manual. For a digital copy of the full user manual, you can download the PDF version here[COSORI 9Qt Dual Air Fryer User Manual \(PDF\)](#).

© 2024 COSORI. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CCS2TH8Q>

More documents and user manuals: <https://manuals.plus/>