

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LEXiBOOK](#) /

› [Lexibook Disney Classics Scrooge Electronic Piggy Bank JG150SC Instruction Manual](#)

LEXiBOOK JG150SC

Lexibook Disney Classics Scrooge Electronic Piggy Bank JG150SC Instruction Manual

Model: JG150SC

INTRODUCTION

Welcome to the instruction manual for your Lexibook Disney Classics Scrooge Electronic Piggy Bank, model JG150SC. This electronic money bank is designed to help users save money securely with a personal code, accompanied by engaging sound and light effects. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device.



Figure 1: The Lexibook Disney Classics Scrooge Electronic Piggy Bank, featuring Scrooge McDuck and a numeric keypad.

SETUP

1. Battery Installation

1. Locate the battery compartment on the underside of the piggy bank.
2. Using a screwdriver, open the battery compartment cover.
3. Insert **3 x AA batteries**, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

Important: Always use new batteries and dispose of old batteries responsibly.

2. Initial Power-On and Default PIN

- After battery installation, the piggy bank will power on.
- The default Personal Identification Number (PIN) is **0000**.

Disney
MICKEY
AND FRIENDS

EFFETS SONORES
ET LUMINEUX
SOUND AND LIGHT
EFFECTS
SOUND- UND
LICHTEFFEKTE

CODE SÉCURISÉ
SECURE CODE
SICHERER CODE



TIRELIRE ÉLECTRONIQUE
ELECTRONIC PIGGY BANK
ELEKTRONISCHE SPARDOSE

LEXIBOOK®



Figure 2: The electronic piggy bank as it appears in its retail packaging.

OPERATING INSTRUCTIONS

1. Depositing Money

- **Coins:** Insert coins into the slot located on the top of the piggy bank.
- **Banknotes:** Insert banknotes into the front slot. The bank will automatically draw in the banknote, accompanied by sound and light effects.



Figure 3: A hand demonstrating the insertion of banknotes into the designated front slot.

2. Opening the Piggy Bank

1. Enter your 4-digit PIN using the numeric keypad.
2. If the PIN is correct, a green light will illuminate, and a sound will play.
3. Within 10 seconds, turn the knob clockwise to open the door.
4. If the door is not opened within 10 seconds, it will lock automatically.

3. Changing the PIN

1. With the door open, press and hold the * (star) button.
2. While holding the * button, enter your new 4-digit PIN.
3. Release the * button. Your new PIN is now set.

4. Sound Control

The piggy bank features various sound effects. To disable or enable sounds, locate the small switch on the underside of the unit.



Figure 4: Overview of the piggy bank, highlighting its musical note feature and the coin slot on top.

MAINTENANCE

1. Cleaning

- Wipe the exterior of the piggy bank with a soft, dry cloth.
- Do not use abrasive cleaners or immerse the unit in water.

2. Battery Replacement

When the sound effects become weak or the bank fails to operate correctly, it is time to replace the batteries. Refer to the "Battery

Installation" section under Setup for detailed instructions.

3. Resetting a Forgotten PIN

If you forget your personal PIN, you can reset it to the default **0000** by following these steps:

1. Open the battery compartment and remove all batteries.
2. Wait for approximately 5 minutes.
3. Reinsert the batteries, ensuring correct polarity.
4. The PIN will now be reset to the default **0000**.

TROUBLESHOOTING

- **Bank does not open:**
 - Ensure the correct PIN is entered.
 - Check if batteries are low or incorrectly installed. Replace if necessary.
 - Ensure the knob is turned clockwise within 10 seconds after entering the correct PIN.
- **No sound effects:**
 - Check the sound switch on the underside of the unit.
 - Replace batteries if they are low.
- **Banknotes are not drawn in:**
 - Ensure banknotes are inserted straight and not folded.
 - Check battery level.

SPECIFICATIONS

Model Number	JG150SC
Brand	LEXiBOOK
Product Dimensions	5.39 x 5.2 x 7.6 inches (13.7 x 13.2 x 19.3 cm)
Item Weight	14.7 ounces (416 grams)
Batteries Required	3 x AA batteries
Recommended Age	3 years and up



Figure 5: Top-down view of the piggy bank, illustrating the coin deposit slot.

WARRANTY AND SUPPORT

Warranty Information

This Lexibook Disney Classics Scrooge Electronic Piggy Bank (Model JG150SC) comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

For further assistance, technical support, or warranty inquiries, please visit the official Lexibook website or contact their customer service department. Refer to the product packaging or the Lexibook website for the most current contact information.



Related Documents - JG150SC

The image shows the retail box for the Lexibook JLMB10D Stitch Handheld Game. The box features a large illustration of the Stitch character from Disney's Lilo & Stitch. The text on the box includes 'MY BESTIE' at the top, 'LEXIBOOK' at the bottom, and 'JLMB10D' on the left side.	<p>Lexibook JLMB10D Stitch Handheld Game - Instruction Manual Discover the Lexibook JLMB10D Stitch handheld game with this comprehensive instruction manual. Learn about gameplay, caring for Stitch, games, and features for this fun electronic toy.</p>
The image shows the retail box for the Lexibook Junior Tablet (MFC270EN). The box is orange and features the Lexibook logo and the product name 'Junior Tablet'.	<p>Lexibook Junior Tablet MFC270EN Instruction Manual - Setup, Features, and Safety Guide Comprehensive instruction manual for the Lexibook Junior Tablet (MFC270EN). Learn how to set up, navigate, use apps, connect to Wi-Fi, and follow safety guidelines for this educational and entertaining device.</p>
The image shows the retail box for the Lexibook 2 Tablet Junior. The box is grey and features the Lexibook logo and the product name '2 Tablet Junior'.	<p>Lexibook 2 Tablet Junior User Manual User manual for the Lexibook 2 Tablet Junior, detailing setup, features, applications, safety guidelines, and technical specifications.</p>
The image shows the retail box for the Lexibook Disney Princess 2-in-1 Bluetooth Headphones (HPBT015DP). The box features a crown and the text '2-IN-1 DISNEY PRINCESS BLUETOOTH HEADPHONES WITH LIGHTS'.	<p>Lexibook Disney Princess 2-in-1 Bluetooth Headphones with Lights - User Manual User manual for the Lexibook Disney Princess 2-in-1 Bluetooth Headphones with Lights (HPBT015DP), covering setup, operation, maintenance, and safety information.</p>
The image shows the retail box for the Lexibook Mickey Mouse interactive toy (Model MCH01i1). The box features a Mickey Mouse illustration and the text 'INTERACTIVE TOY'.	<p>Lexibook Mickey Mouse Interactive Toy: Instruction Manual & Features Detailed instruction manual for the Lexibook Mickey Mouse interactive toy (Model MCH01i1). Learn about its features, remote control functions, programming, games, battery requirements, maintenance, and safety guidelines.</p>



[Lexibook Harry Potter Projector Alarm Clock RP500HP - User Manual](#)

Official user manual for the Lexibook Harry Potter Projector Alarm Clock (Model RP500HP). Learn how to set up, use features like the alarm, nightlight, projector, and understand warranty information.