

Ikea 10555297

IKEA HÄSTVISKARE Wall Organiser with Hooks - Instruction Manual

Model: 10555297

1. PRODUCT OVERVIEW

The IKEA HÄSTVISKARE Wall Organiser is designed to provide practical storage and organisation for various items in your home. It features a shelf with a protective edge and multiple hooks for hanging. Crafted from solid oak with a tinted clear lacquer finish, it offers both functionality and a natural aesthetic.

Components Included:

- Wall Organiser Unit (Solid Oak)
- Integrated Hooks (Wooden pegs and metal hooks)

Note: Mounting hardware suitable for your specific wall material (e.g., drywall, concrete, wood) is required for installation and may be sold separately.



Image 1.1: Front view of the IKEA HÄSTVISKARE Wall Organiser, showcasing the shelf and integrated wooden pegs.

2. SETUP AND INSTALLATION

This section provides instructions for safely mounting your IKEA HÄSTVISKARE Wall Organiser.

Tools Required (Not Included):

- Drill
- Drill bit (appropriate for wall material and screw size)
- Screwdriver (Phillips head recommended)
- Level
- Pencil
- Measuring tape

Installation Steps:

1. **Select Location:** Choose a suitable wall location, ensuring it is free from electrical wires or plumbing. Consider the desired height for accessibility.
2. **Mark Drilling Points:** Hold the organiser against the wall at the desired height. Use a pencil to mark the positions for the mounting holes. Ensure the marks are level using a spirit level.
3. **Drill Holes:** Using an appropriate drill bit for your wall material and chosen mounting hardware, drill holes at the marked positions.
4. **Insert Wall Plugs (if necessary):** If mounting into drywall or masonry, insert suitable wall plugs into the drilled holes.
5. **Mount Organiser:** Align the organiser's mounting holes with the drilled holes (or wall plugs). Insert screws through the organiser and into the wall/plugs. Tighten the screws securely until the organiser is firmly attached to the wall. Do not overtighten.



Image 2.1: Detail of the organiser's mounting holes and the combination of wooden and metal hooks, indicating where screws would be inserted for installation.

3. OPERATING INSTRUCTIONS

The HÄSTVISKARE Wall Organiser is designed for straightforward use.

- **Shelf Use:** Place items such as mobile phones, letters, small bags, or decorative objects on the top shelf. The protective edge helps prevent items from falling off.
- **Hook Use:** Utilize the integrated wooden pegs and metal hooks for hanging keys, leashes, small bags, tea towels, or other lightweight items.



Image 3.1: Example of the organiser in use, holding a tablet, keys, and a dog leash in an entryway setting.



Image 3.2: The organiser used to display books and small decorative items, demonstrating its versatility.

4. MAINTENANCE AND CARE

Proper care will ensure the longevity and appearance of your wall organiser.

- **Cleaning:** Wipe the organiser clean with a dry cloth. For stubborn marks, a slightly damp cloth can be used, followed immediately by a dry cloth. Avoid abrasive cleaners or harsh chemicals, as these can damage the wood and lacquer finish.
- **Avoid Moisture:** Do not expose the organiser to excessive moisture or humidity, as this can cause warping or damage to the wood.
- **Weight Limit:** Adhere to the recommended weight limit of 2 kilograms (4.4 lbs) for the entire unit to prevent damage or detachment from the wall.
- **Inspection:** Periodically check the mounting screws to ensure they remain tight and secure. Retighten if necessary.

5. TROUBLESHOOTING

This section addresses common issues you might encounter.

- Organiser feels loose on the wall:**
Solution: Check the mounting screws. If they are loose, carefully tighten them. Ensure that the wall plugs (if used) are properly seated and that the screws are appropriate for your wall material.
- Items sliding off the shelf:**
Solution: The shelf has a protective edge designed to prevent items from falling. Ensure items are placed securely within this edge. Avoid placing items that are too large or unstable for the shelf's dimensions.
- Hooks not holding items:**
Solution: Verify that the weight of the item being hung does not exceed the capacity of the individual hook or the overall unit's weight limit. Ensure items are properly balanced on the hooks.

6. SPECIFICATIONS

Feature	Detail
Model Name	HÄSTVISKARE Wall Organiser
Model Number	10555297
Brand	IKEA
Dimensions (L x W x H)	42 cm x 11 cm x 15 cm (16.5 x 4.3 x 5.9 inches)
Material	Solid Oak, Tinted Clear Lacquer
Color	Beige (Oak)
Item Weight	1.5 kg (3.3 lbs)
Maximum Weight Capacity	2 kg (4.4 lbs)
Country of Origin	China

7. WARRANTY AND SUPPORT

For information regarding warranty coverage or product support, please refer to the official IKEA website or contact IKEA customer service directly. Specific warranty terms may vary by region and purchase date.

IKEA Official Website: www.ikea.com

© 2023 IKEA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CCS8P1G7>

More documents and user manuals: **<https://manuals.plus/>**