

## Sonew Sonew9s6icvhkx0

# Sonew Wall Mounted Heating Machine User Manual

Model: Sonew9s6icvhkx0

[Safety Information](#)

[Package Contents](#)

[Product Overview](#)

[Setup & Installation](#)

[Operating](#)

[Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

## INTRODUCTION

---

This user manual provides essential information for the safe and efficient operation of your Sonew Wall Mounted Heating Machine. Please read this manual thoroughly before installation and use, and retain it for future reference.

## SAFETY INFORMATION

---

To reduce the risk of fire, electric shock, or injury, observe the following safety precautions:

- Always ensure the unit is connected to a grounded outlet with the correct voltage (US 110V).
- Do not operate the heater with a damaged cord or plug, or after the heater malfunctions or has been dropped or damaged in any manner.
- Do not use outdoors. This heater is intended for indoor use only.
- Avoid placing the heater near flammable materials such as furniture, pillows, bedding, papers, clothes, and curtains. Maintain a minimum distance of 3 feet (0.9 meters) from the front, sides, and rear.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Unplug the heater when not in use.
- The unit is equipped with an overheating protection system. If the unit overheats, it will automatically shut off. Unplug the unit and allow it to cool down before restarting.
- Do not use in bathrooms or other damp environments without proper GFCI protection.

## PACKAGE CONTENTS

---

Verify that all items are present and in good condition:

- 1 x Sonew Wall Mounted Heating Machine
- 1 x Remote Control
- 2 x Screws
- 2 x Explosion Proof Plugs (Wall Anchors)



Image: The main unit, remote control, and mounting hardware included in the package.

## PRODUCT OVERVIEW

---

The Sonew Wall Mounted Heating Machine is a versatile unit designed for both heating and fan-only operation. It features a digital display, touch controls, and a remote control for convenient operation.



Image: Detailed view of the control panel with digital display and buttons for power, timer, and temperature/mode adjustment.

### Key Features:

- **Dual Use:** Provides warm air for heating and a fan-only mode for air circulation.
- **Wall-Mounted Design:** Saves floor space, ideal for small rooms.
- **PTC Instant Heat:** Utilizes PTC ceramic heating elements for rapid heating (warm in 3 seconds).
- **Remote Control:** Convenient operation from a distance.
- **Timer Function:** Allows for automatic on/off scheduling (up to 12 hours).
- **Safety Protection:** Equipped with overheating protection.
- **Low Noise Operation:** Operates at approximately 55 dB.



Warm in  
3 Seconds



Wide range  
of use



PTC  
Instant Heat



Desktop/  
Wall-mounted



Long Distance  
Remote Control



8 Hours  
Timing



Safety  
Protection



Splash Proof  
Protection

Image: Visual representation of the product's main features, including quick heating, versatile use, PTC technology, mounting options, remote control, timer, safety, and splash protection.

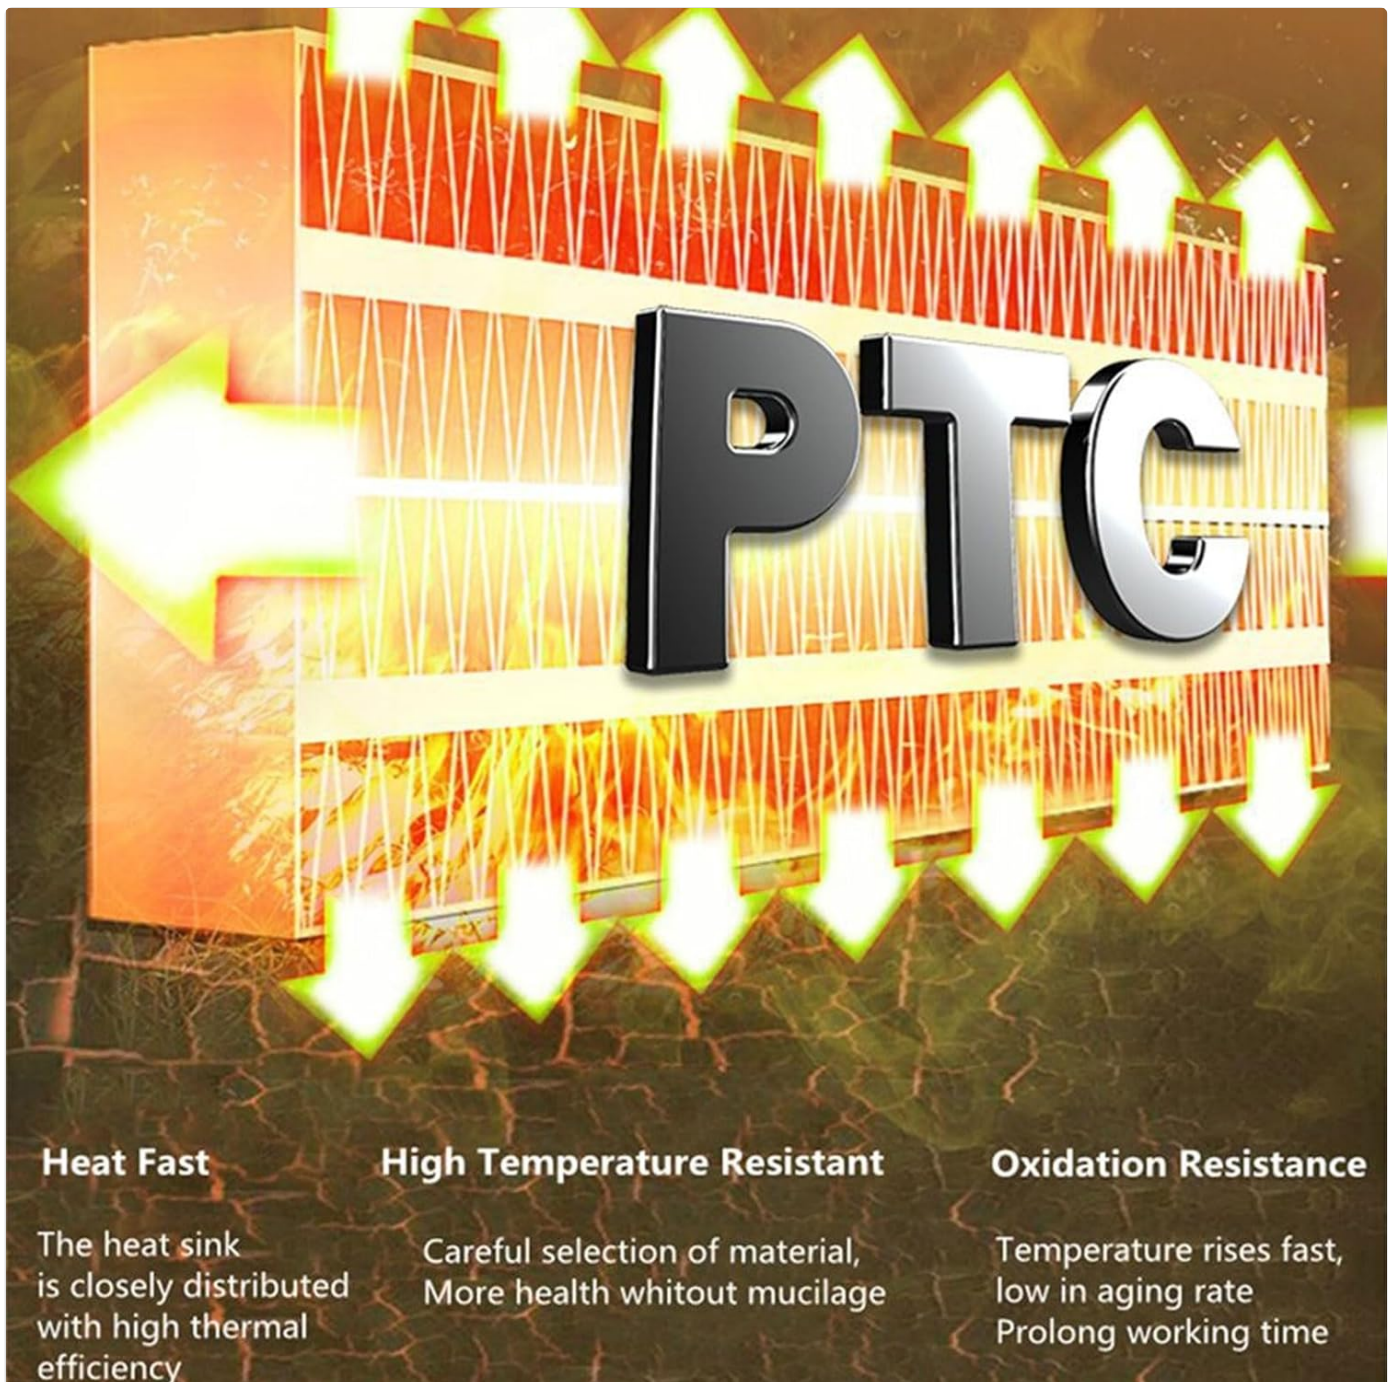


Image: An internal diagram showing the PTC heating element and how heat is efficiently distributed, highlighting its fast heating and durability.

## SETUP & INSTALLATION

---

The Sonew Wall Mounted Heating Machine is designed for easy wall installation. Ensure you have the necessary tools (drill, screwdriver, measuring tape) before beginning.

### Installation Steps:

1. **Choose Location:** Select a suitable wall location, ensuring it is away from water sources, flammable materials, and direct sunlight. Ensure there is a power outlet within reach of the unit's cord.
2. **Mark Drilling Points:** Hold the unit against the wall at the desired height and use a pencil to mark the positions for the mounting screws. Ensure the marks are level.
3. **Drill Holes:** Drill holes at the marked positions using an appropriate drill bit for your wall type. Insert the provided explosion-proof plugs (wall anchors) into the drilled holes.

4. **Mount the Unit:** Align the mounting holes on the back of the heater with the wall anchors. Insert the screws into the anchors and tighten them securely until the unit is firmly attached to the wall.
5. **Connect Power:** Plug the power cord into a grounded 110V electrical outlet.



Image: The heating machine mounted on a wall, demonstrating its intended installation, and also shown resting on a surface, indicating its compact design.



Image: The heating machine installed on a wall in a bedroom setting, illustrating its discreet placement and space-saving benefit.

## OPERATING INSTRUCTIONS

---

The heater can be operated using the control panel on the unit or the included remote control.

### Control Panel:

- **Digital Display:** Shows current settings, temperature, or timer.
- **Power Button:** Turns the unit ON/OFF.
- **Mode Button:** Cycles through heating modes (Low Heat, High Heat) and fan-only mode.
- **Timer Button:** Activates and adjusts the timer function.
- **+/- Buttons:** Adjust temperature settings or timer duration.

### Remote Control Functions:



Image: The remote control, showing its various buttons and their corresponding functions, such as power, timer, and heat settings.

- **ON/OFF:** Powers the unit on or off (effective up to 10 meters).
- **Timing:** Sets the automatic shut-off timer (up to 12 hours). Press repeatedly to cycle through time increments.
- **Low Heat:** Activates the low heating mode.
- **High Heat:** Activates the high heating mode.
- **Cold Wind (Fan-only):** Activates the fan-only mode for air circulation without heat.
- **Screen Off:** Turns off the digital display light for undisturbed sleep.
- **+/- Buttons:** Adjust temperature or timer settings.

### General Operation:

1. **Power On:** Press the ON/OFF button on the unit or remote. The digital display will light up.
2. **Select Mode:** Use the Mode button on the unit or the specific heat/cold buttons on the remote to choose your desired operation (Low Heat, High Heat, or Cold Wind).
3. **Set Timer (Optional):** Press the Timer button to set an automatic shut-off time. The display will show the set

duration.

4. **Adjust Settings:** Use the +/- buttons to fine-tune temperature or timer settings if applicable to the selected mode.
5. **Power Off:** Press the ON/OFF button again to turn off the unit.

## MAINTENANCE

---

Regular cleaning and maintenance will ensure the longevity and efficient operation of your heating machine.

- **Before Cleaning:** Always unplug the unit from the power outlet and allow it to cool completely before cleaning.
- **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners, waxes, or polishes as they may damage the finish.
- **Air Intake/Outlet:** Periodically check the air intake and outlet vents for dust and debris. Use a vacuum cleaner with a brush attachment to gently remove any accumulated dust. Do not block these openings.
- **Storage:** If storing the unit for an extended period, unplug it, clean it thoroughly, and store it in a cool, dry place, preferably in its original packaging.

## TROUBLESHOOTING

---

If you encounter issues with your Sonew Wall Mounted Heating Machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not turn on.	No power supply; Power cord not securely plugged in; Overheating protection activated.	Ensure unit is plugged into a live 110V outlet. Check circuit breaker. Unplug unit, wait 10-15 minutes for it to cool down, then plug back in.
No heat output.	Unit is in fan-only mode; Temperature setting is too low; Air intake/outlet blocked.	Ensure unit is set to a heating mode (Low Heat or High Heat). Increase the temperature setting. Check and clear any obstructions from vents.
Remote control not working.	Battery depleted; Obstruction between remote and unit; Remote not pointed correctly.	Replace the remote control battery (button cell 50mAh). Ensure no objects are blocking the signal path. Point the remote directly at the unit's receiver.
Unit makes unusual noise.	Dust or debris in fan; Unit not securely mounted.	Unplug and clean the air vents. Ensure the unit is securely mounted to the wall. If noise persists, discontinue use and contact support.

## SPECIFICATIONS

---

Feature	Detail
Model	Sonew9s6icvhkx0
Material	ABS Plastic
Color	White
Voltage	110 Volts (US Standard)

Feature	Detail
Wattage	1.1E+2 (110W)
Item Weight	4.75 pounds (approx. 2.15 kg)
Product Dimensions (D x W x H)	6.7" x 23.6" x 9.5" (17cm x 60cm x 24cm)
Noise Level	55 dB
Heating Elements	PTC Ceramic
Remote Control Battery	Button Cell (50mAh, included)
Installation Type	Wall-mounted

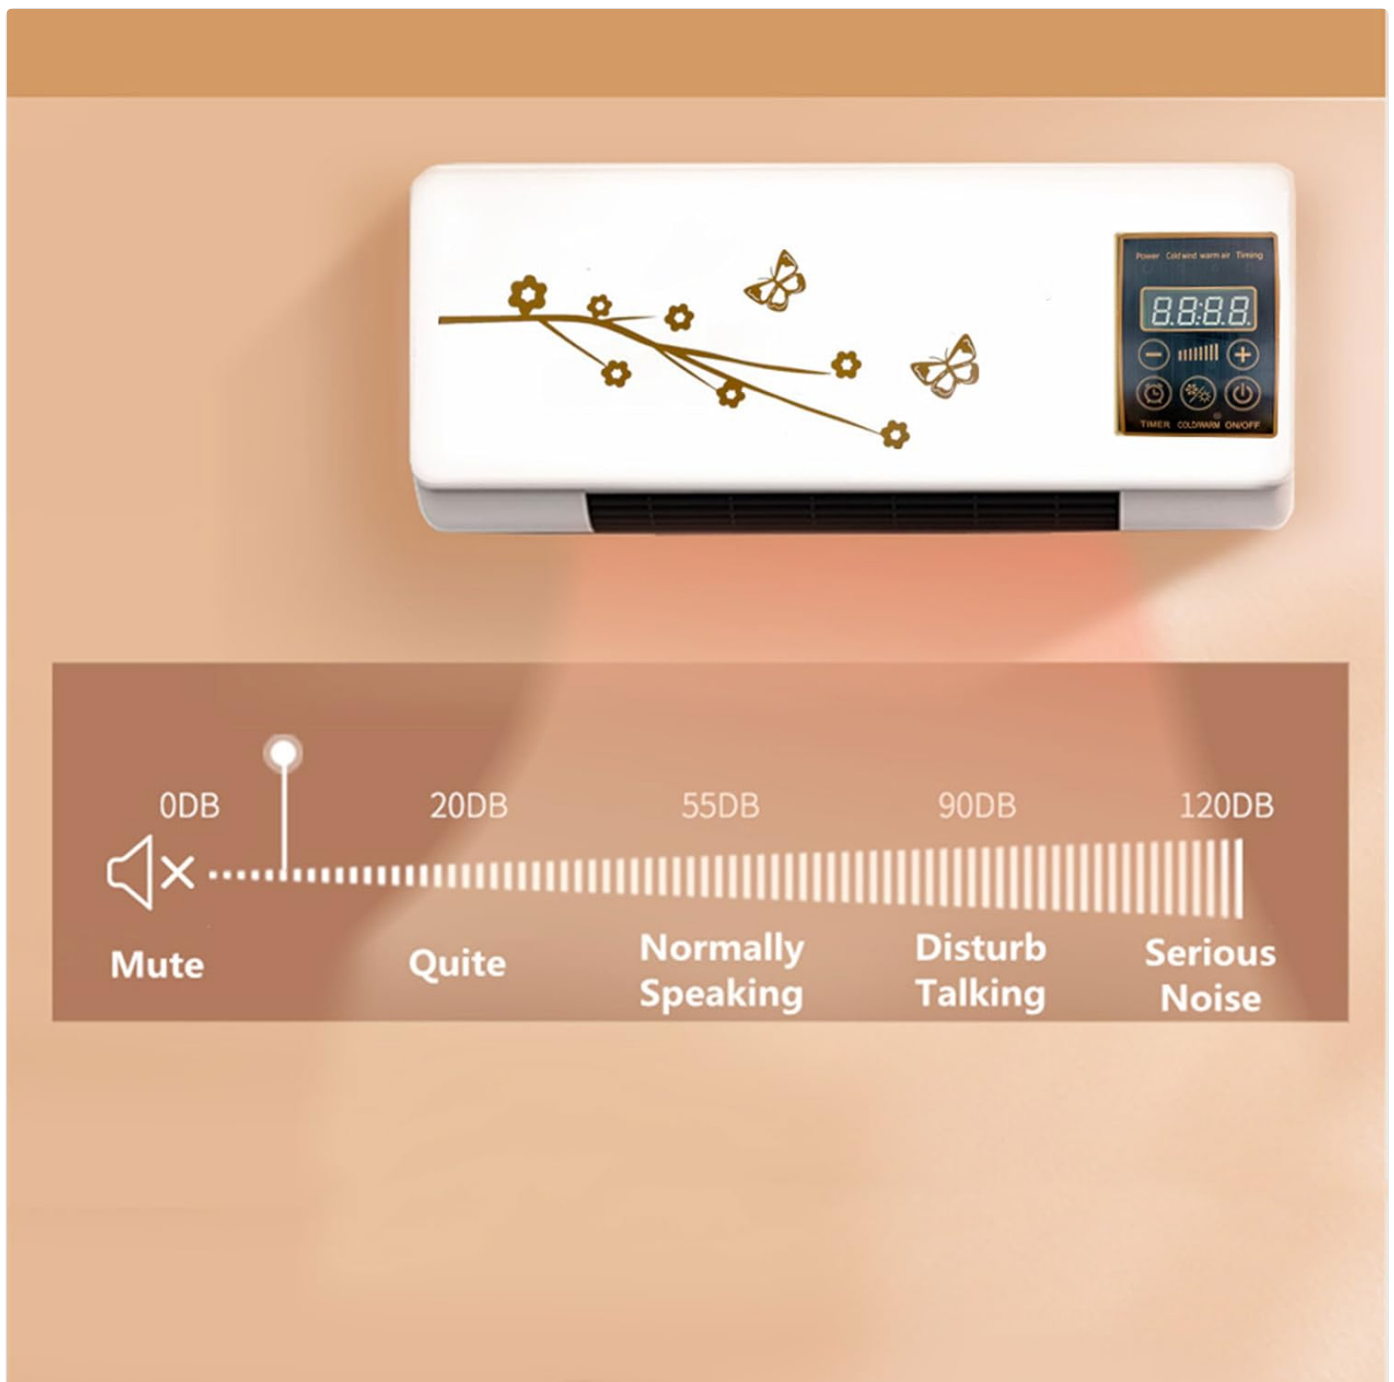


Image: A visual scale indicating the noise level of the unit (55dB), comparable to normal speaking volume.

## WARRANTY & SUPPORT

---

For warranty information or technical support, please contact Sonew customer service. Keep your purchase receipt as proof of purchase.

For further assistance, you may visit the official Sonew store or contact their support channels. Specific warranty terms and conditions may vary by region and retailer.

**Sonew Store Link:** <https://www.amazon.com/stores/Sonew/page/331933A2-EC71-47F9-8BF4-25DD5775CEBD>

© 2024 Sonew. All rights reserved.  
Manual Version: 1.0