

[manuals.plus](#) /› [Techmade](#) /› [TECHMADE Digital Alarm Clock with Wireless Charging User Manual](#)

Techmade W258

TECHMADE Digital Alarm Clock with Wireless Charging

USER MANUAL

1. INTRODUCTION

Thank you for purchasing the TECHMADE Digital Alarm Clock with Wireless Charging. This device is designed to provide a convenient and modern solution for timekeeping, alarm functions, and smartphone charging. Please read this manual carefully before use to ensure proper operation and to maximize the product's lifespan.

2. PACKAGE CONTENTS

Please check the package for the following items:

- TECHMADE Digital Alarm Clock with Wireless Charging (Model: W258)
- USB Power Cable
- User Manual



Image: The retail packaging of the TECHMADE Digital Alarm Clock, showing the product and its key features on the box.

3. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your new alarm clock.

Front View



Image: Front view of the TECHMADE Digital Alarm Clock, displaying the time and temperature on its LED screen. A smartphone is placed on top, indicating wireless charging.

Top View and Controls



Image: Top view of the TECHMADE Digital Alarm Clock, highlighting the wireless charging pad and control buttons for power, mode, and settings.

- **LED Display:** Shows time, temperature, and alarm indicators.
- **Wireless Charging Pad:** Located on the top surface for compatible smartphones.
- **Control Buttons:** (Refer to diagram on top of device for specific labels) Typically include Power/Brightness,

Mode, and Up/Down buttons for setting time and alarms.

4. SETUP

4.1 Power Connection

1. Connect the provided USB power cable to the power input port on the back of the alarm clock.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a powered USB port.
3. The display will light up, indicating the device is powered on.

4.2 Initial Time and Date Setting

Upon first power-on or after a power interruption, you may need to set the correct time and date. Refer to the 'Operating Instructions' section for detailed steps on setting time and date.

5. OPERATING INSTRUCTIONS

5.1 Setting Time and Date

1. Press the 'Mode' button to cycle through time, date, and alarm settings.
2. When the time display is flashing, use the 'Up' and 'Down' buttons to adjust the hours and minutes. Press 'Mode' again to confirm each setting.
3. Repeat the process for setting the year, month, and day.
4. To switch between 12-hour and 24-hour format, press the 'Up' button while the time is displayed.



RICARICA
WIRELESS



TEMP.
AMBIENTE



TRE
SVEGLIE



CALENDARIO



12/
24h
SETTAGGIO
FORMATO
ORA

Image: The digital display of the alarm clock showing the current time and ambient temperature, along with icons indicating various features like wireless charging and alarm settings.

5.2 Setting Alarms (Up to 3)

1. Press the 'Mode' button until 'AL1', 'AL2', or 'AL3' appears on the display.
2. Press and hold the 'Mode' button until the alarm time starts flashing.
3. Use the 'Up' and 'Down' buttons to set the desired alarm hour and minute. Press 'Mode' to confirm each.
4. After setting the time, you can enable or disable the alarm by pressing the 'Up' or 'Down' button. An alarm icon will appear on the display when activated.

5.3 Snooze Function

When the alarm sounds, press any button (except the 'Power' button to turn off the alarm completely) to activate the snooze function. The alarm will temporarily stop and sound again after a few minutes (default snooze time is usually 5-9 minutes, refer to product specifications for exact duration).

5.4 Adjusting LED Display Brightness and Night Light

The LED display brightness can be adjusted to suit your preference, especially for night use. The integrated night

light provides a soft glow.



DORMI SOGNI TRANQUILLI

CON LA MODALITÀ NOTTE, POTRAI SPEGNERE IL DISPLAY

Image: The TECHMADE Digital Alarm Clock placed on a nightstand in a dimly lit room, demonstrating its night light feature and subtle display illumination for a comfortable sleep environment.

- Press the 'Power/Brightness' button to cycle through different brightness levels for the LED display.
- Some models may have a dedicated night mode that automatically dims the display during specific hours or allows the display to be turned off completely for undisturbed sleep. Consult the specific button functions on your device.

5.5 Wireless Charging

The alarm clock features a wireless charging pad compatible with Qi-enabled smartphones.



RICARICA
WIRELESS



RICARICA WIRELESS

RICARICA I TUOI DISPOSITIVI ELETTRONICI DOTATI DI RICARICA WIRELESS

Image: A smartphone is placed on top of the TECHMADE Digital Alarm Clock, showing a charging icon on its screen, indicating active wireless charging.

1. Place your Qi-enabled smartphone directly onto the wireless charging pad located on the top surface of the alarm clock.
2. Ensure the phone is centered on the charging pad for optimal connection.
3. A charging indicator (e.g., a lightning bolt icon or battery icon) will appear on your phone's screen and/or the alarm clock's display to confirm charging has begun.
4. Remove your phone once fully charged.

Note: Wireless charging efficiency may vary depending on phone model, case thickness, and placement. Avoid placing metal objects or cards with magnetic strips on the charging pad.

5.6 Temperature Display

The alarm clock displays the ambient room temperature. This feature is automatic and does not require manual setting.

6. MAINTENANCE

- **Cleaning:** Wipe the device with a soft, dry cloth. Do not use abrasive cleaners, solvents, or strong chemicals, as they may damage the surface.
- **Storage:** If not in use for an extended period, disconnect the power cable and store the device in a cool, dry place.
- **Handling:** Handle the device with care. Avoid dropping it or exposing it to excessive force, moisture, or extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is off or not working.	No power; Power cable loose; Display brightness set to minimum/off.	Ensure power cable is securely connected. Check power source. Press the 'Power/Brightness' button to adjust brightness.
Wireless charging not working.	Phone not Qi-enabled; Phone not centered; Phone case too thick; Metal objects on pad.	Ensure phone supports Qi wireless charging. Reposition phone. Remove thick cases or metal objects.
Alarm not sounding.	Alarm not activated; Volume too low.	Ensure alarm is set and activated (alarm icon visible). Check if there's a volume setting (if applicable).
Incorrect time/date.	Time/date not set correctly; Power interruption.	Follow instructions in 'Setting Time and Date' to reset.

8. SPECIFICATIONS

Feature	Detail
Brand	Techmade
Model Number	W258
Color	Black
Product Dimensions	19 x 3.81 x 4 cm
Item Weight	300 g
Display Type	Digital LED
Power Source	Battery Powered (likely USB-powered with battery backup)
Special Features	Alarm, Timer, Wireless Charging, Adjustable LED Display, Night Light, Temperature Display
Alarm Groups	Up to 3
Time Format	12/24 Hour selectable

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the retailer/manufacturer directly. Keep your proof of purchase for any warranty claims.

© 2025 Techmade. All rights reserved.

Related Documents - W258

 IT - MANUALE UTENTE Techmade s.r.l. PA: TM-H69T (Football Team) RU: TM-H69T FC: H69 Descrizione: Auricolari senza filo Temperatura di lavoro: -10° C to 40° C Trademark: Techmade Srl	<p>Manuale Utente Auricolari Wireless Techmade TM-H69T</p> <p>Scopri come utilizzare al meglio i tuoi auricolari wireless Techmade TM-H69T. Questa guida include istruzioni per l'uso, consigli di sicurezza, informazioni sulla garanzia e smaltimento.</p>
 IT - MOUSE WIRELESS Modello: TM-MUSWN4B Techmade s.r.l. Codice prodotto: TM-MUSWN4B RFID: TM-2226 Descrizione: Wireless Mouse Temperatura di lavoro: -10° C to 60° C Trademark: Techmade Srl	<p>Manuale Utente Mouse Wireless Techmade TM-MUSWN4B</p> <p>Guida completa per il mouse wireless Techmade TM-MUSWN4B, inклuse specifiche tecniche, istruzioni d'uso, avvertenze di sicurezza e dichiarazione di conformità.</p>
 ROCKS FACE THE MUSIC MANUALE UTENTE - IT	<p>Manuale Utente Smartwatch TECHMADE TM-ROCKS</p> <p>Guida utente completa per lo smartwatch TECHMADE TM-ROCKS, che include istruzioni per l'uso, informazioni sulla garanzia, manutenzione e risoluzione dei problemi.</p>
 TECHMADE DECODER DVB-T2 RECEIVER Decoder digitale terrestre T2 con telecomando	<p>Techmade TM-GX1 Digital Decoder User Manual</p> <p>Comprehensive guide for the Techmade TM-GX1 digital decoder, covering setup, operation, features, troubleshooting, and technical specifications. Learn how to install and use your device.</p>
 MACRO SMARTWATCH MANUALE UTENTE - ITA	<p>Techmade MACRO Smartwatch User Manual</p> <p>Comprehensive user manual for the Techmade MACRO Smartwatch, covering setup, features, safety, and maintenance. Learn how to charge, connect via Bluetooth, use health tracking, and more.</p>



[Manuale Utente Smartwatch Techmade Vision](#)

Manuale utente per lo smartwatch Techmade Vision, che include istruzioni per la ricarica, la connessione Bluetooth, le azioni touch screen e le informazioni sulla garanzia.

Documents - Techmade – W258

[\[pdf\] User Manual](#)



TM W258 USER MANUAL MULTILANGUAGE 2023 01 09 Limitaciones en el uso previsto o mal previsible 1 No desmonte dispositivo Si se requiere una reparación comuníquese con un centro de ventas o 81eSSYJcYrLm media amazon images | 81eSSYJcYrL ref dp product quick view |||

SVEGLIA SMART WIRELESS Sveglia smart digitale con funzione ricarica wireless **IT**
- **MANUALE UTENTE** Sveglia smart digitale con funzione ricarica wireless **IT**
- **AVVERTENZE** Techmade S.r.l. RIF.: **TM-W258** F.C.: **W258** Descrizione:
Sveglia smart wireless Temperatura di lavoro: da 0C a 45C / da 32F a 11...

lang:it score:34 filesize: 332.86 K page_count: 6 document date: 2024-10-23