

Walita HD1172/80

Philips Walita Dry Iron HD1172/80 User Manual

Model: HD1172/80 | Voltage: 220 Volts | Power: 1000W

[Introduction](#) [Safety Information](#) [Product](#)
[Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Philips Walita Dry Iron HD1172/80. This dry iron is designed for quick and efficient garment pressing, featuring an aluminum soleplate for smooth gliding across various fabric types. Its precision tip allows access to difficult areas, ensuring thorough ironing results.

2. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Always ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not immerse the iron, its cord, or plug in water or any other liquid.
- Do not leave the iron unattended while it is connected to the mains.
- Keep the iron and its cord out of reach of children when it is switched on or cooling down.
- Do not operate the iron if it has been dropped, if there are visible signs of damage, or if it is leaking.
- Always place the iron on a stable, heat-resistant surface when resting.
- The soleplate of the iron can become extremely hot and may cause burns if touched.
- Unplug the iron from the mains socket before cleaning and when not in use.
- Do not allow the power cord to touch the hot soleplate.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Philips Walita Dry Iron.



Figure 3.1: Front view of the Philips Walita Dry Iron HD1172/80, showcasing its sleek design and precision tip.



Figure 3.2: Side view of the iron, highlighting the ergonomic handle and temperature control dial.



Figure 3.3: The iron standing upright on its heel rest, a safe position when not actively ironing.

1. **Soleplate:** Aluminum soleplate for smooth gliding.
2. **Precision Tip:** Designed to reach difficult areas.
3. **Temperature Control Dial:** Used to select the appropriate temperature for different fabrics.
4. **Indicator Light:** Illuminates when the iron is heating and turns off when the set temperature is reached.
5. **Ergonomic Handle:** Provides comfortable grip during use.
6. **360° Swivel Cord:** Allows for flexible movement and prevents tangling.
7. **Heel Rest:** For safely resting the iron in an upright position.

4. SETUP

Before first use, ensure all packaging materials are removed from the iron.

1. **Unpack:** Carefully remove the iron and any accessories from the packaging.

2. **Inspect:** Check the iron for any signs of damage. If damaged, do not use and contact customer support.
3. **Initial Cleaning:** Wipe the soleplate with a damp cloth to remove any manufacturing residues.
4. **First Use (Optional):** It is recommended to iron an old piece of fabric first to ensure any remaining residues are removed and do not stain your garments.
5. **Placement:** Place the iron on a stable, heat-resistant ironing board or surface.

5. OPERATION

Follow these steps for effective and safe ironing.

5.1 Preparing for Ironing

- Sort clothes according to fabric type (e.g., linen, cotton, wool, silk, synthetics). Start with fabrics that require lower temperatures.
- Check garment care labels for ironing instructions.

5.2 Ironing Process

1. **Plug In:** Insert the power plug into a suitable 220 Volt mains socket.
2. **Set Temperature:** Turn the temperature control dial to the desired setting for your fabric. Refer to the fabric guide on the dial or your garment's care label.
3. **Heat Up:** The indicator light will illuminate, indicating the iron is heating. It will turn off when the set temperature is reached.
4. **Ironing:** Begin ironing your garments. The aluminum soleplate is designed for smooth gliding. Use the precision tip for collars, cuffs, and pleats.



Figure 5.1: Demonstrating the iron in use, smoothly gliding over fabric.



Figure 5.2: Illustrating the ease of lifting and maneuvering the iron during the ironing process.

5. **Resting the Iron:** When taking a break or adjusting garments, always rest the iron upright on its heel rest.
6. **After Use:** Once finished, turn the temperature dial to the minimum setting, unplug the iron from the mains socket, and allow it to cool down completely before storing.

6. MAINTENANCE

Proper care ensures the longevity and performance of your iron.

6.1 Cleaning the Soleplate

To keep the soleplate clean and ensure smooth gliding:

- Ensure the iron is unplugged and completely cool.
- Wipe the soleplate with a damp cloth and a non-abrasive cleaner if necessary.
- Do not use abrasive scouring pads, vinegar, or harsh chemicals, as these can damage the soleplate.

6.2 Cleaning the Housing

Wipe the housing of the iron with a damp cloth. Do not use abrasive cleaners.

6.3 Storage

After use, allow the iron to cool down completely. Store it in an upright position on its heel rest in a dry, safe place, away from direct sunlight and moisture. Do not wrap the cord tightly around the iron while it is still warm.

7. TROUBLESHOOTING

If you encounter issues with your iron, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in or power outlet issue.	Ensure the iron is securely plugged into a working power outlet. Check the circuit breaker.
Indicator light does not turn on.	Temperature dial set to minimum or iron not plugged in.	Turn the temperature dial to a higher setting. Ensure the iron is plugged in.
Iron is not hot enough.	Incorrect temperature setting for fabric.	Increase the temperature setting according to the fabric type. Allow sufficient time for the iron to heat up.
Soleplate is dirty or sticky.	Residue from fabric or starch buildup.	Clean the soleplate as described in the Maintenance section (6.1).

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Key technical specifications for your Philips Walita Dry Iron HD1172/80.

- **Model:** HD1172/80
- **Brand:** Walita (Philips Walita)
- **Power:** 1000 Watts
- **Voltage:** 220 Volts
- **Soleplate Material:** Aluminum
- **Color:** Gray
- **Special Features:** Temperature Control, Precision Tip, 360° Swivel Cord
- **Product Dimensions:** 24.6 x 11.5 x 12.5 cm (L x W x H)
- **Weight:** 649 g

9. WARRANTY & SUPPORT

9.1 Warranty Information

This Philips Walita Dry Iron HD1172/80 comes with a **2-year warranty** from the date of purchase, covering manufacturing defects and malfunctions under normal use. Please retain your purchase receipt as proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accident, unauthorized repair, or normal wear and tear.

9.2 Customer Support

For technical assistance, warranty claims, or general inquiries, please contact Philips Walita customer support. Refer to the contact information provided in your product packaging or visit the official Philips Walita website for your region.

Included in the Box:

- 1 x Philips Walita Dry Iron HD1172/80
- 1 x User Manual (this document)
- 1 x Warranty Certificate

