

WOLFANG GA300

WOLFANG GA300 4K60FPS Action Camera User Manual

Model: GA300

1. INTRODUCTION

The WOLFANG GA300 is a high-performance 4K action camera designed to capture your adventures in stunning detail. Featuring 4K/60FPS video recording, 24MP photo capabilities, advanced EIS stabilization, and a waterproof design up to 40 meters, it is suitable for a wide range of activities from daily vlogging to extreme sports. This manual provides essential information for setting up, operating, and maintaining your GA300 action camera.

2. WHAT'S IN THE BOX

Upon unboxing your WOLFANG GA300 Action Camera, please verify that all the following components are included:

ADJUSTABLE VIEW ANGLE LENS



Image: WOLFANG GA300 Action Camera and its comprehensive accessory kit.

- 1x WOLFANG GA300 Action Camera
- 1x Remote Control
- 2x 1350mAh Battery
- 1x Waterproof Case
- 1x Bicycle Stand
- 5x Mounts (various types)
- 2x 2-sided tape
- 2x Helmet Mounts
- 4x Bandages
- 5x Tethers
- 1x USB Cable
- 1x Lens Cloth
- 1x Quick Reference Guide

3. KEY FEATURES

The WOLFANG GA300 is equipped with several advanced features to enhance your recording experience:

3.1. 4K/60FPS Video & 24MP Photo

Capture incredibly sharp and fluid footage with 4K resolution at 60 frames per second. The camera also supports high-resolution 24MP still photos, ensuring every moment is preserved with clarity.

3.2. 40M Waterproof Camera & Dive Mode

The included waterproof case allows the GA300 to be submerged up to 40 meters (131 feet), making it ideal for underwater activities. The dedicated Dive Mode automatically corrects colors to produce more vibrant and natural-looking footage in aquatic environments.

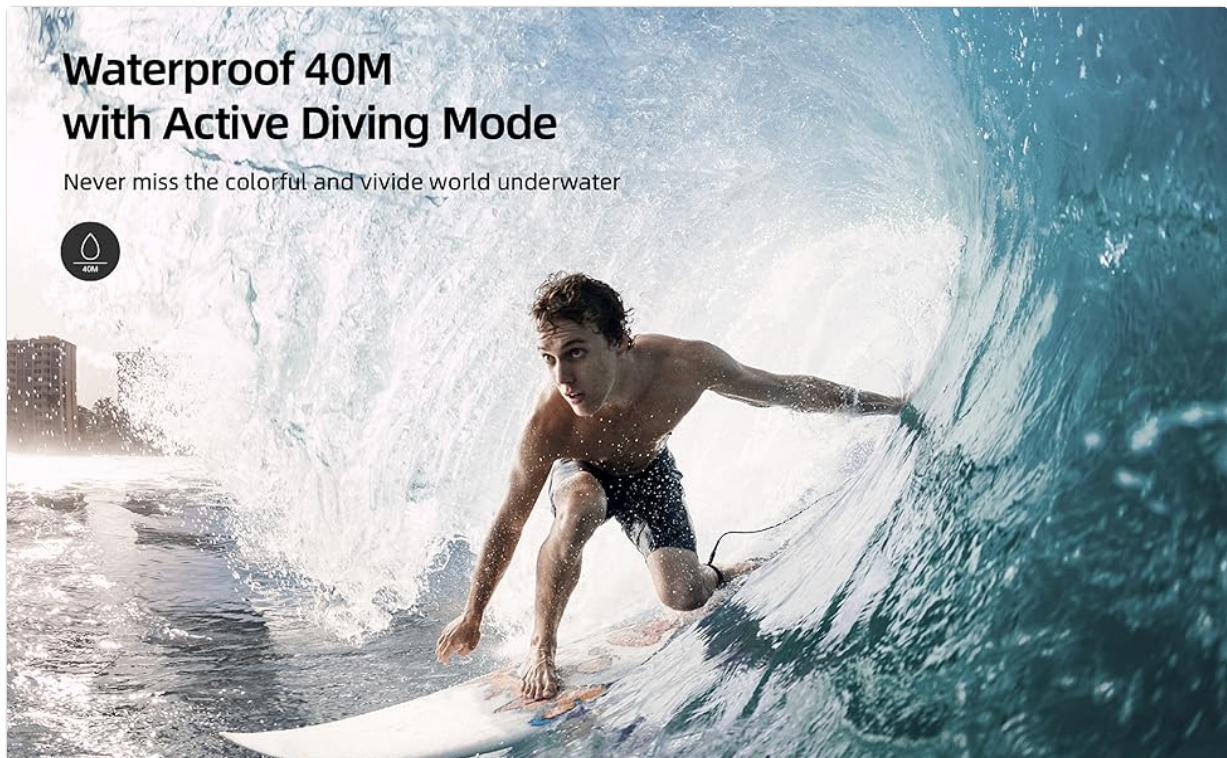


Image: Overview of the WOLFANG GA300's main features, including its waterproof capability.

3.3. Dual Microphone & Plenty of Accessories

The GA300 comes with an external noise-canceling microphone for superior audio capture in noisy settings. A wide array of mounting accessories is included, providing versatile options for attaching the camera to bikes, helmets, and other gear without additional purchases.



Image: The WOLFANG GA300 camera shown with its external microphone and remote control.

3.4. 6-Axis EIS Stabilization & Eight Times Zoom

Equipped with advanced 6-axis Electronic Image Stabilization (EIS), the GA300 ensures smooth and steady video footage even during intense activities. The 8x digital zoom allows you to capture distant subjects with clarity.

3.5. Sensitive Touchscreen & Extensive Functions

Navigate settings and preview footage effortlessly with the responsive touchscreen. The camera offers a variety of functions including loop recording, time-lapse, slow-motion, burst recording, and a convenient auto video recording mode for dashcam functionality.



Image: The WOLFANG GA300's intuitive touchscreen interface and accessible battery compartment.



Image: Visual examples of various shooting modes available on the WOLFANG GA300, including Time Lapse and Slow Motion.

4. SETUP

4.1. Charging the Battery

Before first use, fully charge both 1350mAh Lithium Ion batteries. Insert a battery into the camera or an external charger (if provided) and connect the USB cable to a power source. The charging indicator will show progress and turn off when fully charged.

4.2. Inserting MicroSD Card

The GA300 requires a MicroSD card (not included) for storing photos and videos. Open the MicroSD card slot cover, and gently insert the card with the gold contacts facing the back of the camera until it clicks into place. Ensure the card is formatted in the camera's settings before recording.

4.3. Attaching Waterproof Case

For underwater use or protection against dust and impact, place the camera inside the waterproof case. Ensure the case is properly sealed and the latch is securely fastened. Test the case without the camera in water first to confirm it is watertight.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

Press and hold the Power/Mode button on the front of the camera for 3 seconds to turn it on or off.

5.2. Mode Switching

Short press the Power/Mode button to cycle through different modes: Video, Photo, Playback, and Settings.

5.3. Recording Video

In Video mode, press the Shutter/OK button on top of the camera to start recording. Press it again to stop recording.

5.4. Taking Photos

In Photo mode, press the Shutter/OK button to take a picture.

5.5. Wi-Fi Connection

Enable Wi-Fi in the camera's settings. Download the official WOLFANG app on your smartphone. Connect to the camera's Wi-Fi network (SSID and password displayed on camera screen). Use the app for live preview, remote control, and file transfer.

5.6. Touchscreen Navigation

Swipe left/right to switch between modes, swipe up/down to access settings or playback options. Tap icons to select functions or confirm actions.

6. MAINTENANCE

6.1. Cleaning

Use the provided lens cloth to clean the camera lens and screen. For the waterproof case, rinse with fresh water after saltwater use and allow to air dry. Do not use harsh chemicals.

6.2. Battery Care

Store batteries in a cool, dry place. For long-term storage, charge batteries to about 50% capacity. Avoid fully discharging batteries frequently to prolong their lifespan.

6.3. Storage

When not in use, store the camera and accessories in a protective case away from direct sunlight, high temperatures, and humidity.

7. TROUBLESHOOTING

- **Camera not turning on:** Ensure the battery is fully charged and correctly inserted. Try a different battery.
- **SD card error:** Reformat the MicroSD card in the camera's settings. Ensure the card is a genuine, high-speed card (U3 or higher recommended) and not exceeding the maximum supported capacity.
- **Poor video/photo quality:** Check the resolution settings. Ensure the lens is clean. Verify lighting conditions are adequate.
- **Wi-Fi connection issues:** Ensure Wi-Fi is enabled on the camera and your smartphone. Restart both devices. Check the Wi-Fi password.
- **Camera freezing:** Remove and reinsert the battery to reset the camera.

8. SPECIFICATIONS

Specification	Value
Product Dimensions	1.18 x 1.65 x 2.36 inches
Item Weight	1.26 pounds
Item Model Number	GA300
Batteries	2 Lithium Ion batteries required
Manufacturer	WOLFANG
Photo Sensor Technology	CMOS
Video Capture Resolution	4K 60FPS, 4K 30FPS, 2.7K 30FPS, 1080P 120FPS, 1080P 60FPS, 1080P 30FPS, 720P 240FPS, 720P 120FPS, 720P 60FPS
Maximum Focal Length	4 Millimeters
Maximum Aperture	2 f


Specification	Value
Flash Memory Type	Micro SD
Video Capture Format	MOV
Screen Size	2 Inches
Connectivity Technology	Wi-Fi
Color	Black

9. WARRANTY & SUPPORT

The WOLFANG GA300 Action Camera comes with a 24-month warranty from the date of purchase, covering manufacturing defects. For technical support, troubleshooting assistance, or warranty claims, please contact WOLFANG customer service through their official website or the contact information provided in your product packaging.


For further assistance, please visit the WOLFANG Store:[WOLFANG Store on Amazon](#)

 Related Documents - GA300

	Wolfgang GA100 Action Camera: Frequently Asked Questions Answers to common questions about the Wolfgang GA100 action camera, including memory card recognition, mobile phone connectivity, waterproofing, battery purchasing, remote control usage, and handling of package issues or broken accessories.
	Action Camera User Manual - WOLFANG GA200 Comprehensive user manual for the WOLFANG GA200 Action Camera, detailing features, settings, and operation for 4K video recording, waterproofing, EIS stabilization, and Wi-Fi connectivity.
	Wolfgang GA200 Action Camera Q&A Frequently asked questions and answers for the Wolfgang GA200 action camera, covering app connection, waterproof usage, remote control, memory card formatting, video quality, and package issues.

	WOLFANG GA300 Action Camera User Manual Comprehensive user manual for the WOLFANG GA300 action camera, covering installation, charging, TF card usage, product diagrams, specifications, and mode operations.
	Wolfang GA200 Action Camera Q&A Frequently asked questions and answers for the Wolfang GA200 action camera, covering app connection, underwater use, remote control, memory card formatting, video quality, and package contents.
	Wolfang GA420 Action Camera Q&A and User Guide Frequently asked questions and user guide for the Wolfang GA420 action camera, covering app connection, EIS function, remote control usage, and memory card formatting.

 Documents - WOLFANG – GA300

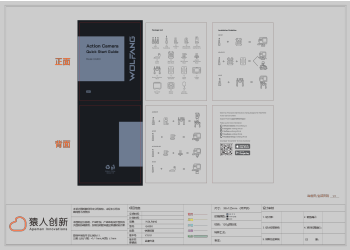

[Wolfang GA300 Action Camera Quick Start Guide - Setup and Accessories](#)

Concise guide to setting up your Wolfang GA300 action camera, including package contents, installation guidelines for various mounts, and support information.

lang:en score:46 filesize: 2.15 M page_count: 1 document date: 2024-03-06


[\[pdf\] Guide Accessories](#)

WOLFANG GA300 Action Camera 4K 60FPS 24MP Waterproof 40M Underwater EIS Stabilization WiFi Wide Angle Helmet External Microphone Remote Control 2x1350mAh Batteries and Accessory Kit User Guide 71SiPxx0V L m media amazon images I |||

Q1: Which app do I need to download to connect my camera to my phone You can download the iSmart DV2 app from the Google Play Store and the Apple App Store. the WiFi app allows you to control your camera remotely from your smartphone.

WOLFANG Q2: How to connect the phone to the camera **GA300** Q ...

 lang:en score:43 filesize: 163.33 K page_count: 4 document date: 2022-09-23

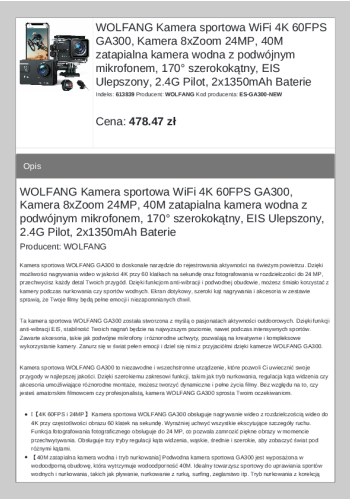

[\[pdf\]](#)

WOLFANG Kamera sportowa WiFi 4K 60FPS GA300 8xZoom 24MP 40M zatapialna kamera wodna z podwójnym mikrofonem 170° szerokokątny EIS Ulepszony 2 4G Pilot 2x1350mAh Baterie Sklep internetowy stylem pl wolfang wifi 4k 60fps ga300 8xzoom 24mp 40m podwojnym 1700 szerokoka upload files product szerokokatny eis ulepszony 4g pilot 2x1350mah baterie 613839 |||

WOLFANG Kamera sportowa WiFi 4K 60FPS **GA300**, Kamera 8xZoom 24MP, 40M zatapialna kamera wodna z podwójnym mikrofonem, 170 szerokoktny, EIS Ulepszony, 2.4G Pilot, 2x1350mAh Baterie Indeks: 613839 Producent: WOLFANG Kod producenta: ES-**GA300**-NEW Cena: 478.47 zł Opis WOLFANG Kamera sportowa WiFi 4K 60FPS ...

lang:pl score:36 filesize: 246.67 K page_count: 3 document date: 2025-01-23



Kamera akcji WOLFANG 4K 60FPS, kamera podwodna GA300 20MP WiFi, wodoodporna kamera na kask 40M z ekranem dotykowym Zoom 8X 6-AXIS EIS (mikrofon zewnętrzny, pilot baterie 2x1350mAh i zestaw akcesoriów)

Indeks: 275744 Producent: WOLFANG kod producenta: GA300

Cena: **611.43 zł**

Opis

Kamera akcji WOLFANG 4K 60FPS, kamera podwodna GA300 20MP WiFi, wodoodporna kamera na kask 40M z ekranem dotykowym Zoom 8X 6-AXIS EIS (mikrofon zewnętrzny, pilot baterie 2x1350mAh i zestaw akcesoriów)

Producent: WOLFANG

Kamera sportowa WOLFANG GA300 to idealny sprzęt dla miłośników sportów ekstremalnych - jej wytrzymała obudowa jest wodoodporna na głębokości do 40 metrów, dzięki czemu można ją bezpiecznie używać podczas nurkowania czy surfowania. Kamera pozwala na nagrywanie wideo w rozdzielczości 4K przy 60 klatkach na sekundę oraz fotografowanie ze zmienną prędkością drgań, dzięki rozdzielczości do 21 megapikseli. Dla potrzeb akcesoriów, w tym zewnętrzny mikrofon, pilot zdalnego sterowania i ładowarki, posiada na boku dedykowane urządzenie do różnych rodzajów aktywności.

Do użytkowania GA300 nie wymaga specjalistycznej wiedzy - intuicyjne, dotykowe sterowanie oraz funkcje takie jak automatyczne nagrywanie wideo, redukcja szumów czy tryb nurkowania z korektą kolorów sprawiają, że nagrywanie i robienie zdjęć jest proste i przyjemne dla każdego. Zastosowanie zaokrąglonej obrotowej głowicy pozwala na pełną swobodę w ustawianiu i celowaniu, nieając niebezpieczeństwa, nawet podczas intensywnych ruchów i skoków.

Kamera sportowa WOLFANG GA300 to zaawansowany sprzęt dla osób, które chcą sobie wypróbować piękno dróg i nieustraszenie odkrywać niesamowite światy pod wodą. Zestaw akcesoriów, wodoodporna obudowa i wodoodporna obudowa to tylko niektóre z wyróżniających cech tego urządzenia.

- 1. Wyświetlacz 4K / 60FPS i obrotowa 20MP WOLFANG GA300 Action Camera to najlepsza kamera 4K, która oferuje rozdzielczość wideo do 4K przy natężeniu 60 klatek na sekundę, aby uzyskać wyraźne szczegóły i żywy kolor, rozdzielczość wideo 1080p i 720p, nawet 20 MP, co zapewnia doskonałe fotografowanie, a także łatwy przegrywanie zdjęć w momencie fotografowania.
- 1. Funkcja redukcji szumów i korekcji kolorów Kamera na kask GA300 jest wyposażona w zewnętrzny mikrofon i redukcję szumów, aby uzyskać wyraźniejsze dźwięki w trudnych warunkach. Dedykowany pilot zdalnego sterowania, wodoodporna obudowa, wodoodporna obudowa i zestaw akcesoriów - inne akcesoria mogą pomóc w maksymalnym wykorzystaniu funkcji i możliwości urządzenia przy różnych okazjach.
- 1. 1. Wodoodporna obudowa i tryb nurkowania 40M Wodoodporna obudowa chroni i podnosi kamerę do użytku pod wodą.

[pdf]

Kamera akcji WOLFANG 4K 60FPS kamera podwodna GA300 20MP WiFi wodoodporna na kask 40M z ekranem dotykowym Zoom 8X 6 AXIS EIS mikrofon zewnętrzny pilot baterie 2x1350mAh i zestaw akcesoriów Sklep internetowy stylem.pl wofang 4k 60fps ga300 20mp wifi 40m zoom 8x axis upload files product eis zewnętrzny 2x1350mah akcesoriów 275744 |||

Kamera akcji WOLFANG 4K 60FPS, kamera podwodna **GA300** 20MP WiFi, wodoodporna kamera na kask 40M z ekranem dotykowym Zoom 8X 6-AXIS EIS mikrofon zewnętrzny, pilot baterie 2x1350mAh i zestaw akcesoriów Indeks: 275744 Producent: WOLFANG Kod producenta: **GA300** Cena: 611.43 zł Opis Kamera akcji WOLFANG 4K ... lang:pl score:35 filesize: 1.26 M page_count: 4 document date: 2023-08-01

[pdf]

Frequently Asked Questions Accessories FAQ WOLFANG Action Camera 4K 60FPS 24MP GA300 WiFi 8X Zoom EIS Vlogging 40M Waterproof Underwater for Snorkeling External Mic Remote Control and Helmet Accessories Kit Cycling Electronics Photo 61An UrbOeL m media amazon images I |||

WOLFANG **GA300** Q A Text Version After-Sales Email support wofang.co Q1: Which app do I need to download to connect my camera to my phone You can download the iSmart DV2 app from the Google Play Store and the Apple App Store. the WiFi app allows you to control your camera remotely from your smartph... lang:en score:32 filesize: 126.3 K page_count: 4 document date: 2022-09-23

[pdf]

Frequently Asked Questions Accessories FAQ WOLFANG Action Cam GA300 4K 60FPS 20MP WiFi EIS Camera con schermo tattile 8X Zoom Fotocamera Impermeabile 40M Subacquea Videocamera Mic Esterno Telecomando 2x1350mAh Batterie e Accessori Amazon.it Elettronica 71DiXMzYWJL m media amazon images I |||

Q1: Quale app devo scaricare per collegare la mia fotocamera al telefono Puoi scaricare l'app iSmart DV2 dal Google Play Store e dall'Apple App Store. I app WiFi ti consente di controllare la tua fotocamera a distanza dal tuo smartphone. WOLFANG Q2: Come collegare il telefono alla fotocamera GA... lang:it score:32 filesize: 164.21 K page_count: 4 document date: 2022-09-23

[pdf]

Preguntas frecuentes WOLFANG Cámara Deportiva WiFi 4K 60FPS GA300 Videocámara 8xZoom 24MP Acuática Sumergible 40M con Micrófono Dual 170° Gran Angular EIS Mejorado 2 4G Control Remoto 2x1350mAh Baterías Amazon.es Deportes y aire libre 61oKTXmLaGL m media amazon images I |||

Q1: Qu aplicacin necesito descargar para conectar mi cmara a mi telfono WOLFANG **GA300** Q A Versin de texto Puede descargar la aplicacin iSmart DV2 desde Google Play Store y Apple App Store. la aplicacin WiFi le permite controlar su cmara de forma remota desde su telfono inteligente. Q2: Cmo conect... lang:es score:31 filesize: 127.6 K page_count: 4 document date: 2022-09-23



WOLFANG GA300 Q&A Text Version

Q1: Which app do I need to download to connect my camera to my phone?

You can download the iSmart DV2 app from the Google Play Store and the Apple App Store. the WiFi app allows you to control your camera remotely from your smartphone.

Q2: How to connect the phone to the camera?

1. Download the iSmart DV2 application to your phone. The application can be found through Google Store or Apple Store.
2. Press the **WiFi** button on the side of the sports camera, the camera turns on the WiFi function, and the link information of the camera's WiFi will appear on the screen.
3. Find the camera's WiFi on your phone and press the information on the camera screen to connect. After iSmart DV2 on your phone is fully connected, you can use your phone to connect to the camera, file transfer and other operations.



WOLFANG GA300 Q&A (Versione testata)

Q1: Quale app devo scaricare per collegare la mia fotocamera al telefono?

Puoi scaricare l'app iSmart DV2 dal Google Play Store e dall'Apple App Store. l'app WiFi ti consente di controllare la tua fotocamera a distanza dal tuo smartphone.

Q2: Come collegare il telefono alla fotocamera?

1. Scaricare l'applicazione iSmart DV2 sul telefono. L'applicazione può essere trovata tramite Google Store o Apple Store.
2. Premere il pulsante **WiFi** sul lato della videocamera sportiva, la videocamera attiverà la funzione WiFi e sullo schermo appariranno informazioni sul collegamento del WiFi della videocamera.
3. Trovare la fotocamera WiFi sul tuo telefono e premere le informazioni sullo schermo della fotocamera per connetterti. Dopo iSmart DV2 sul tuo telefono, dopo la connessione, puoi usare il tuo telefono per controllare la fotocamera, trasferire file e altre operazioni.



 
WOLFANG GA300 Q&A Versión de texto

Q1: ¿Qué aplicación necesito descargar para conectar mi cámara a mi teléfono?

Puede descargar la aplicación iSmart DV2 desde Google Play Store y Apple App Store. la aplicación WiFi le permite controlar su cámara de forma remota desde su teléfono inteligente.

Q2: ¿Cómo conectar el teléfono a la cámara?

1. Descargar la aplicación iSmart DV2 en su teléfono. La aplicación se puede encontrar a través de Google Store o Apple Store.
2. Presionar el botón **WiFi** en el costado de la cámara deportiva, la cámara activará la función WiFi y la información del enlace del WiFi de la cámara aparecerá en la pantalla.
3. Encontrar la cámara WiFi en su teléfono y presionar la información en la pantalla de la cámara para conectar. Después de iSmart DV2 en su teléfono después de la conexión, puede usar su teléfono para controlar la cámara, transferir archivos y otras operaciones.

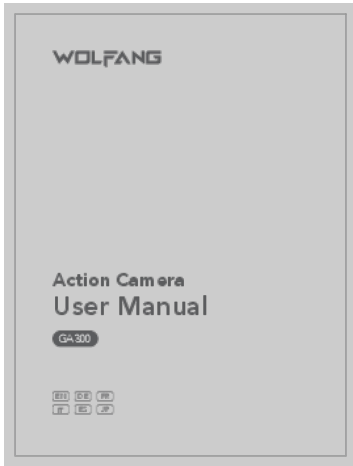


[\[pdf\]](#) User Manual Installation Guide Specifications Guide Accessories Diagram

WOLFANG GA300 V2 1 0 2022 6 9 Manuale utente Action Cam 4K 60FPS 20MP WiFi EIS Camera con schermo tattile 8X Zoom Fotocamera Impermeabile 40M Subacquea Videocamera Mic Esterno Telecomando 2x1350mAh Batterie e Accessori Amazon it Elettronica B1bXvXEzPFL m media amazon images I |||

Action Camera User Manual **GA300** EN DE FR IT ES JP Installation Guide Using the Dust-Proof Cover Charging the Battery The battery charging steps are as below:

Note: The outlet battery charger is not included. TF Card Installation Format TF Card Installation 1. The camera ONLY supports a U3 TF...

 lang:en **score:27** filesize: 3.36 M page_count: 64 document date: 2022-06-13

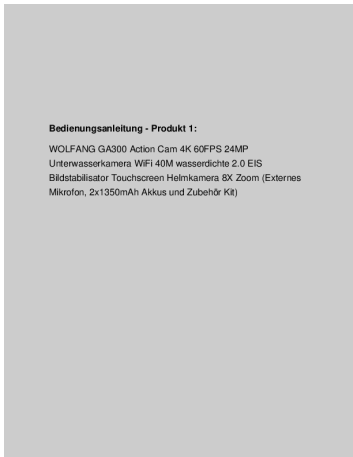


[\[pdf\]](#) User Manual Installation Guide Specifications Guide Diagram

WOLFANG GA300 V2 1 2022 6 9 ai B1bH3Db2drLm media amazon images I B1bH3Db2drL |||

Bedienungsanleitung - Produkt 1: WOLFANG **GA300** Action Cam 4K 60FPS 24MP Unterwasserkamera WiFi 40M wasserdichte 2.0 EIS Bildstabilisator Touchscreen Helmkamera 8X Zoom Externes Mikrofon, 2x1350mAh Akkus und Zubehr Kit Action Camera User Manual **GA300** EN DE FR IT ES JP Installation Guide Using t...

 
lang:en **score:25** filesize: 3.07 M page_count: 61 document date: 2022-06-13

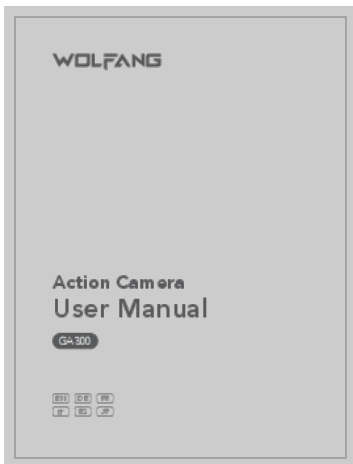

[WOLFANG GA300 Action Camera User Manual](#)

Comprehensive user manual for the WOLFANG GA300 Action Camera, covering installation, TF card usage, product diagrams, specifications, and operational guides for optimal performance.

 lang:en **score:24** filesize: 772.49 K page_count: 64 document date: 2022-09-06

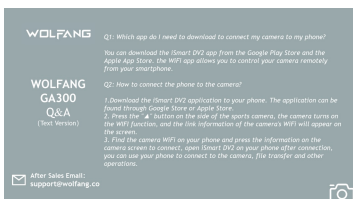


[\[pdf\]](#)

71SiPxx0V Lm media amazon images I L |||

Q1: Which app do I need to download to connect my camera to my phone You can download the iSmart DV2 app from the Google Play Store and the Apple App Store. the WiFi app allows you to control your camera remotely from your smartphone.


WOLFANG Q2: How to connect the phone to the camera **GA300** Q ...

 lang:en **score:22** filesize: 163.33 K page_count: 4 document date: 2022-09-23

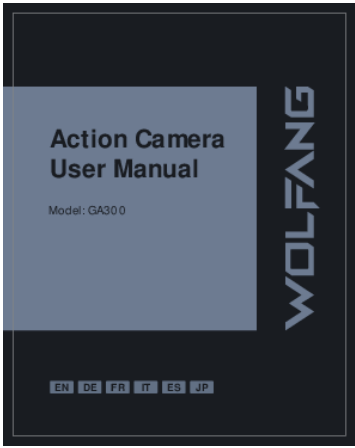

[WOLFANG GA300 Action Camera User Manual](#)

 User manual for the WOLFANG GA300 action camera, detailing installation, specifications, button functions, indicator lights, and important usage precautions.
lang:en score:21 filesize: 6.87 M page_count: 64 document date: 2024-08-09

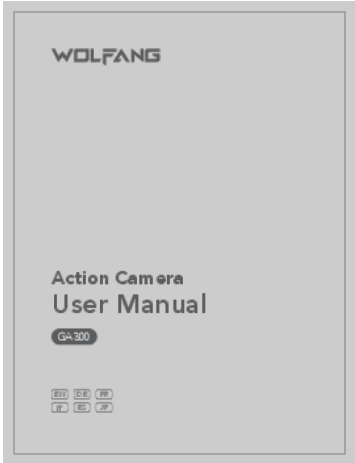

[WOLFANG GA300 Action Camera User Manual](#)

Comprehensive user manual for the WOLFANG GA300 action camera, covering installation, charging, TF card usage, product diagrams, specifications, and mode operations.
lang:en score:20 filesize: 3.07 M page_count: 60 document date: 2022-09-16



[\[pdf\]](#)

Untitled Bekijk de CE markering WOLFANG GA300 Action Camera 4K 60FPS Waterdicht 40M
Onderwater EIS Stabilisatie bol original media s 3JgGyMWLLqOr |||
...
lang:en score:13 filesize: 42.83 K page_count: 1 document date: 2022-09-06

